

Metal Wall & Roof Systems
North America





Morin Classic Series Metal Wall System Installation Details

Innovative Single Element Building Envelope
Solution



Morin[®]
By Kingspan


Vertical Installation

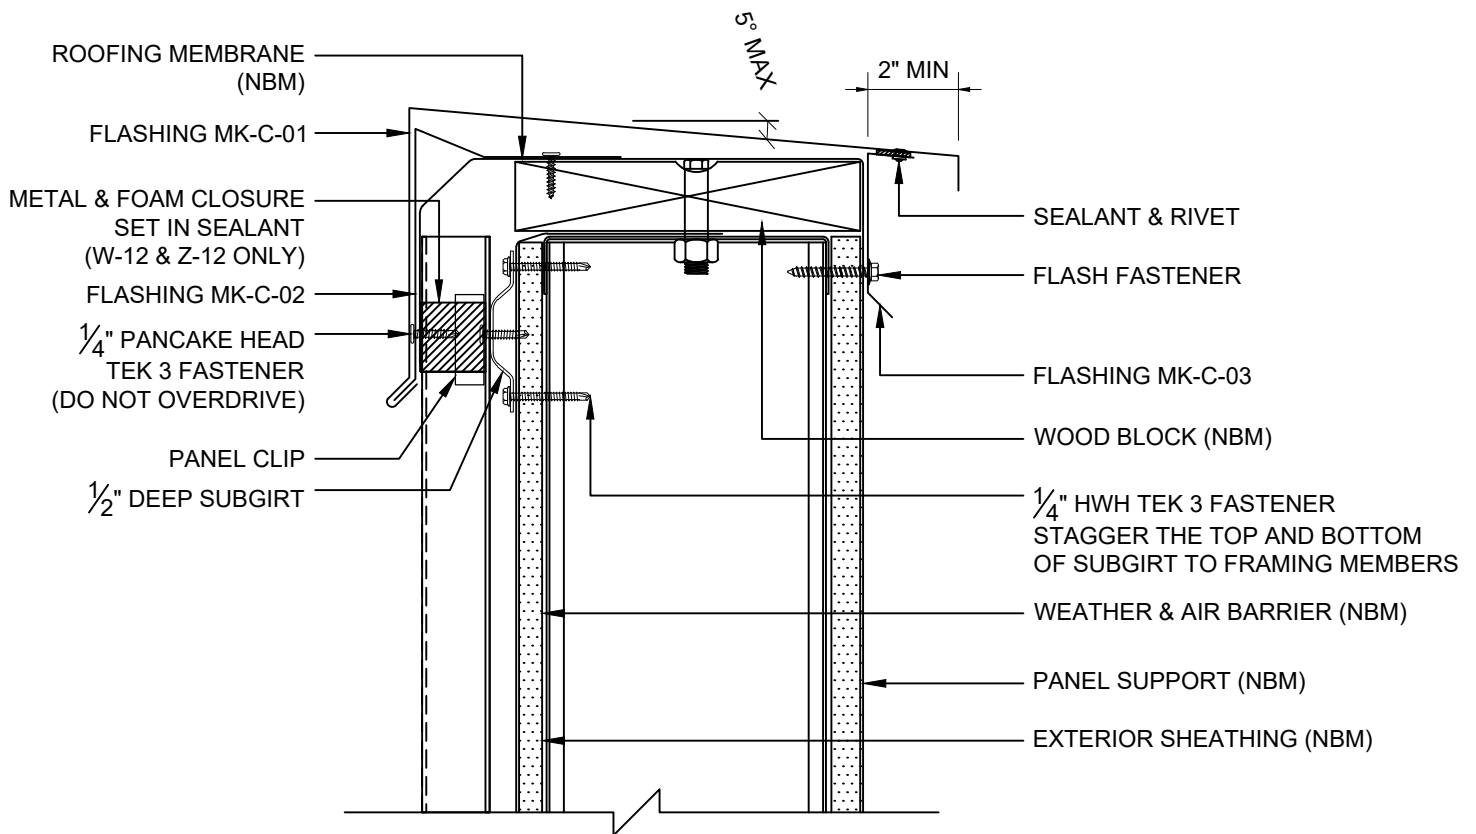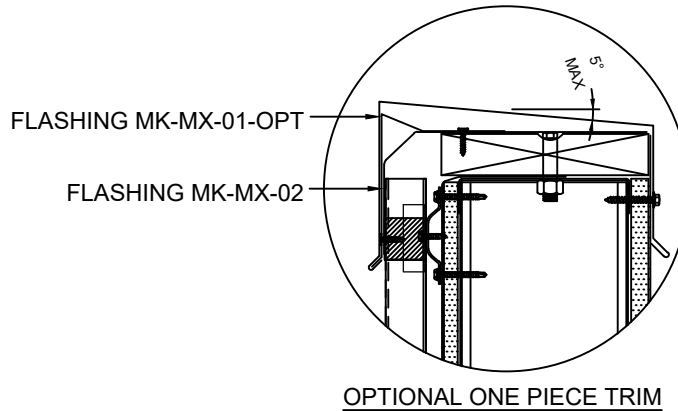

COPING DETAIL

*NBM=(NOT BY MORIN)


Vertical Installation

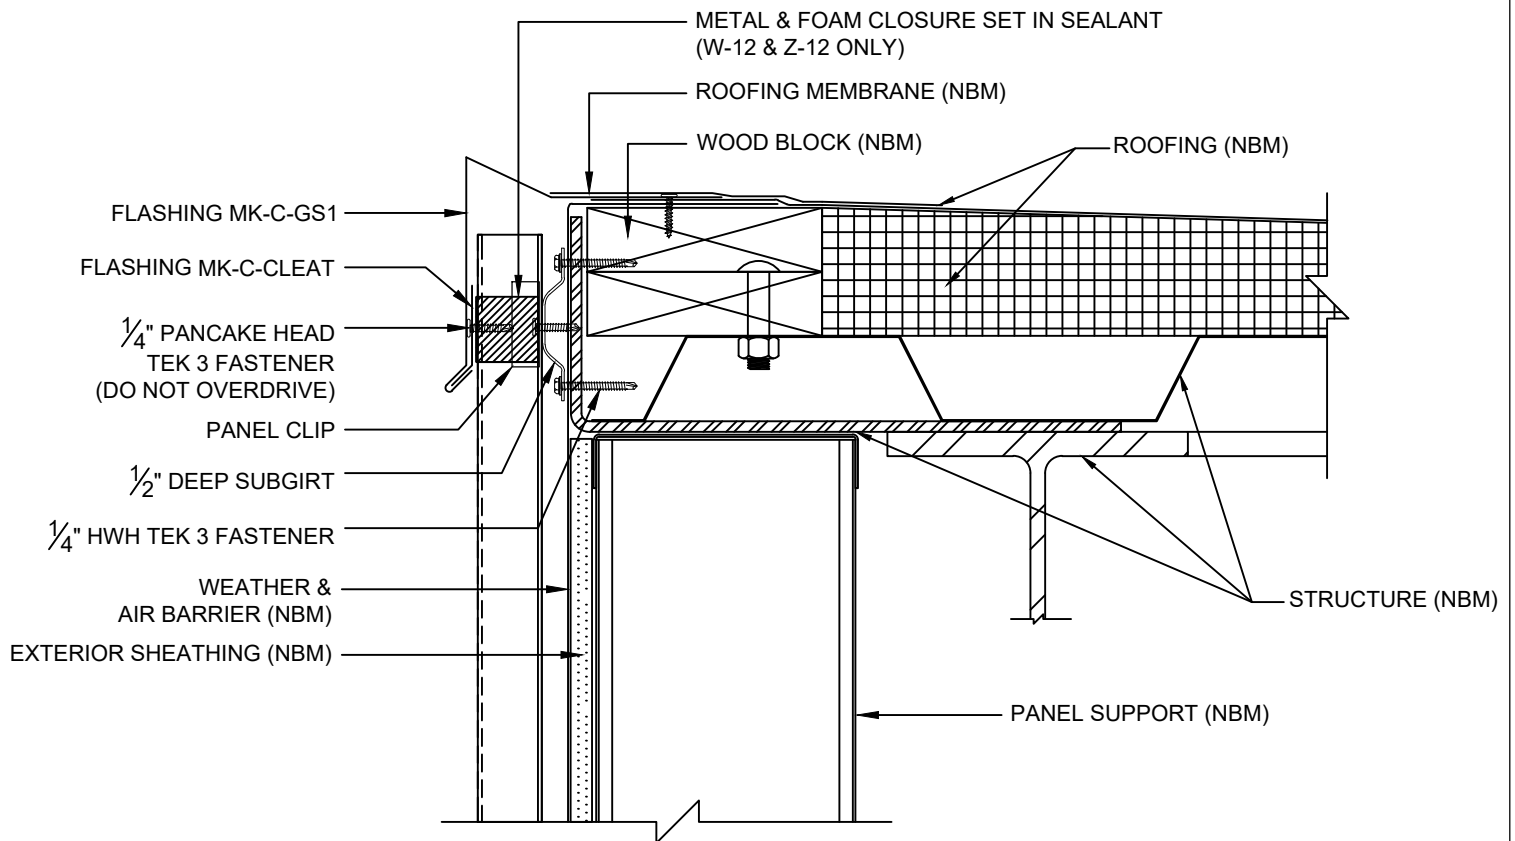

GRAVELSTOP DETAIL

*NBM=(NOT BY MORIN)


Vertical Installation

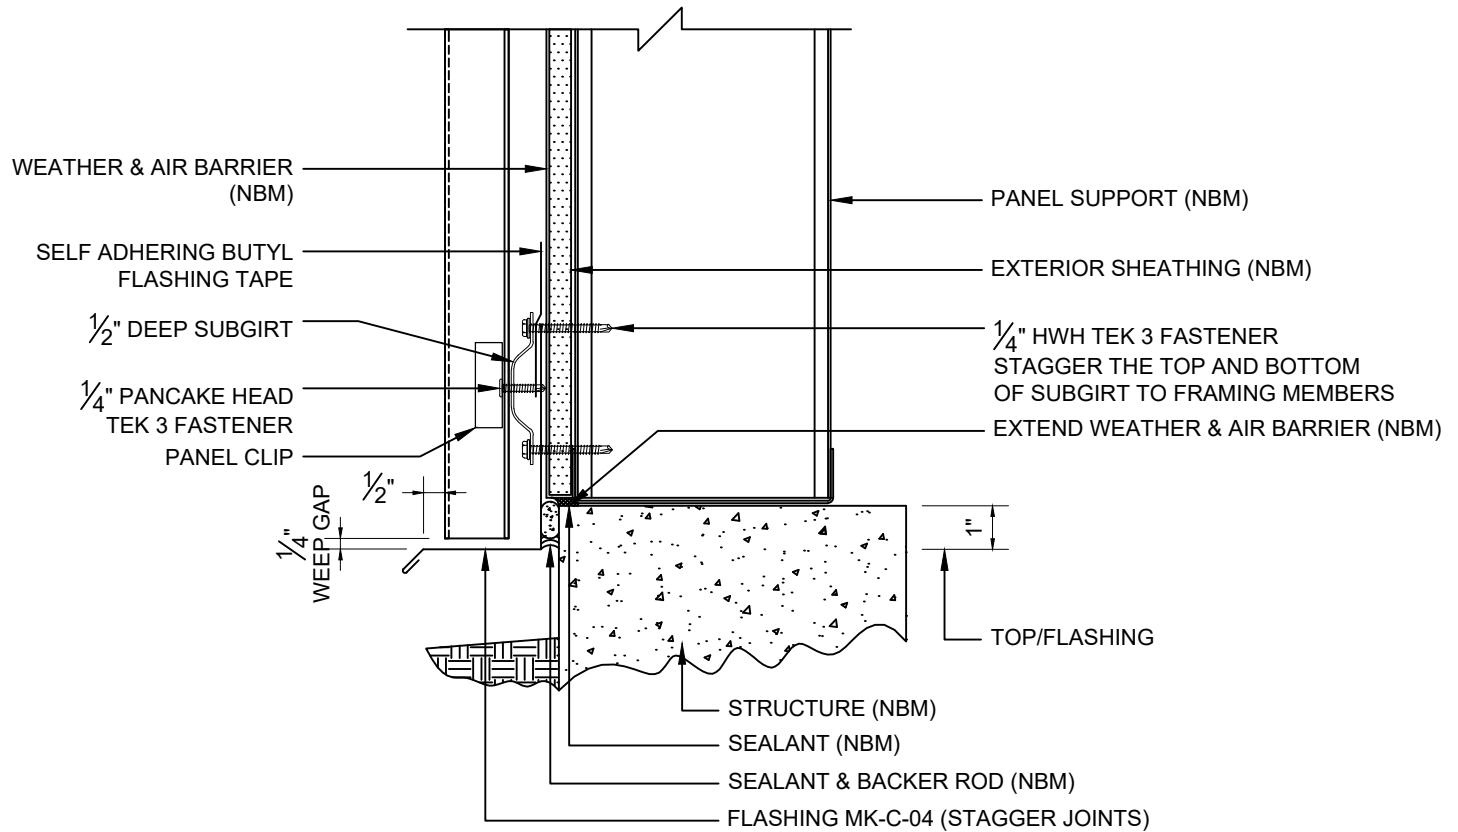

BASE AT CURB OR EDGE OF SLAB

*NBM=(NOT BY MORIN)


Vertical Installation

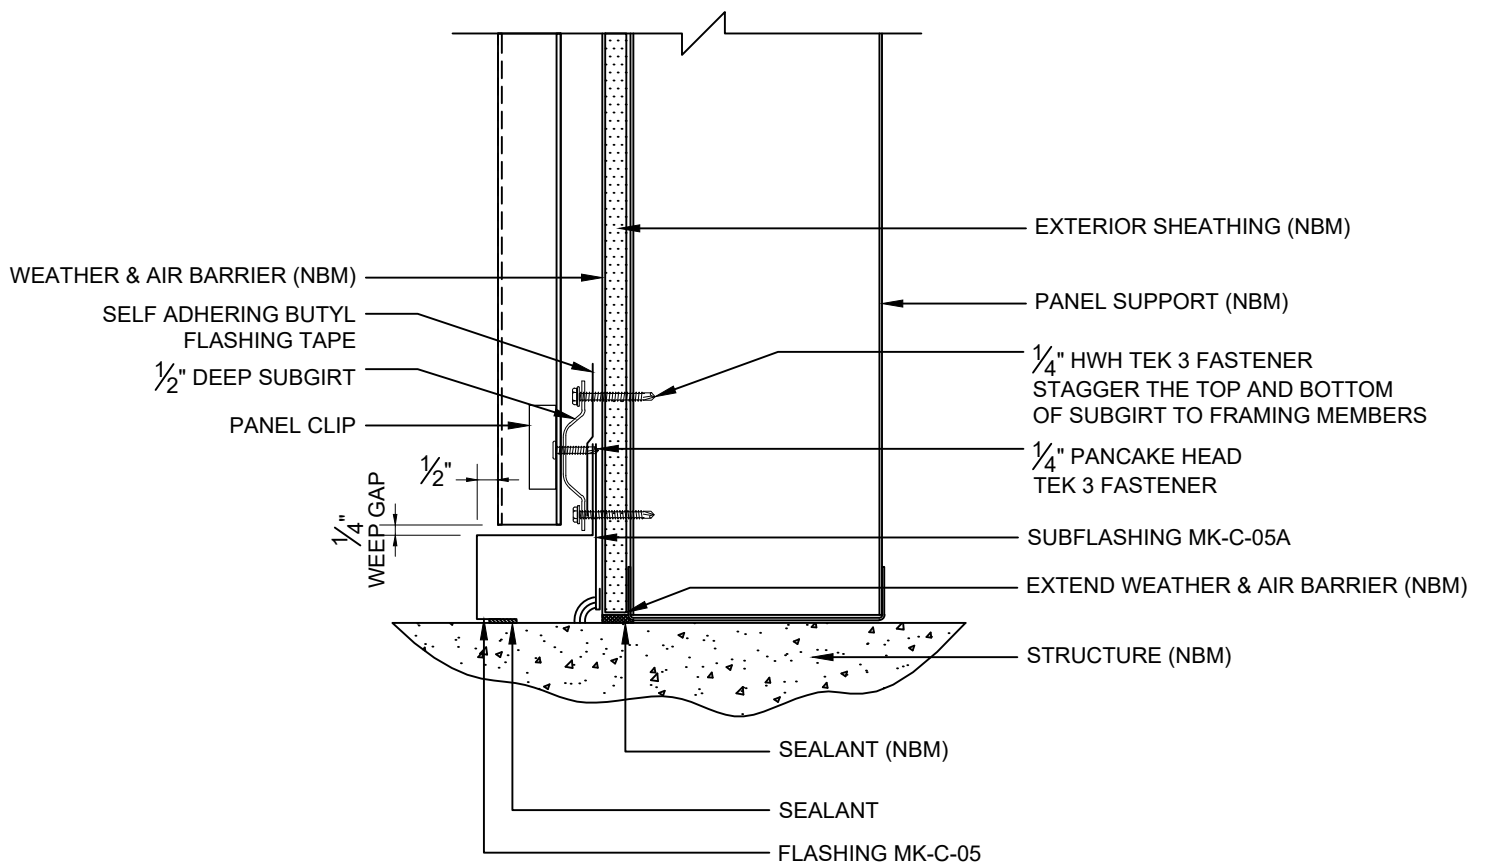

BASE AT SLAB DETAIL

*NBM=(NOT BY MORIN)


Vertical Installation

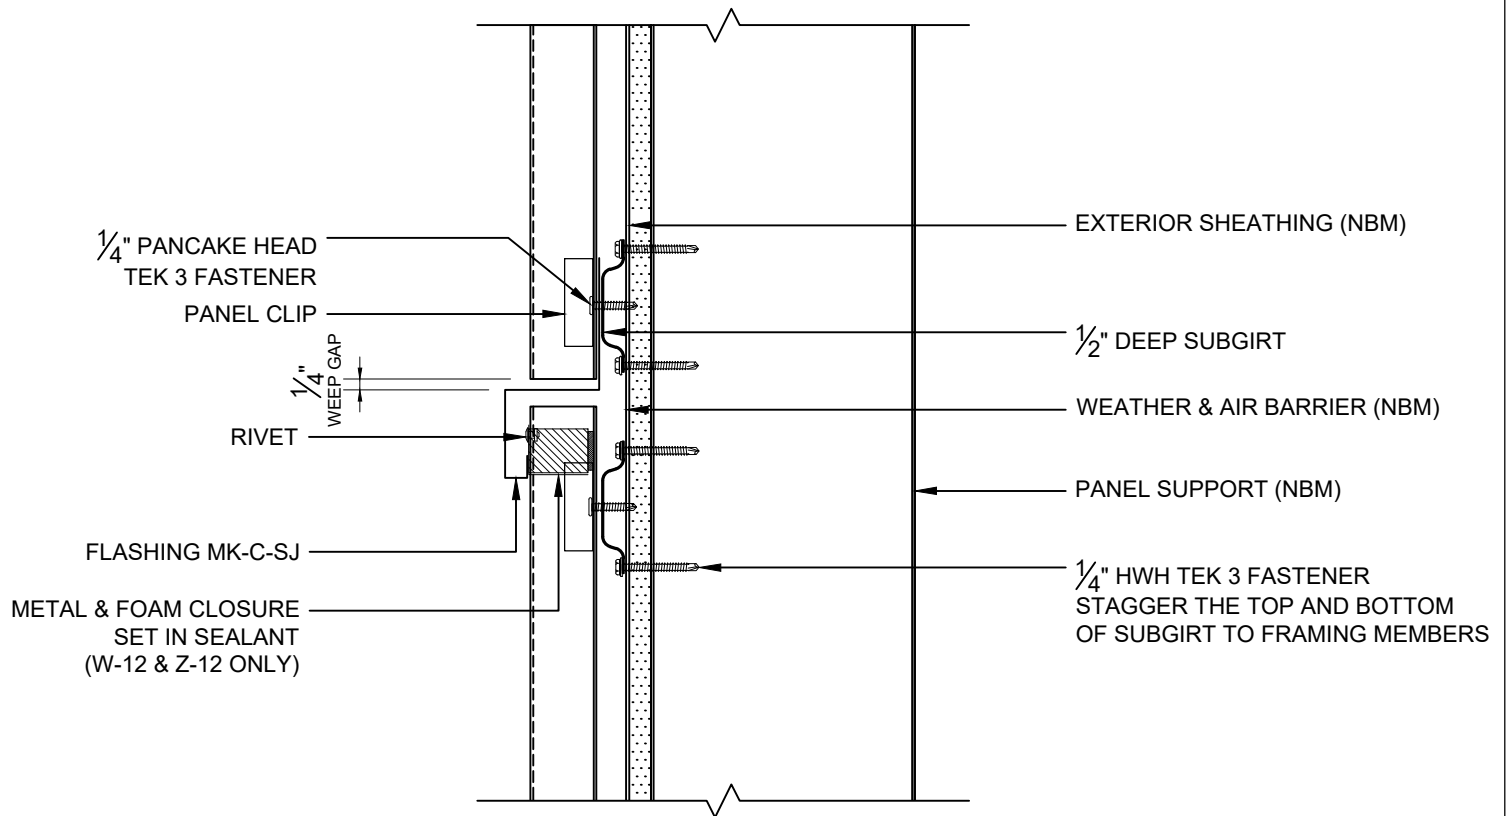

STACK JOINT DETAIL

*NBM=(NOT BY MORIN)



Vertical Installation

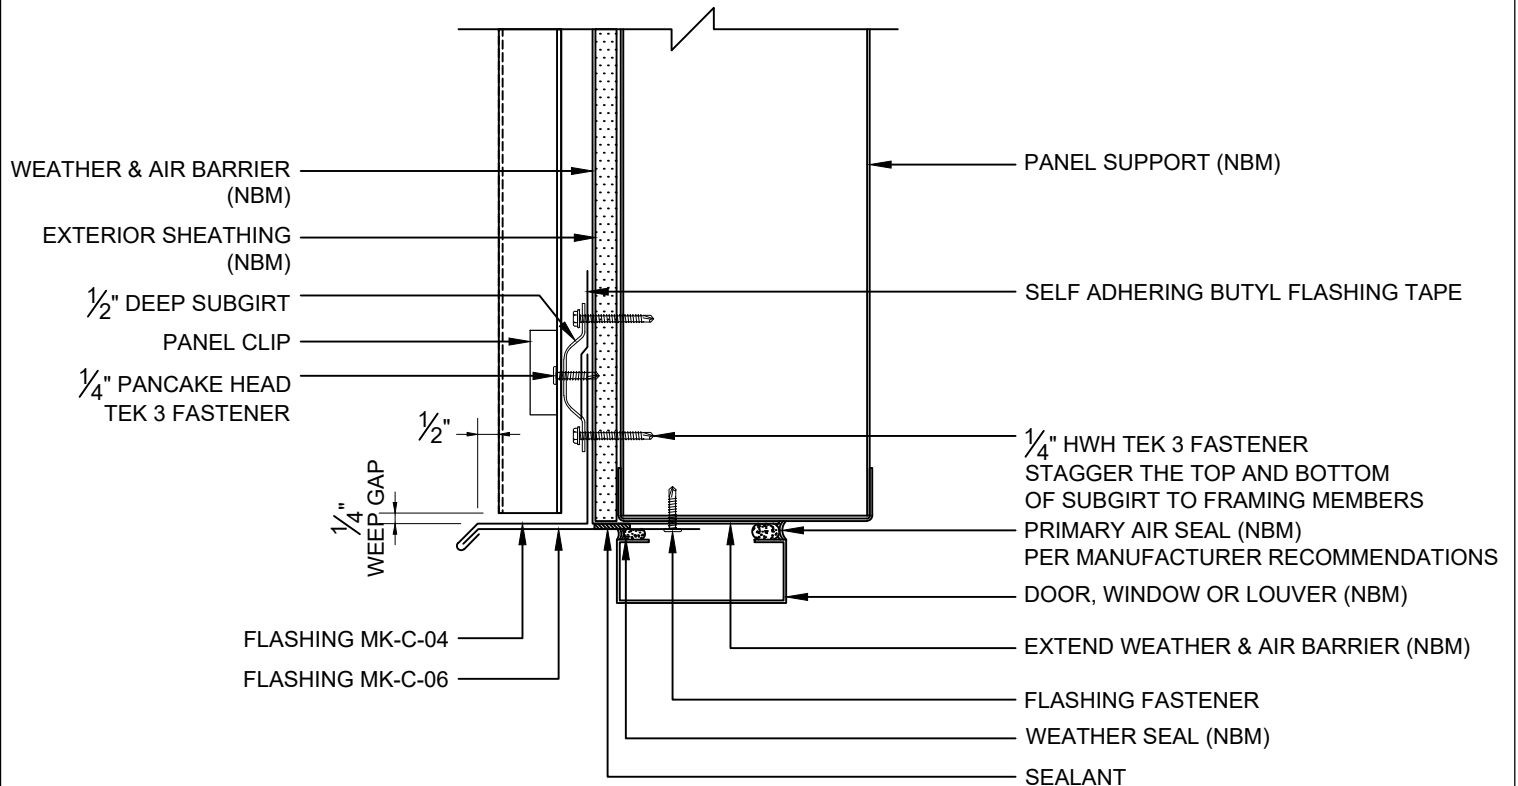

DOOR/WINDOW/LOUVER HEAD DETAIL

*NBM=(NOT BY MORIN)


Vertical Installation

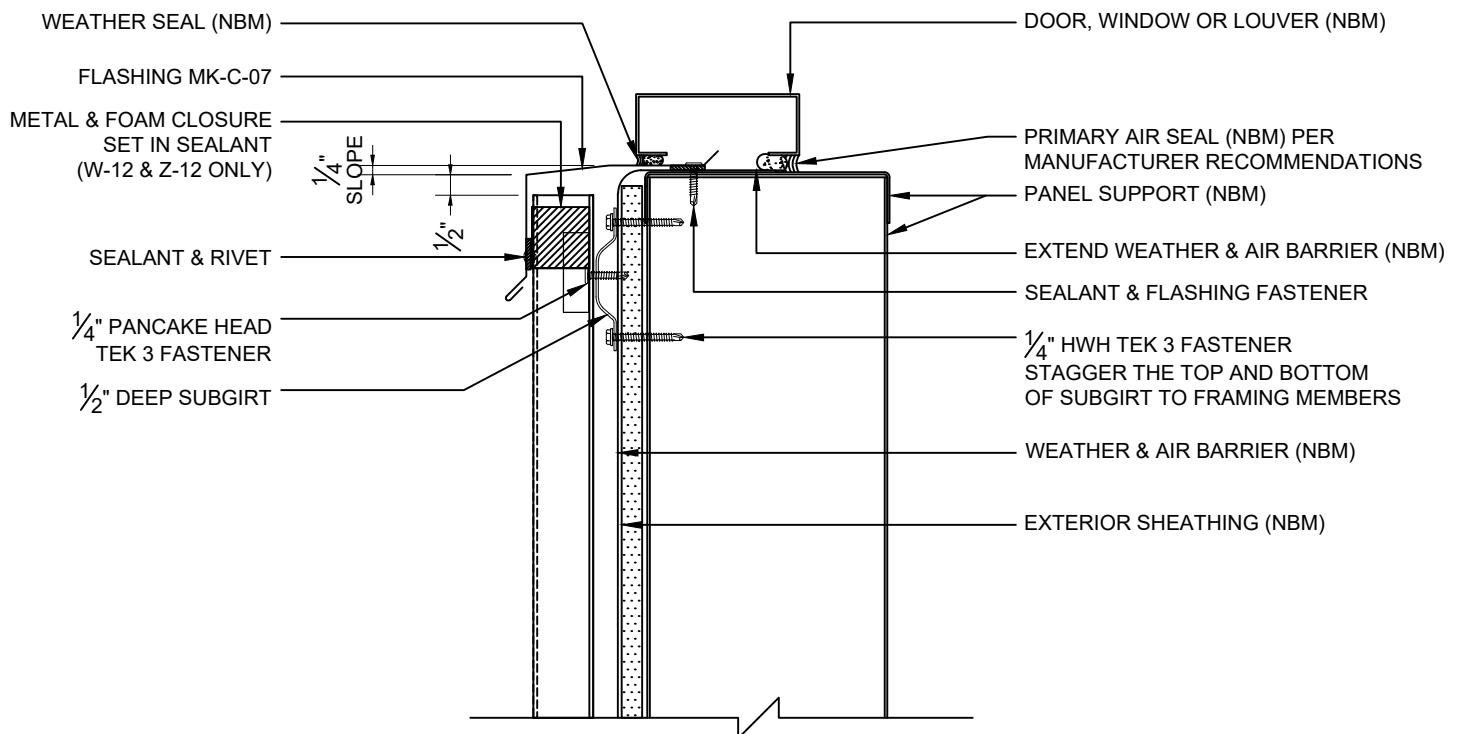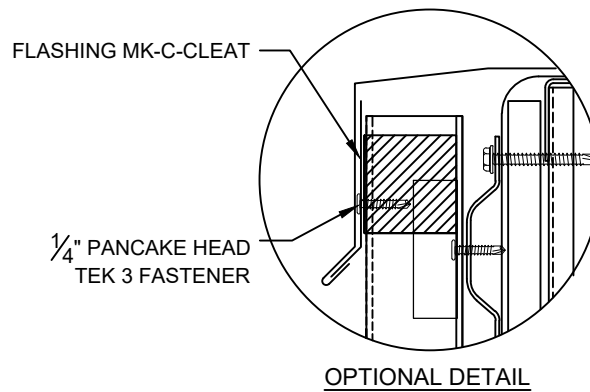

DOOR/WINDOW/LOUVER SILL

*NBM=(NOT BY MORIN)


Vertical Installation

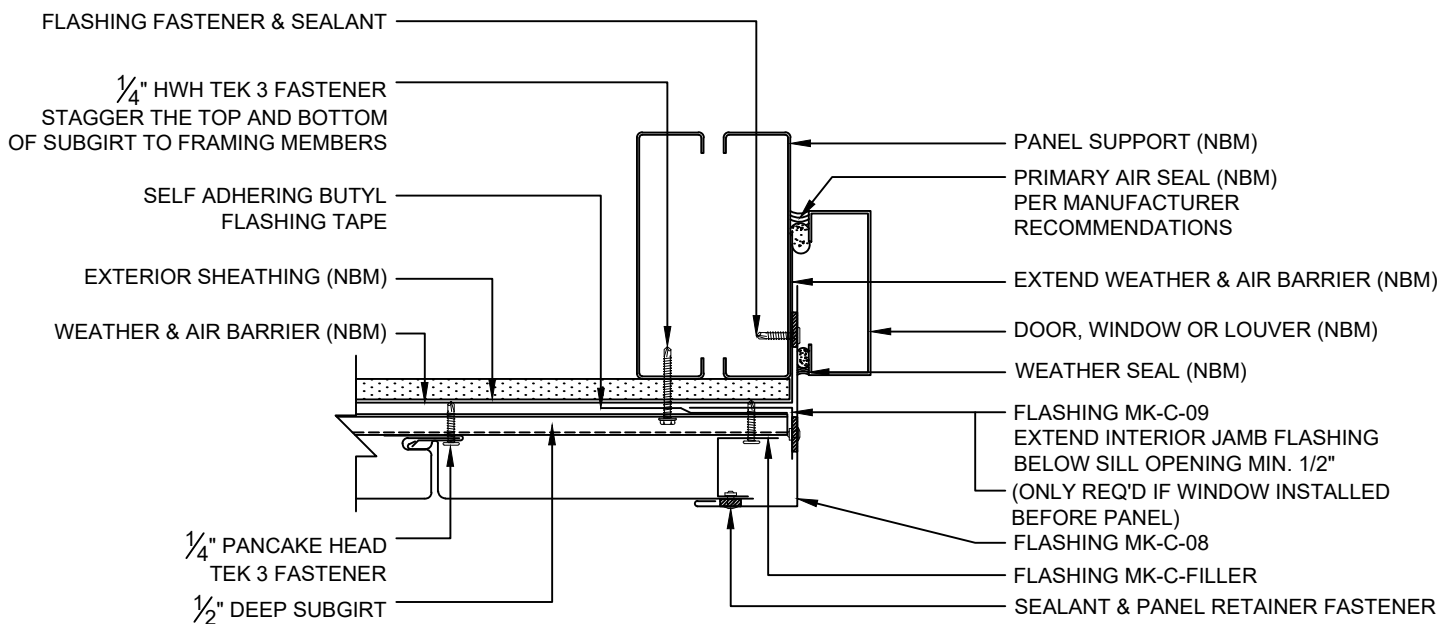

DOOR/WINDOW/LOUVER JAMB DETAIL (F-12)

*NBM=(NOT BY MORIN)


Vertical Installation

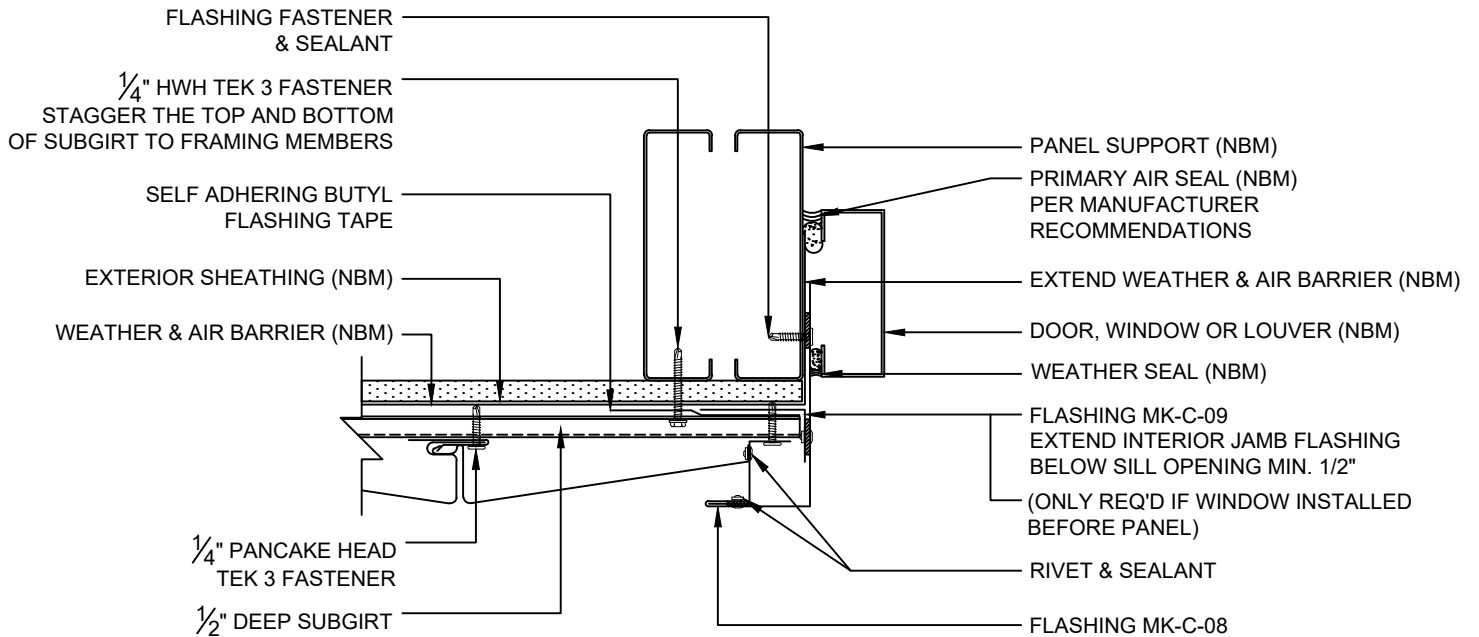

DOOR/WINDOW/LOUVER JAMB DETAIL (W-12)

*NBM=(NOT BY MORIN)


Vertical Installation

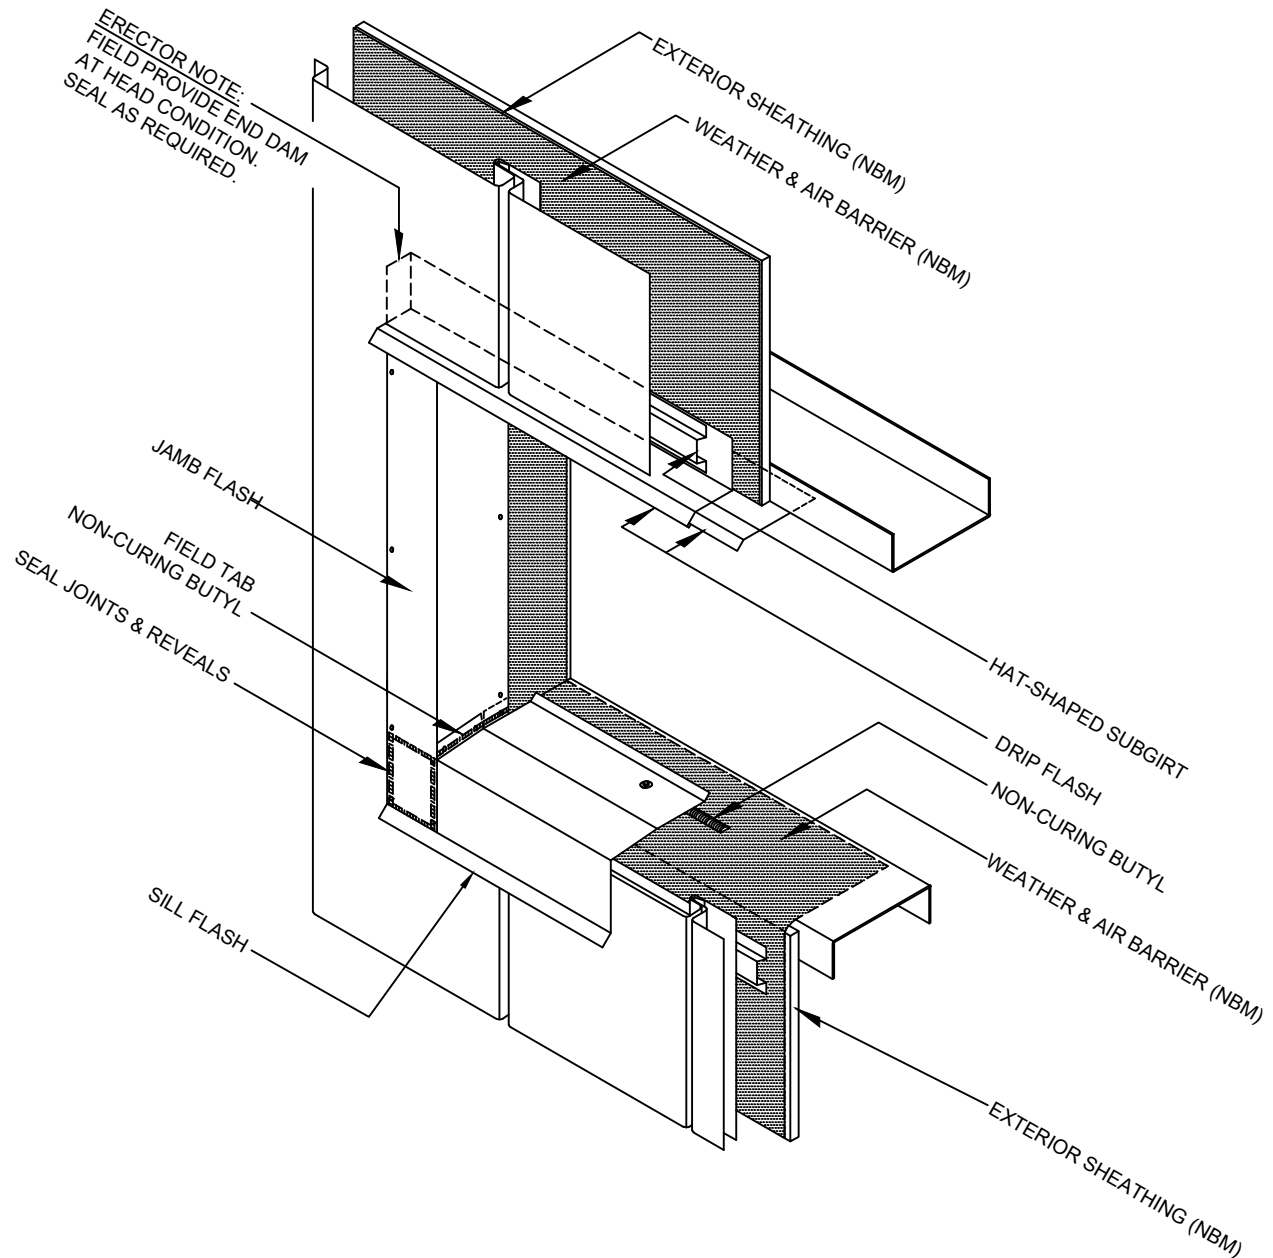

INTERSECTION OF HEAD, SILL & JAMB

*NBM=(NOT BY MORIN)


Vertical Installation

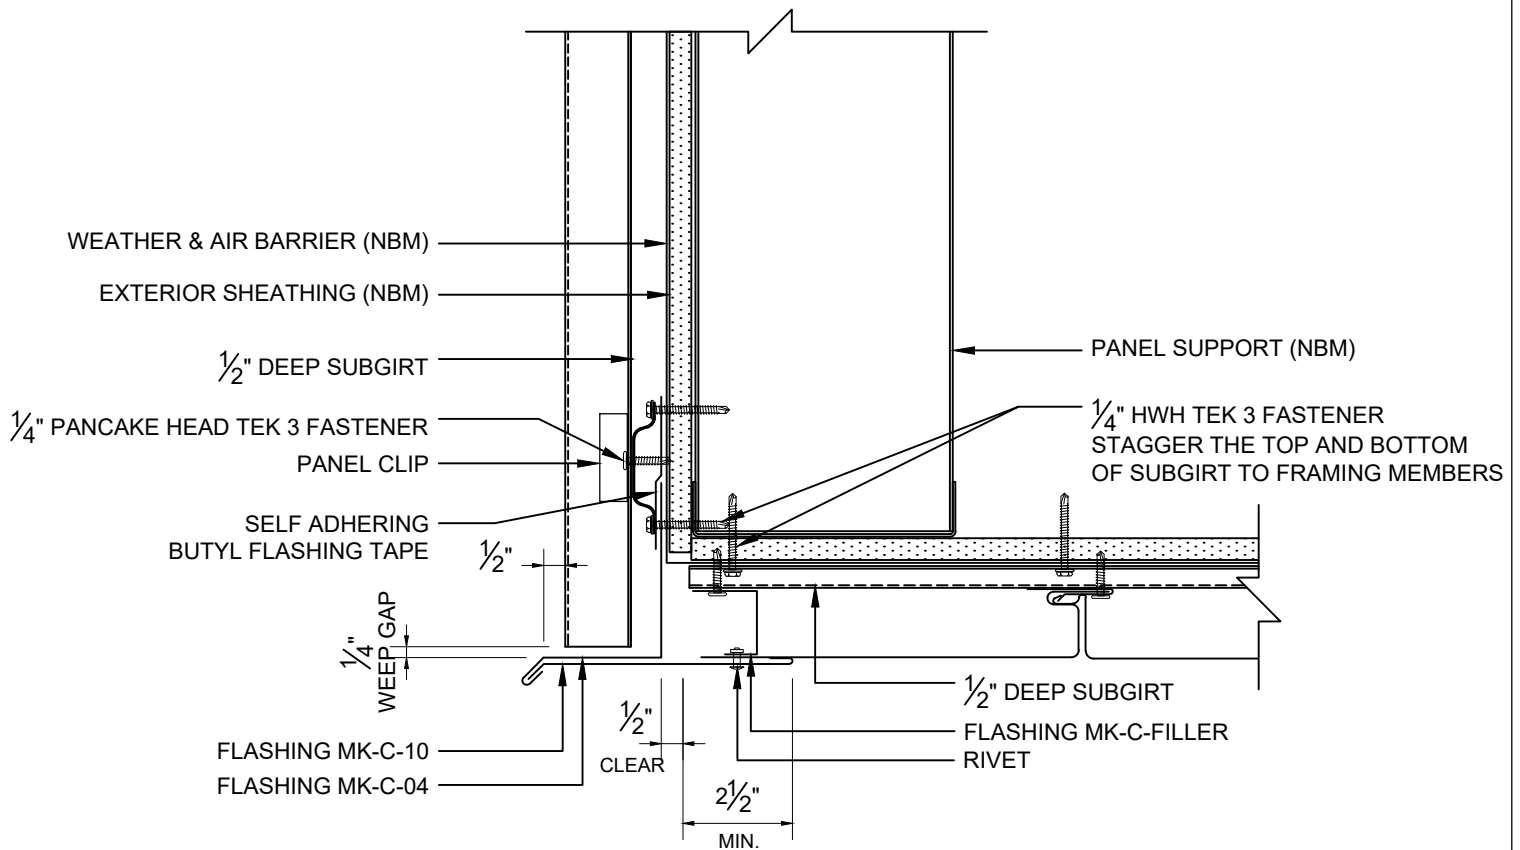

FRONT SOFFIT DETAIL (F-12)

*NBM=(NOT BY MORIN)


Vertical Installation

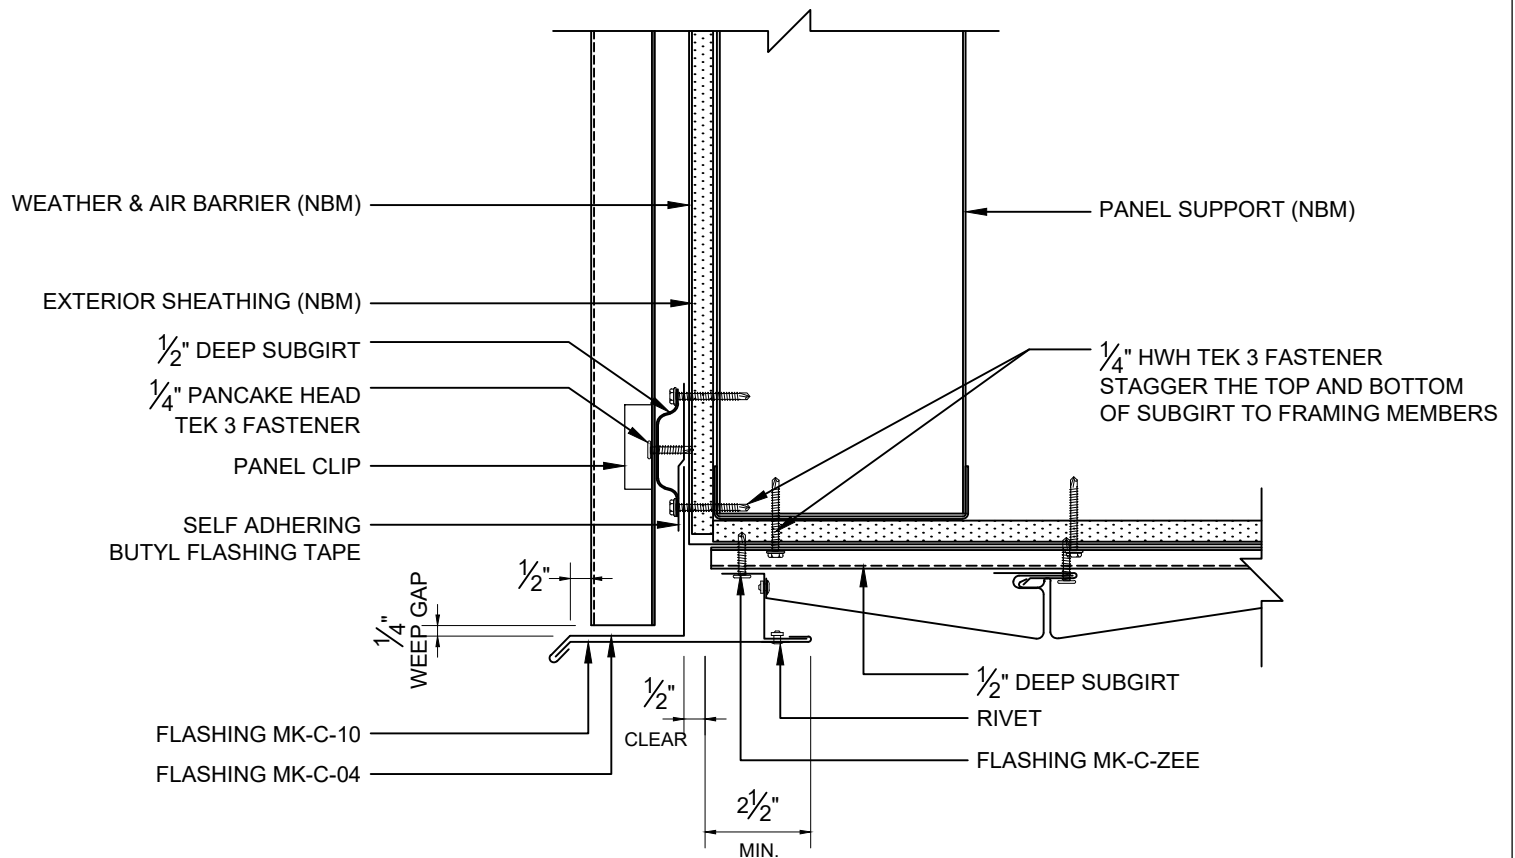

FRONT SOFFIT DETAIL (W-12)

*NBM=(NOT BY MORIN)


Vertical Installation

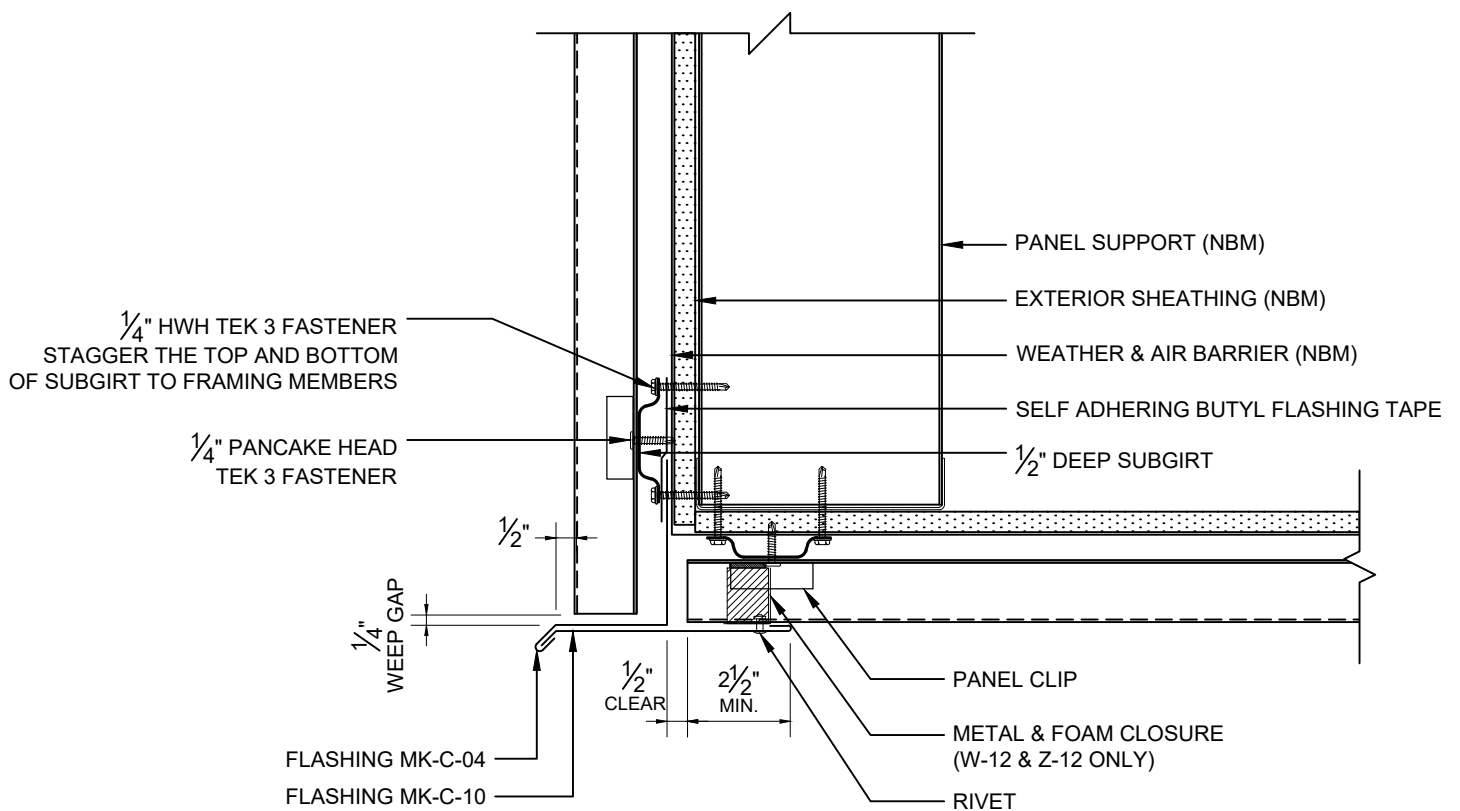

FRONT SOFFIT DETAIL

*NBM=(NOT BY MORIN)


Vertical Installation

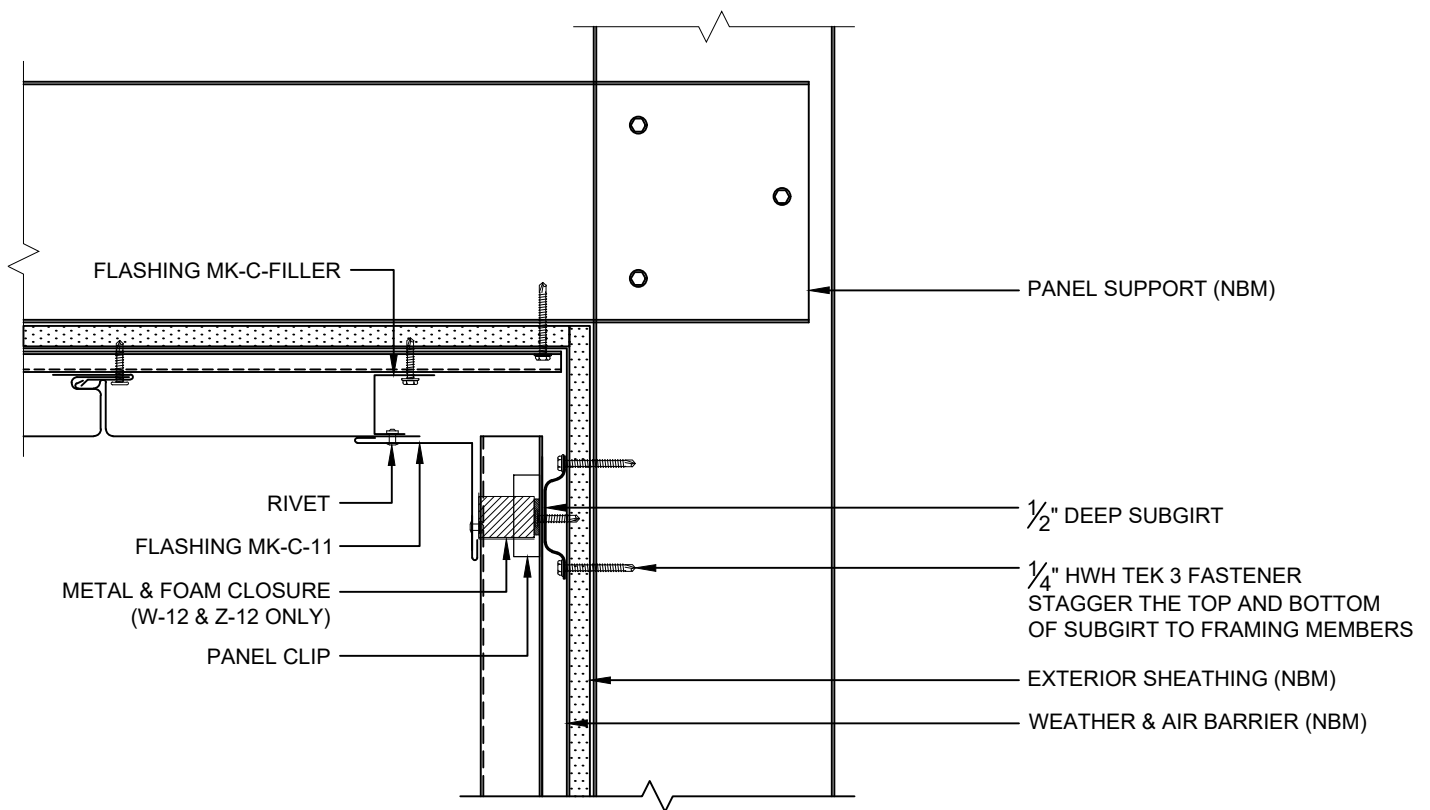

BACK SOFFIT DETAIL (F-12)

*NBM=(NOT BY MORIN)


Vertical Installation

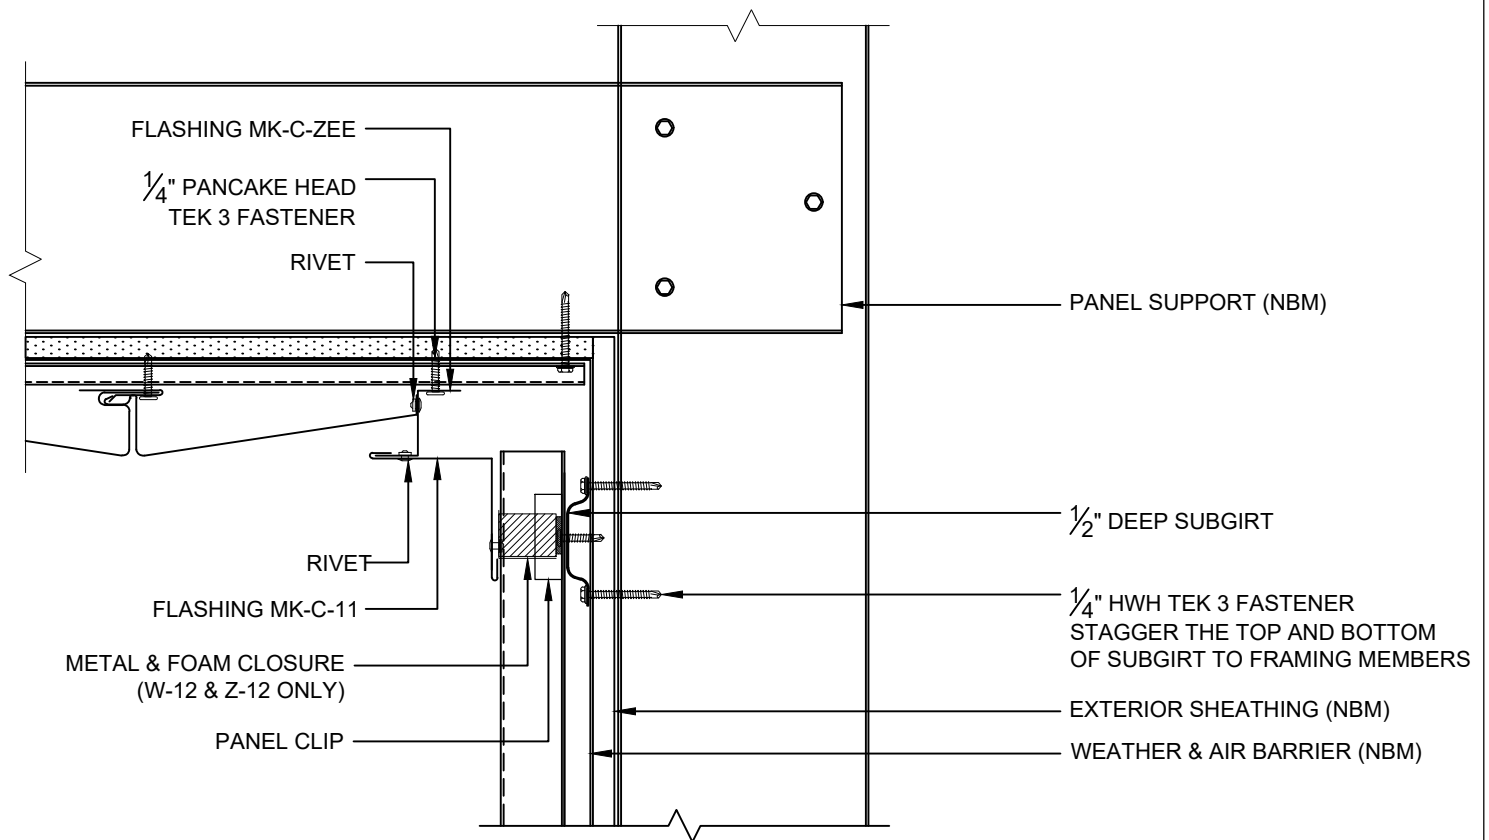

BACK SOFFIT DETAIL (W-12)

*NBM=(NOT BY MORIN)


Vertical Installation

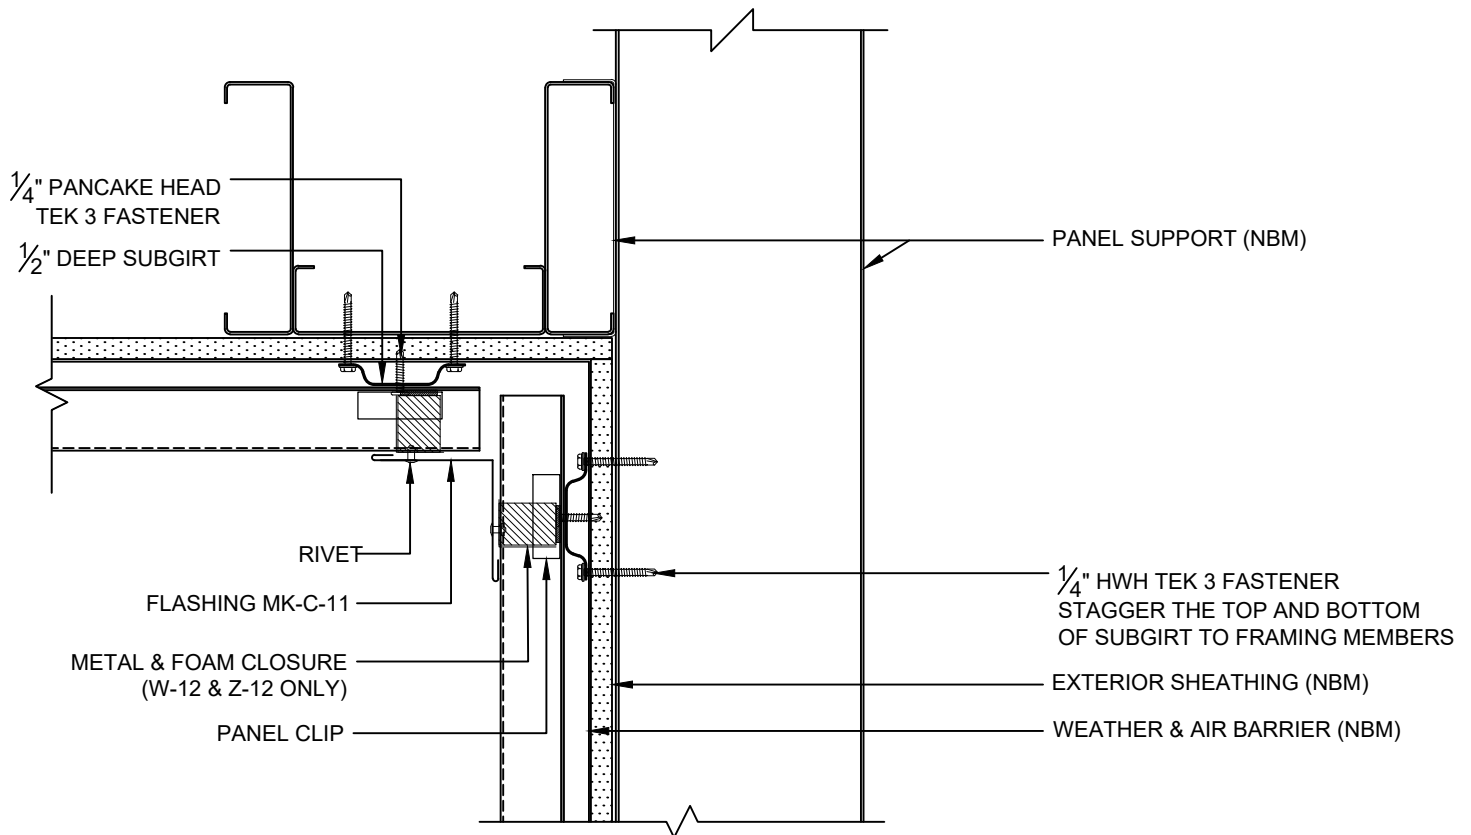

BACK SOFFIT DETAIL

*NBM=(NOT BY MORIN)


Vertical Installation

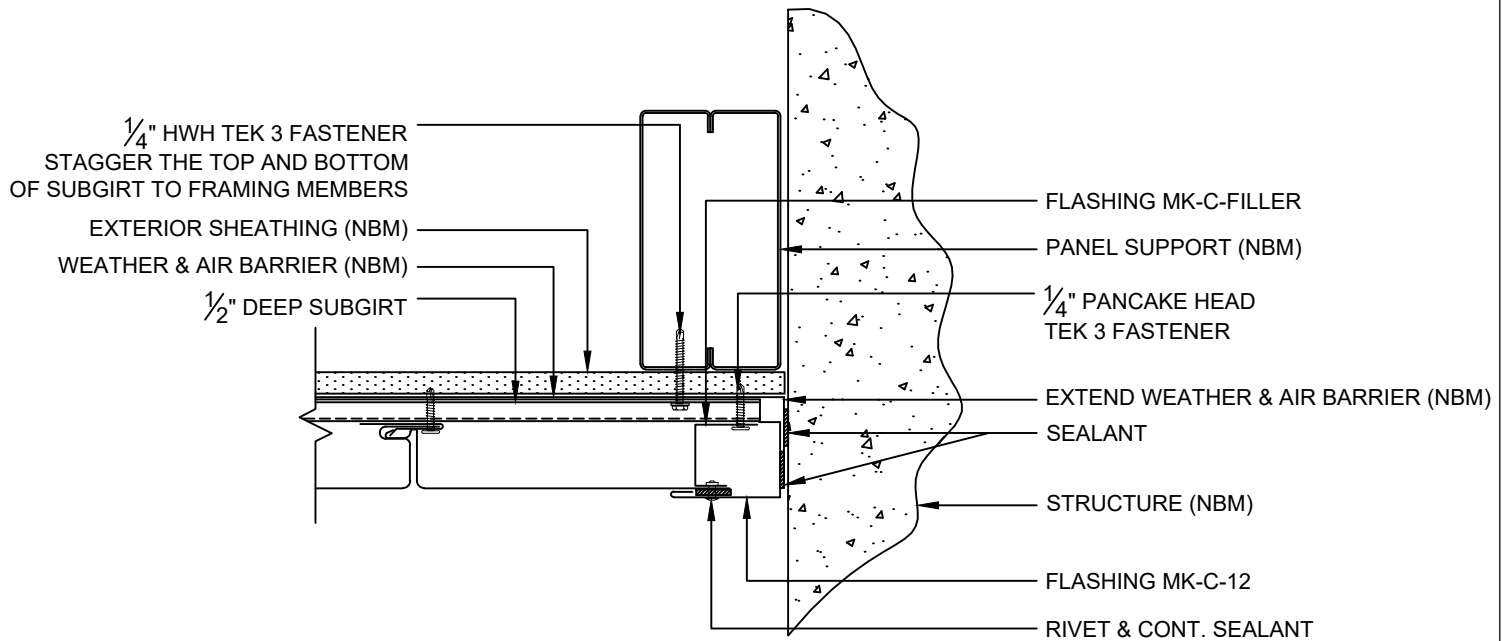

ENDWALL DETAIL (F-12)

*NBM=(NOT BY MORIN)


Vertical Installation

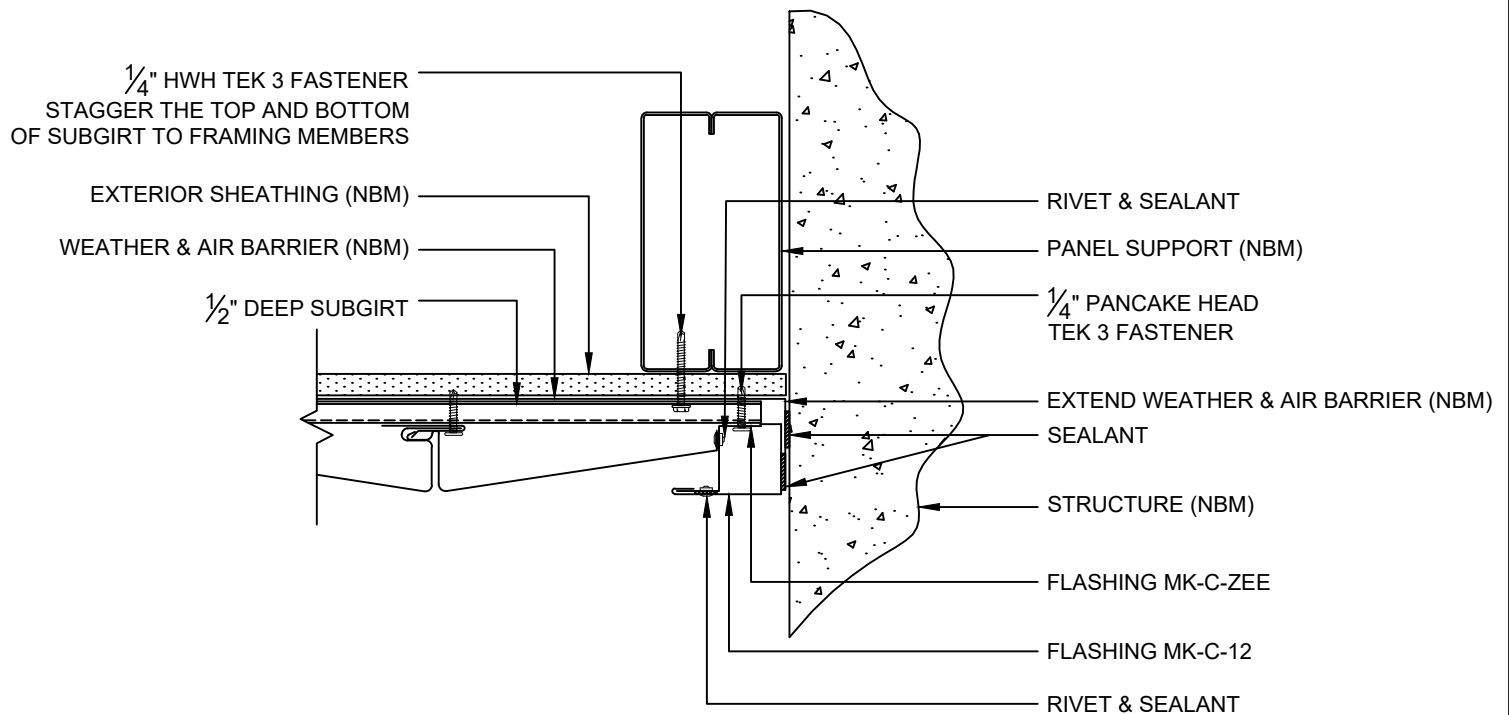

ENDWALL DETAIL (W-12)

*NBM=(NOT BY MORIN)


Vertical Installation

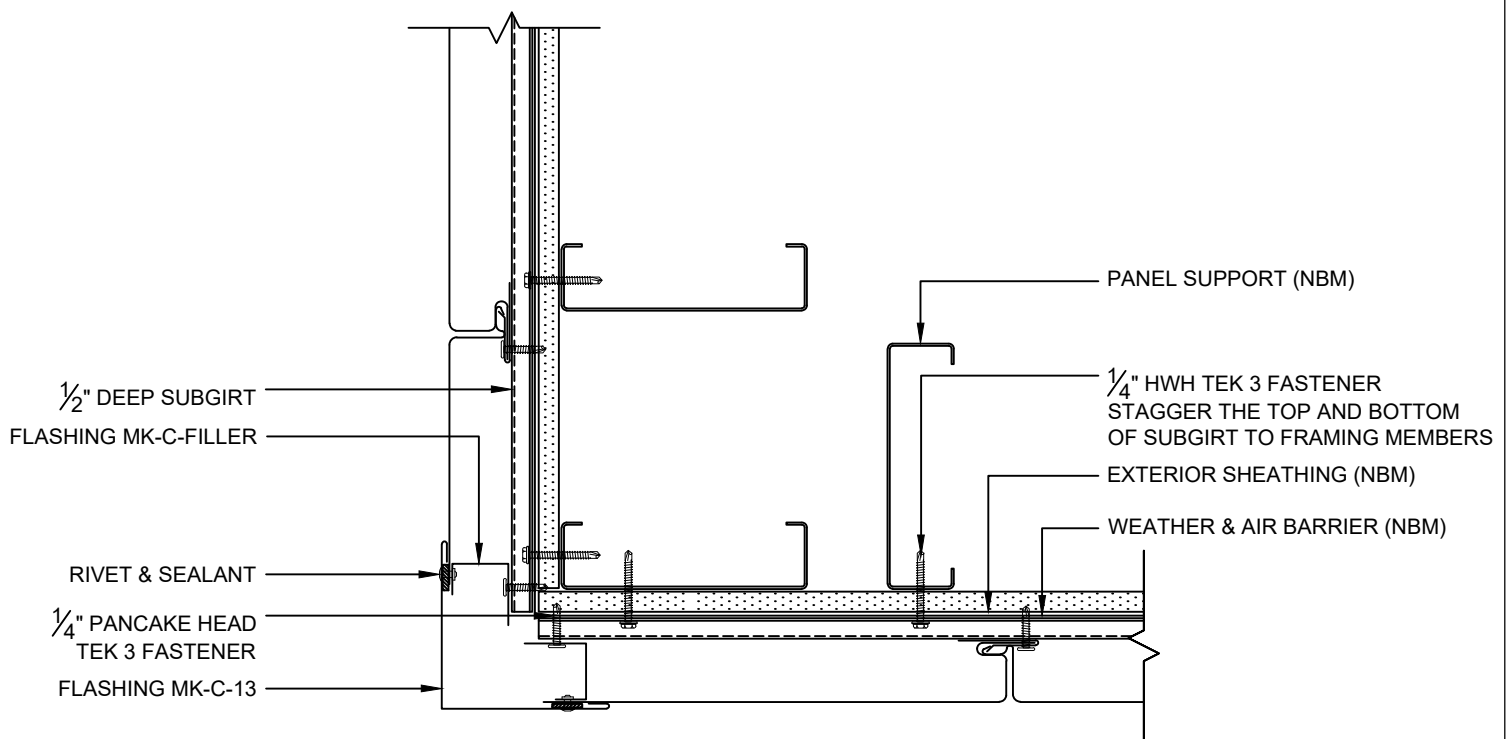

OUTSIDE CORNER DETAIL (F-12)

*NBM=(NOT BY MORIN)


Vertical Installation

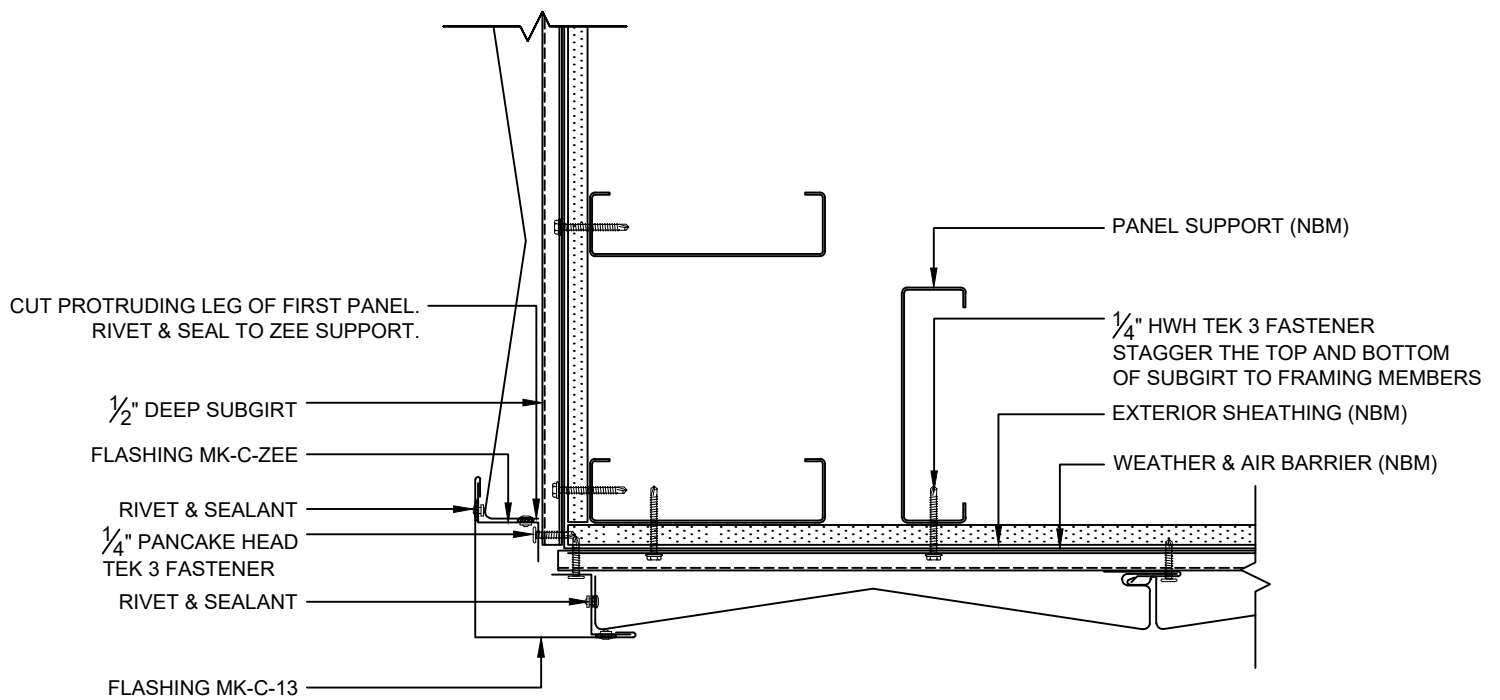

OUTSIDE CORNER DETAIL (W-12)

*NBM=(NOT BY MORIN)


Vertical Installation

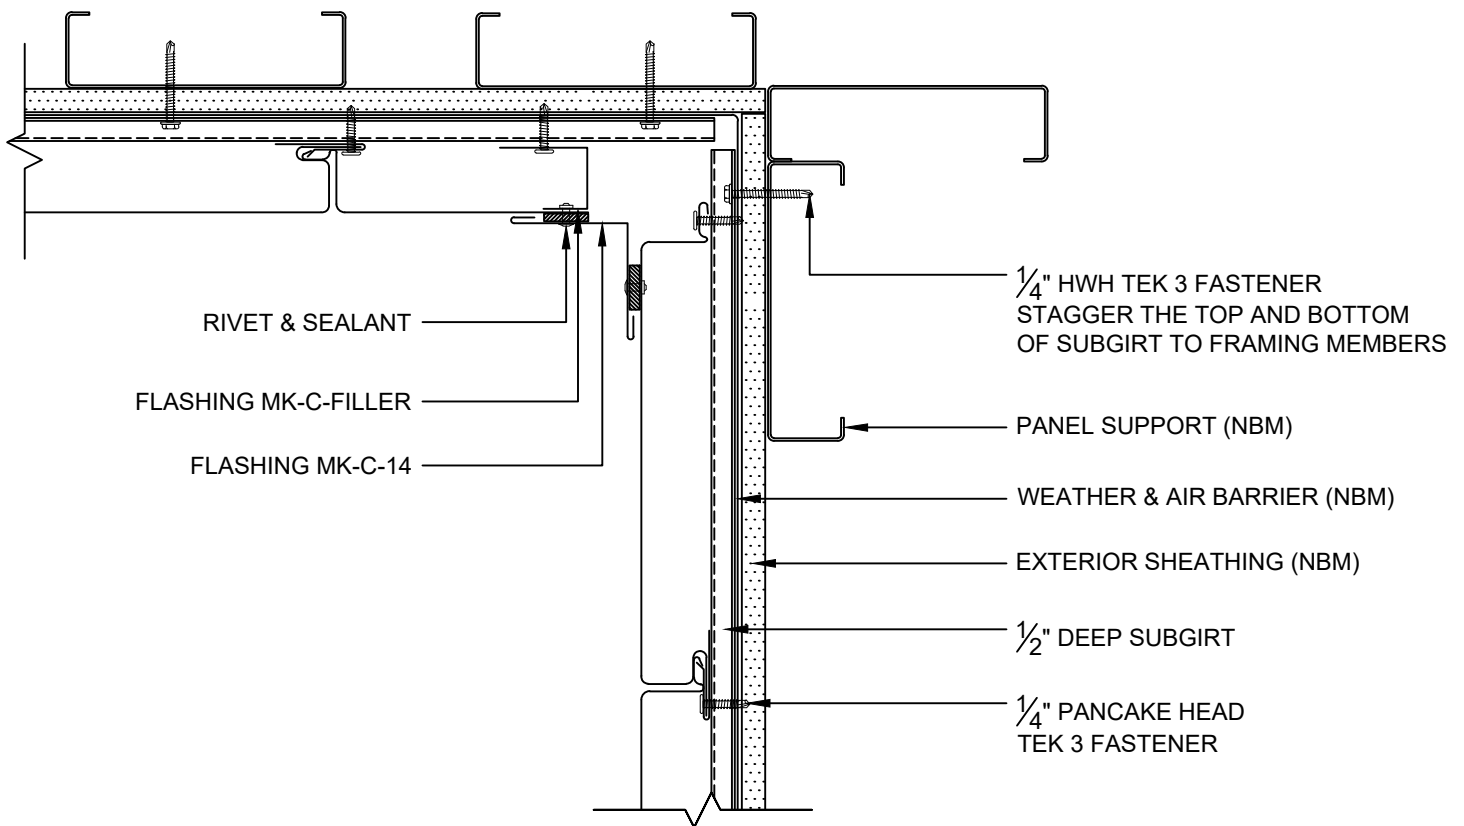

INSIDE CORNER DETAIL (F-12)

*NBM=(NOT BY MORIN)




Vertical Installation

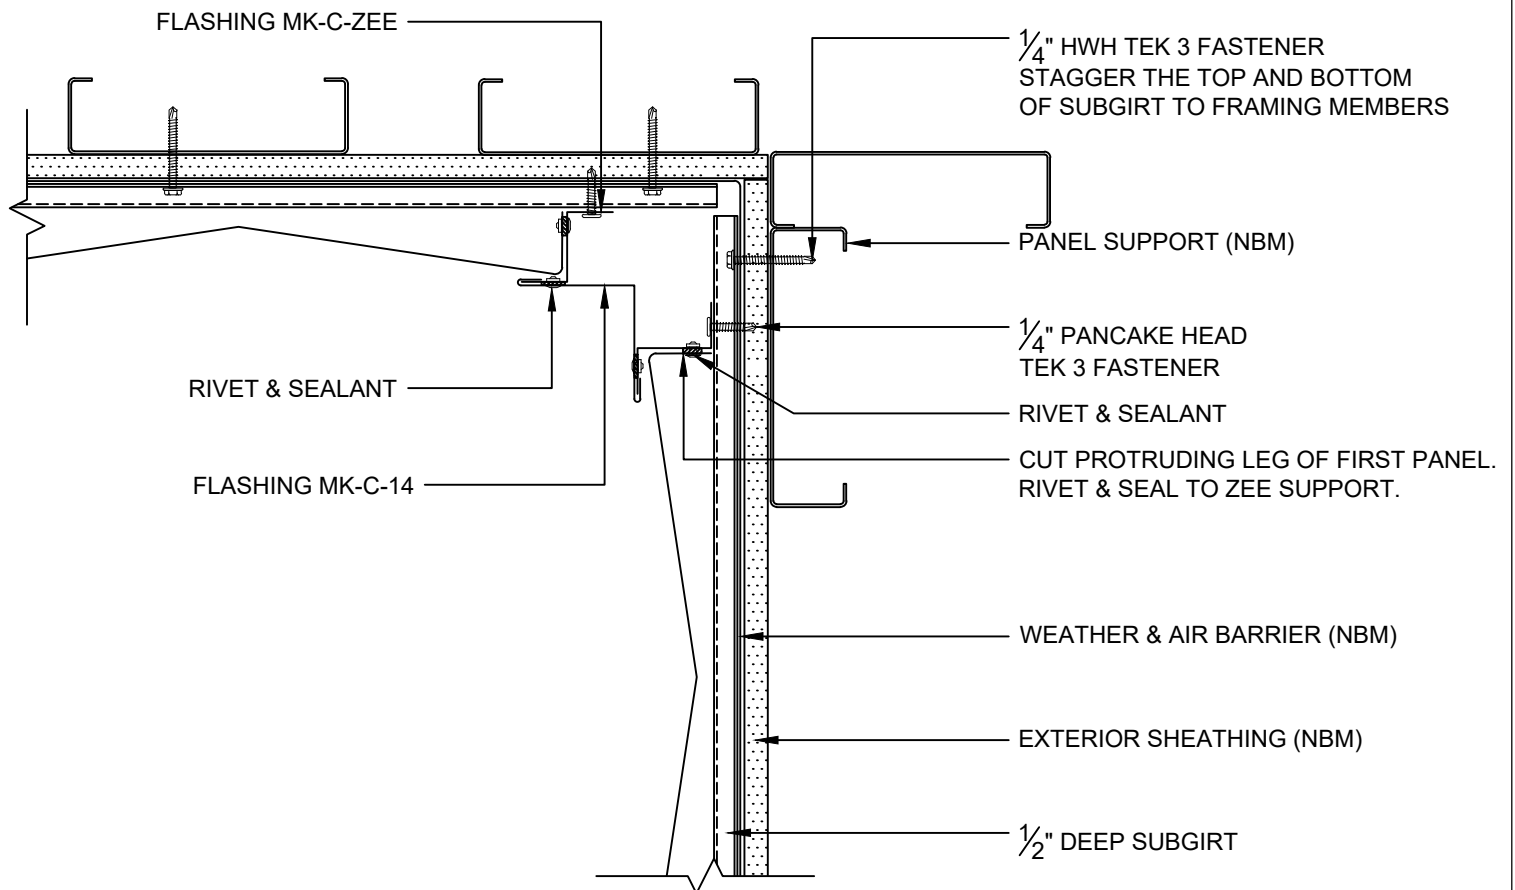

INSIDE CORNER DETAIL (W-12)

*NBM=(NOT BY MORIN)



Vertical Installation

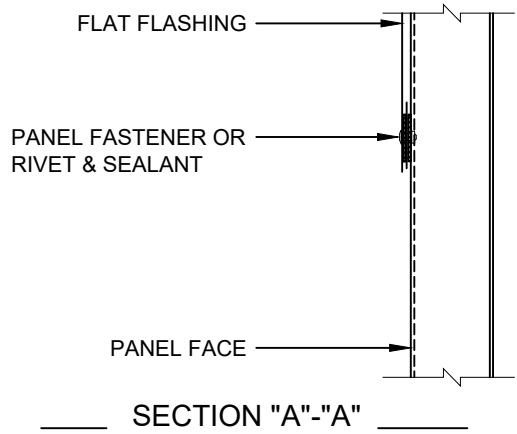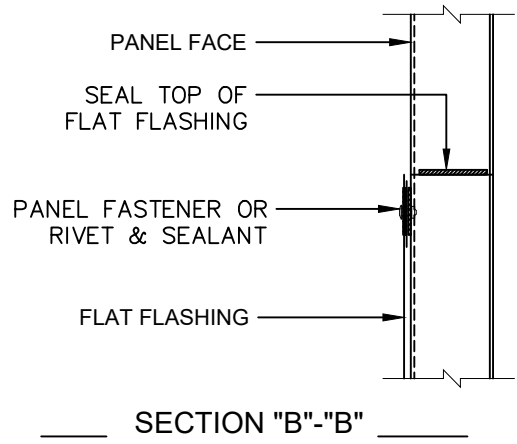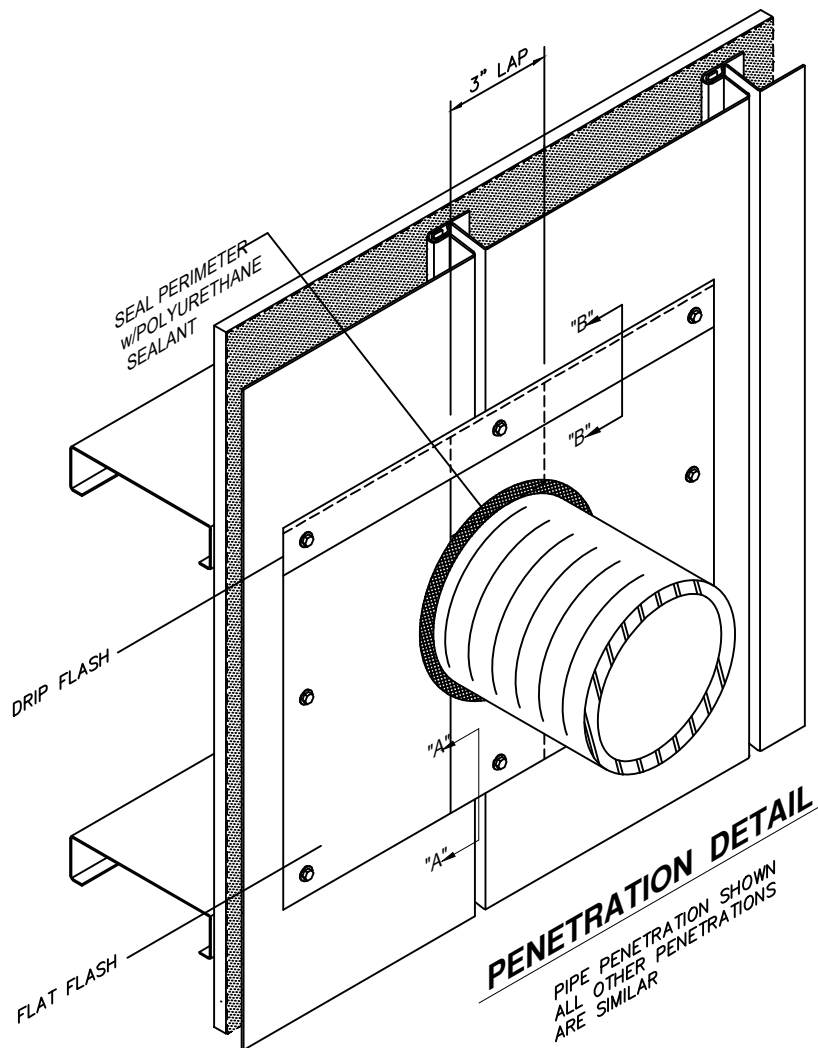


PENETRATION DETAIL (F-12)

*NBM=(NOT BY MORIN)

Vertical Installation

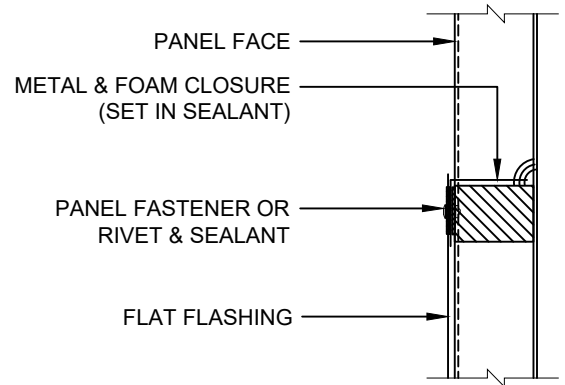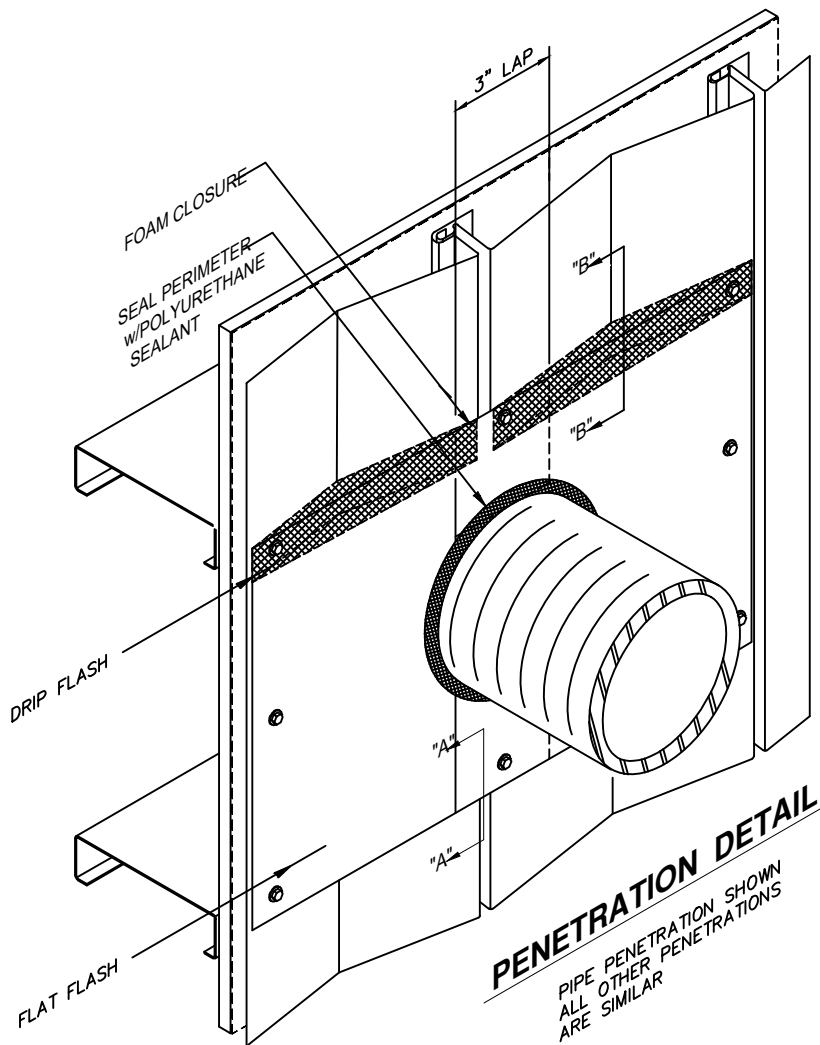

SECTION "B"-"B"

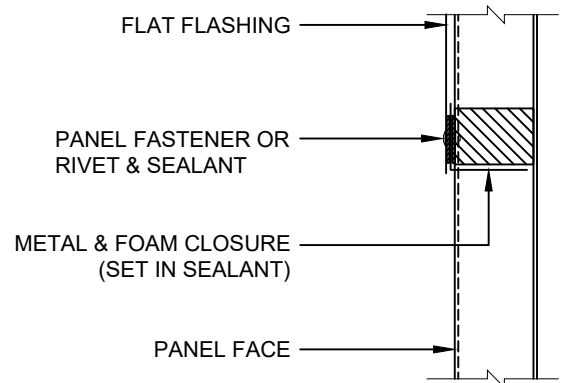


SECTION "A"-"A"

PENETRATION DETAIL (W-12)

*NBM=(NOT BY MORIN)


Vertical Installation

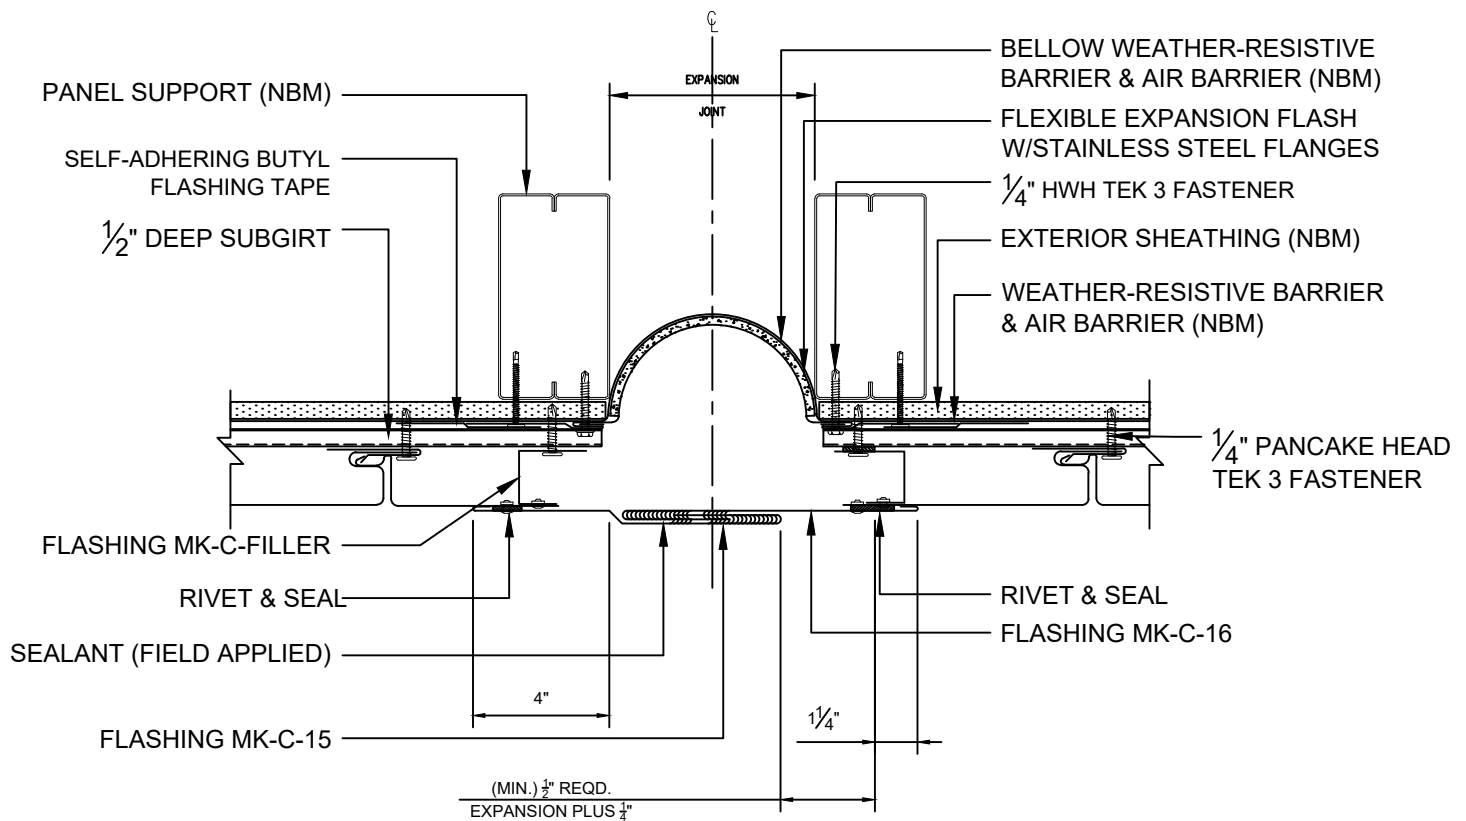

EXPANSION DETAIL (F-12)

*NBM=(NOT BY MORIN)


Vertical Installation

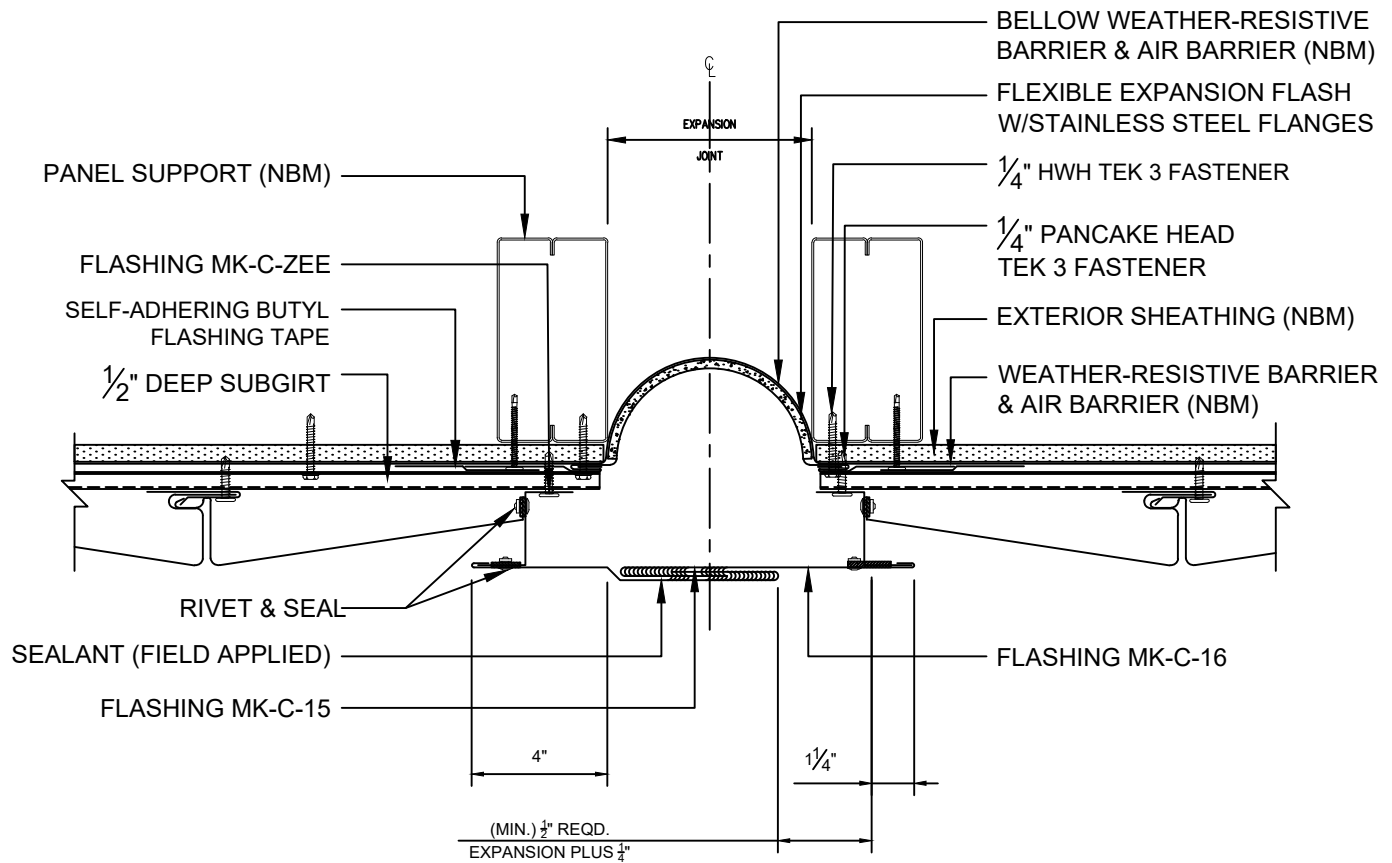

EXPANSION DETAIL (W-12)

*NBM=(NOT BY MORIN)


Vertical Installation

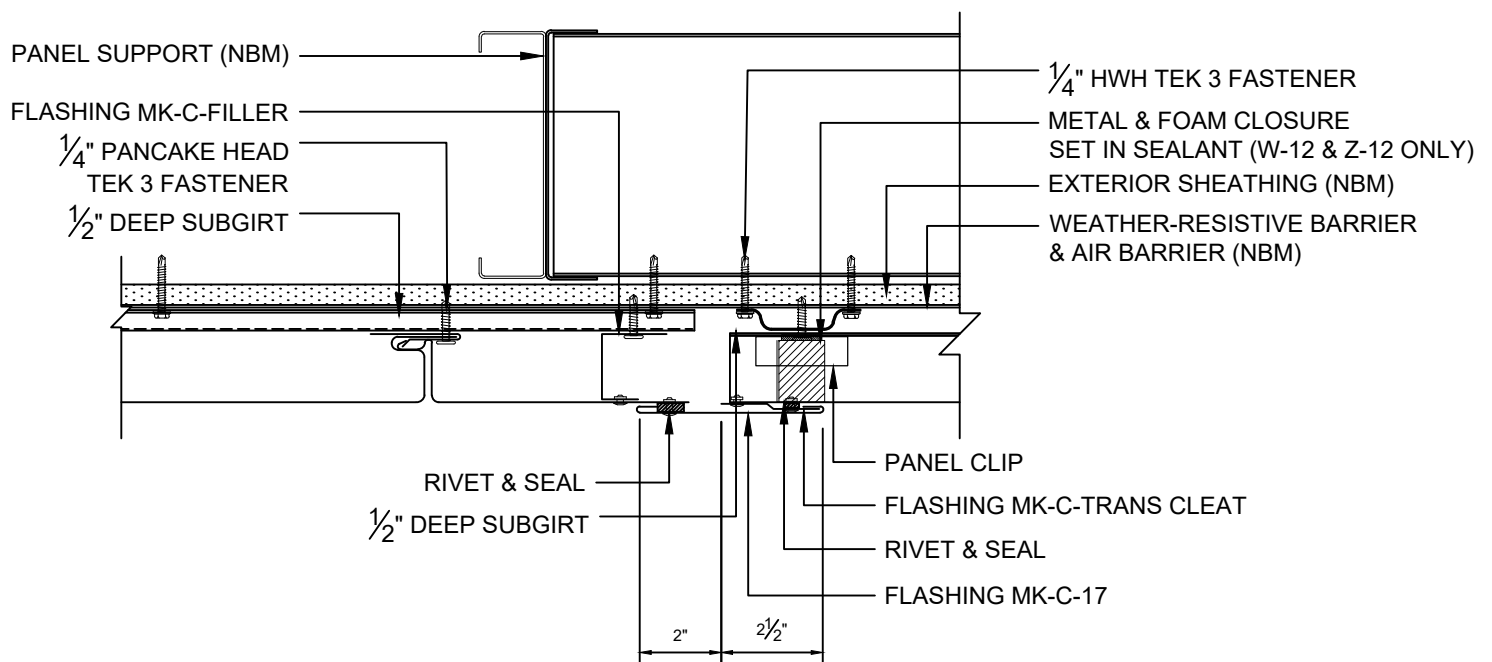

PANEL TRANSITION DETAIL

*NBM=(NOT BY MORIN)


Vertical Installation

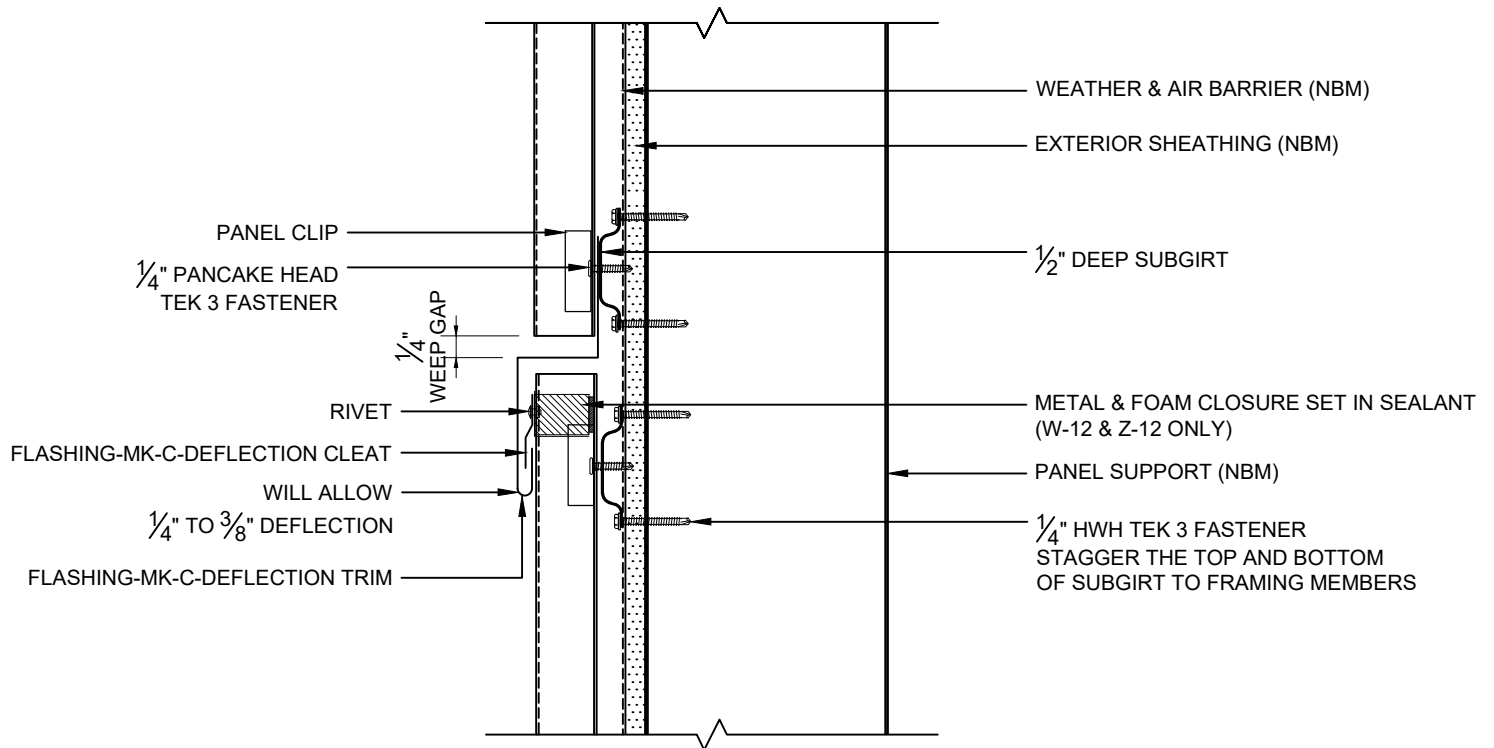

DEFLECTION JOINT DETAIL

*NBM=(NOT BY MORIN)


Horizontal Installation

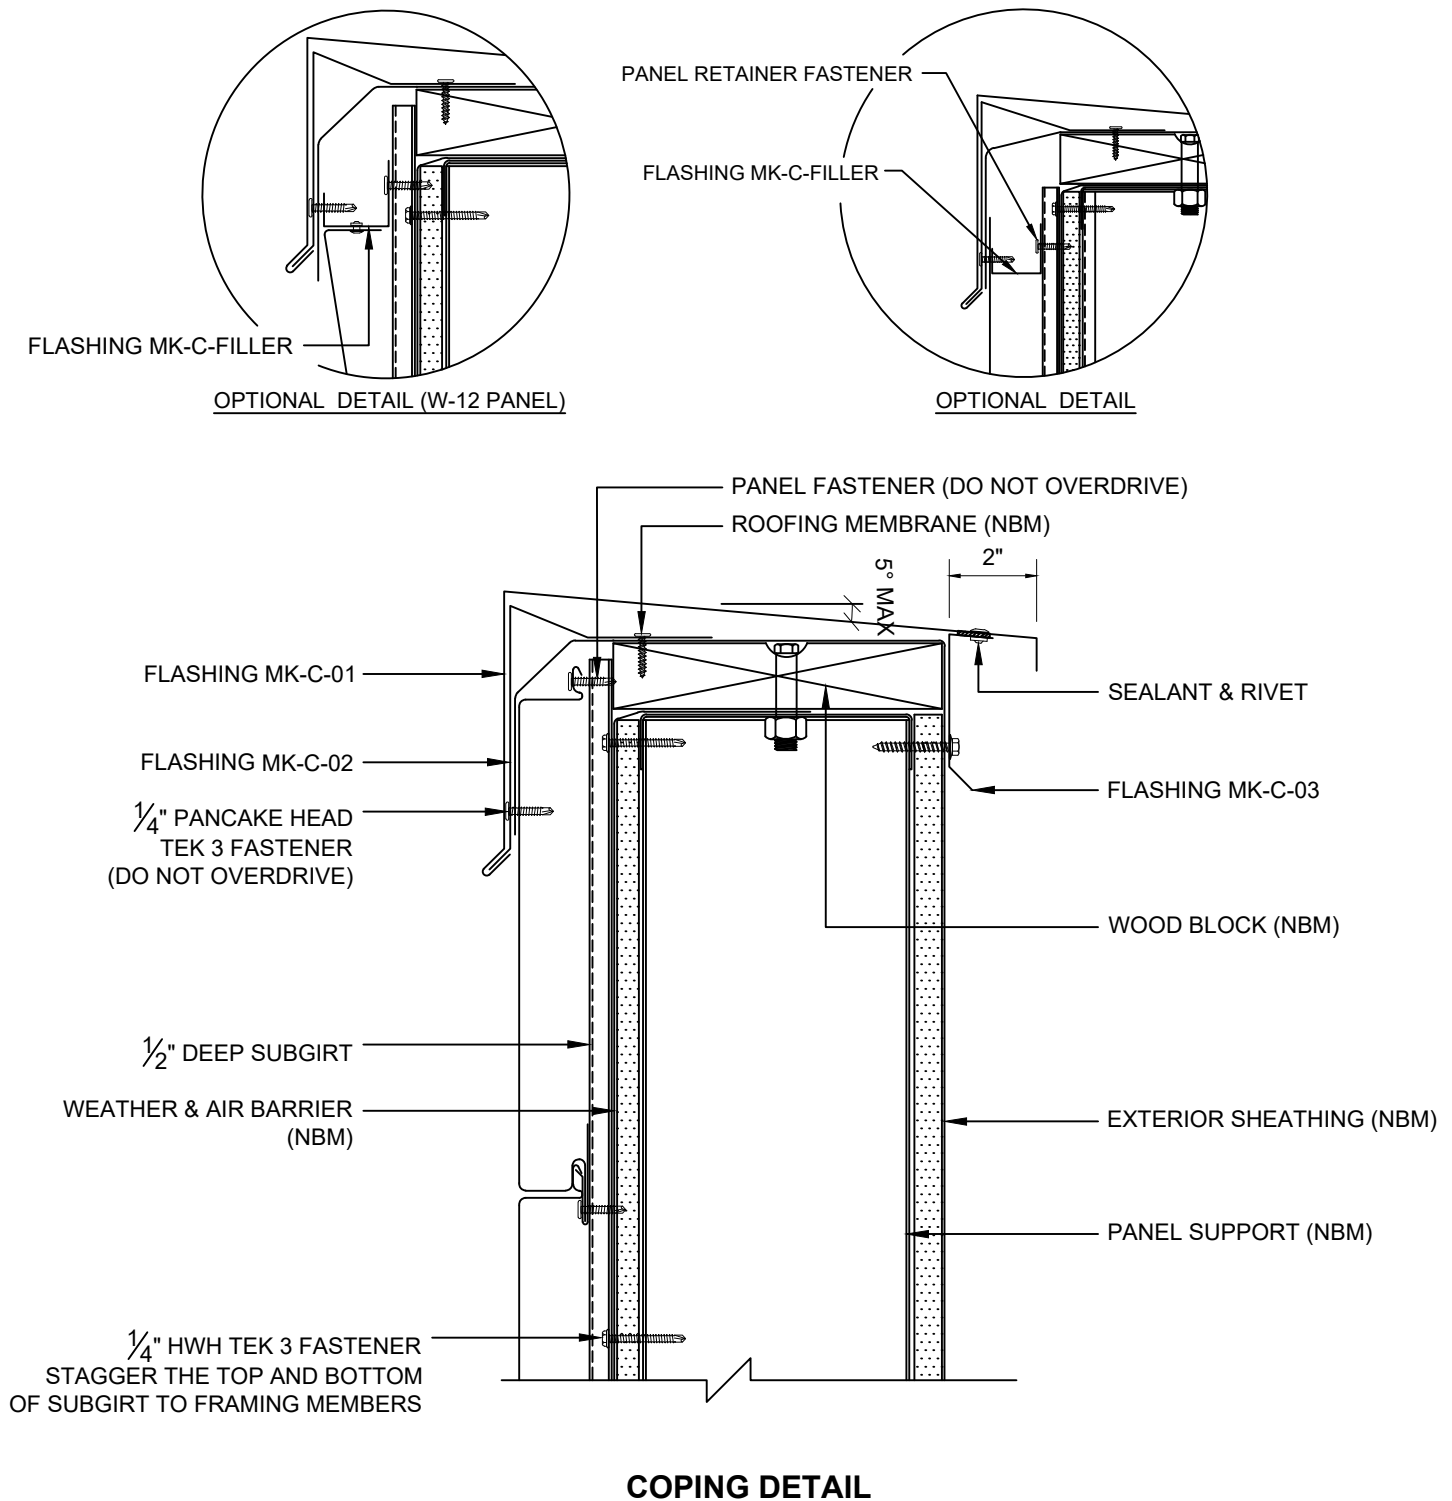

OPTIONAL ONE PIECE TRIM AVAILABLE

*NBM=(NOT BY MORIN)



Horizontal Installation

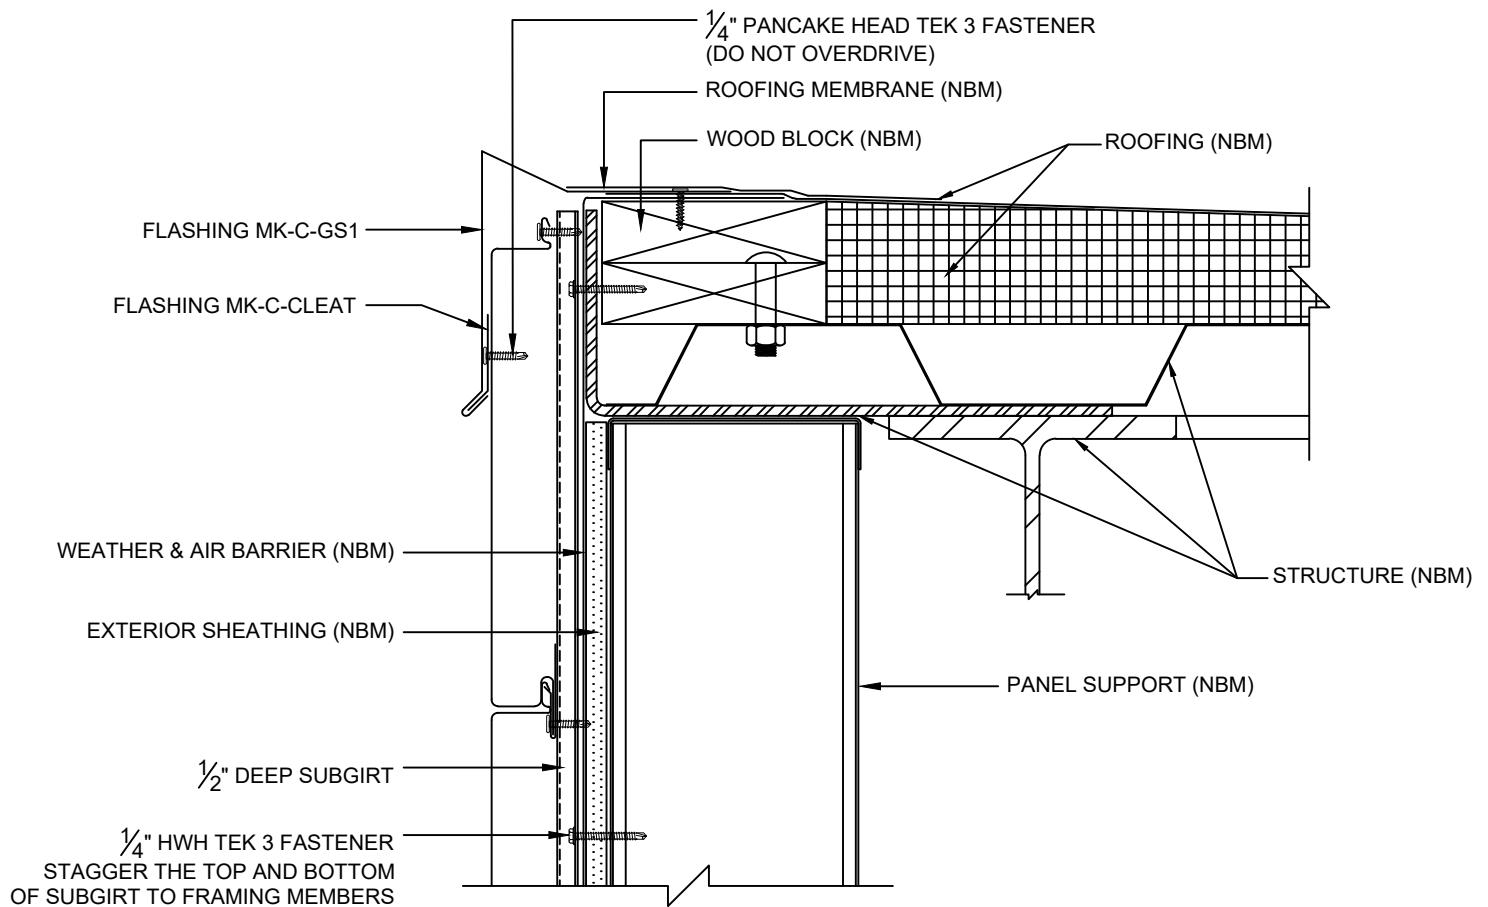

GRAVELSTOP DETAIL

*NBM=(NOT BY MORIN)



Horizontal Installation

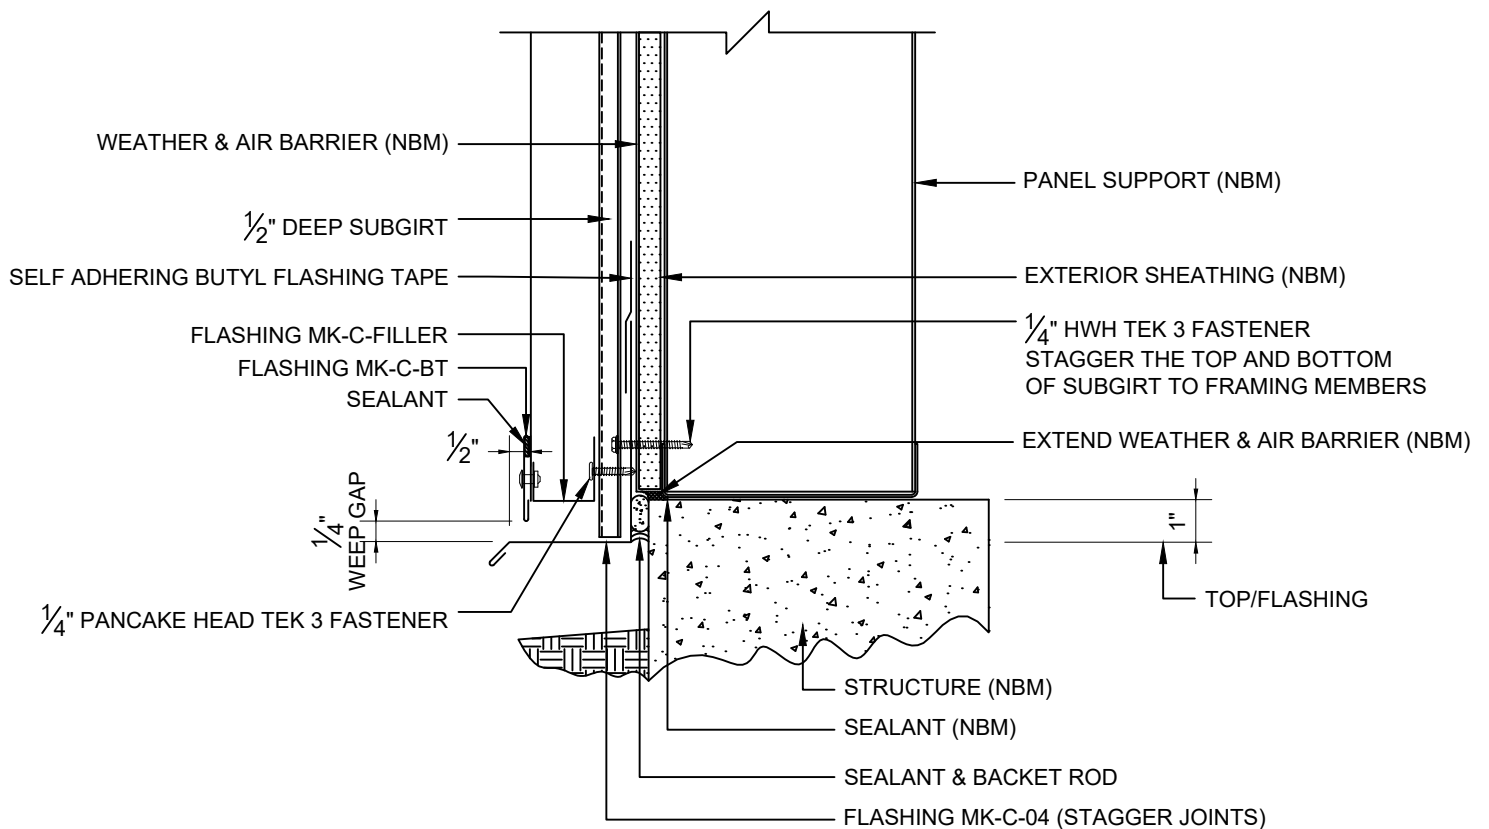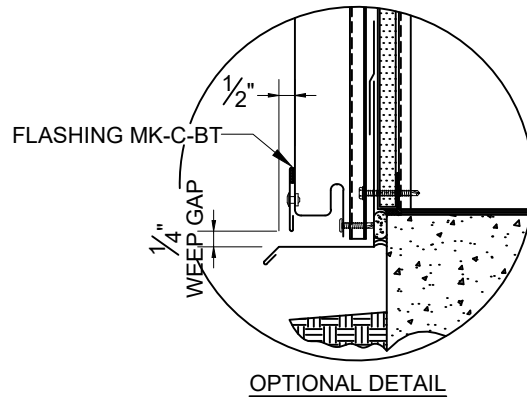

BASE AT CURB OR EDGE OF SLAB (F-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

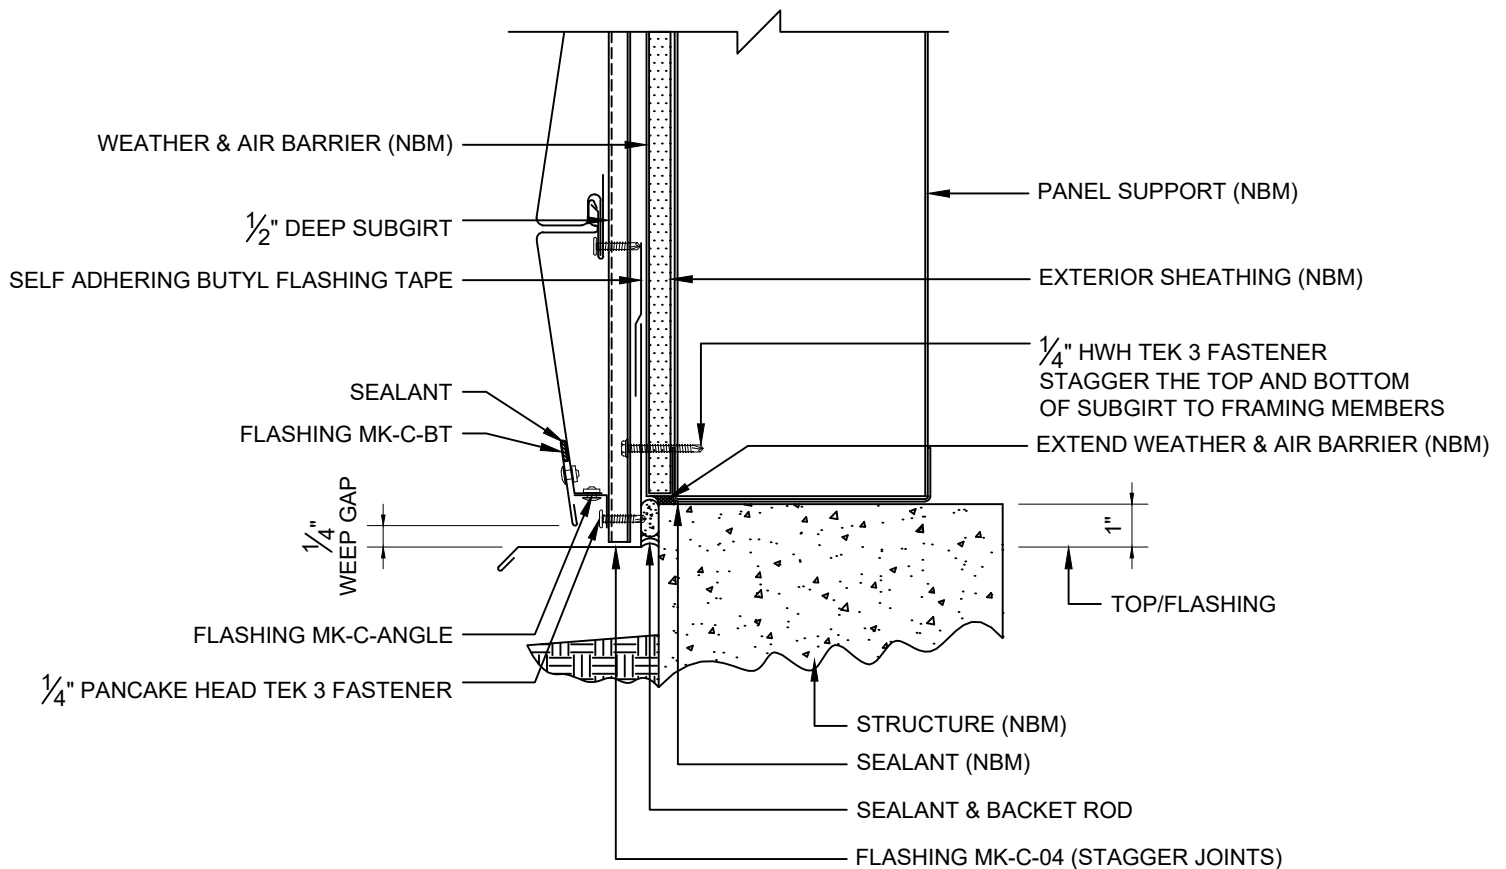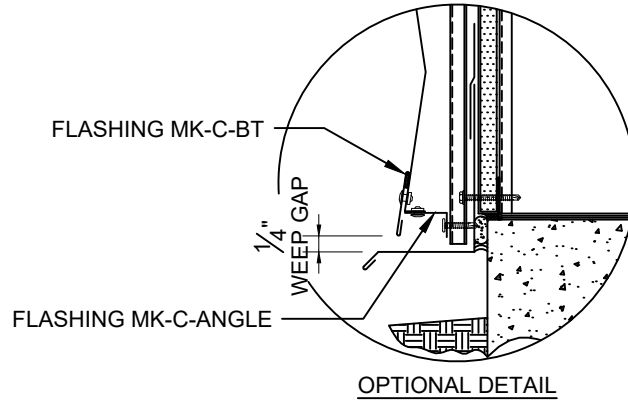

BASE AT CURB OR EDGE OF SLAB (W-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

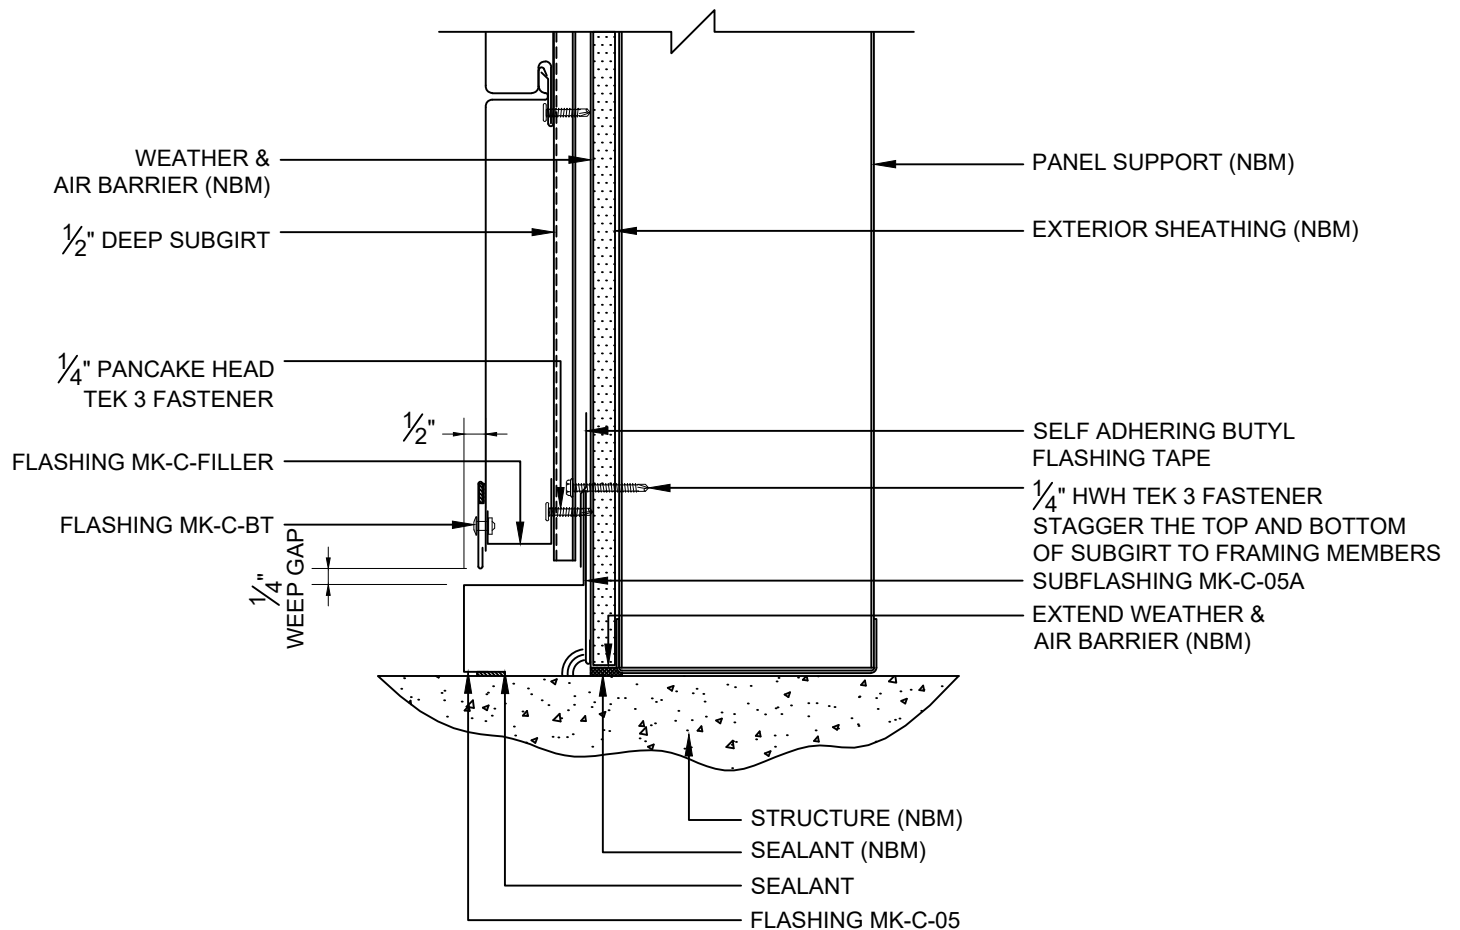

BASE AT SLAB DETAIL (F-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

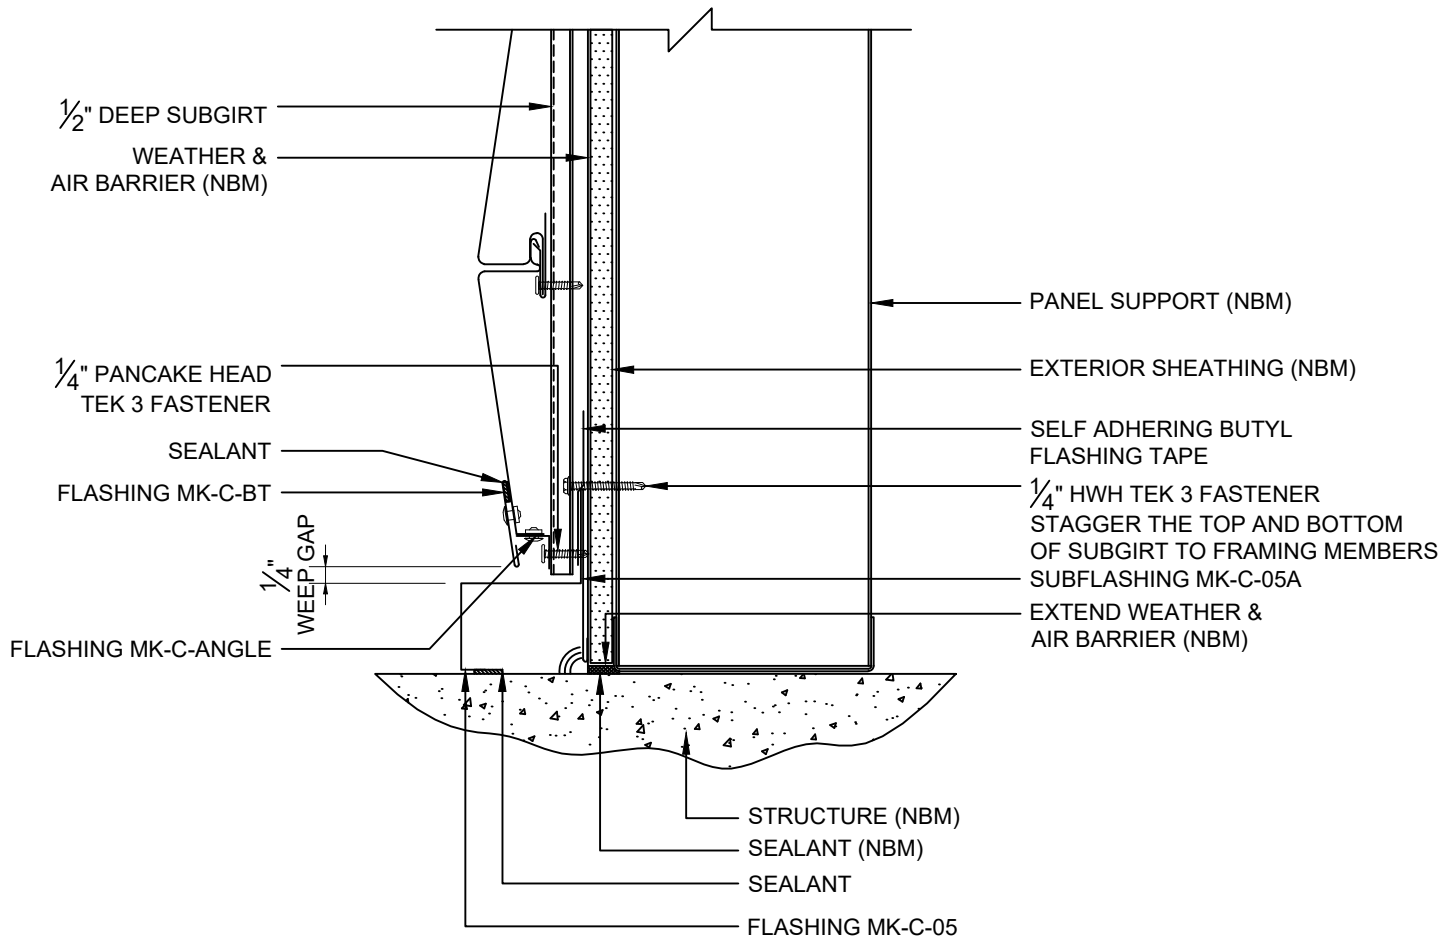

BASE AT SLAB DETAIL (W-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

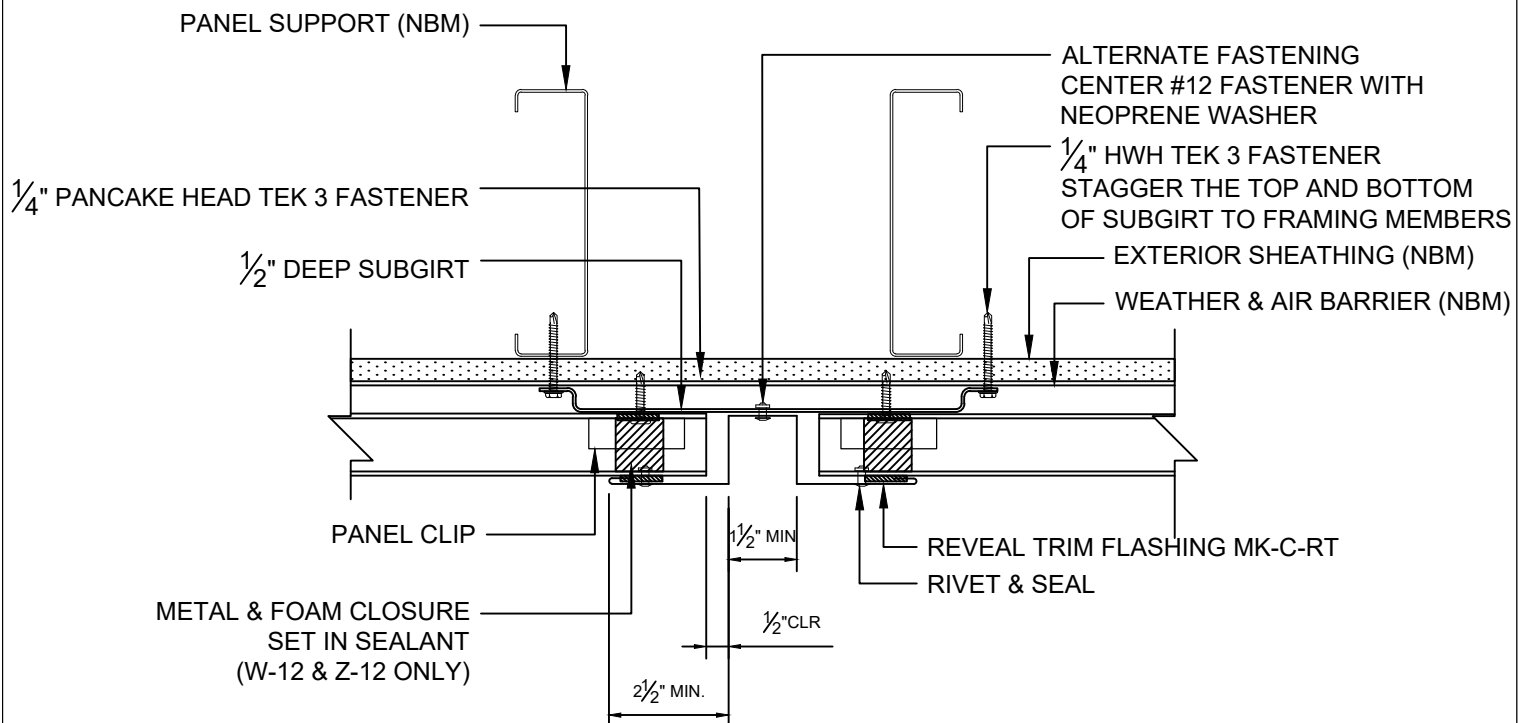

REVEAL TRIM DETAIL

*NBM=(NOT BY MORIN)


Horizontal Installation

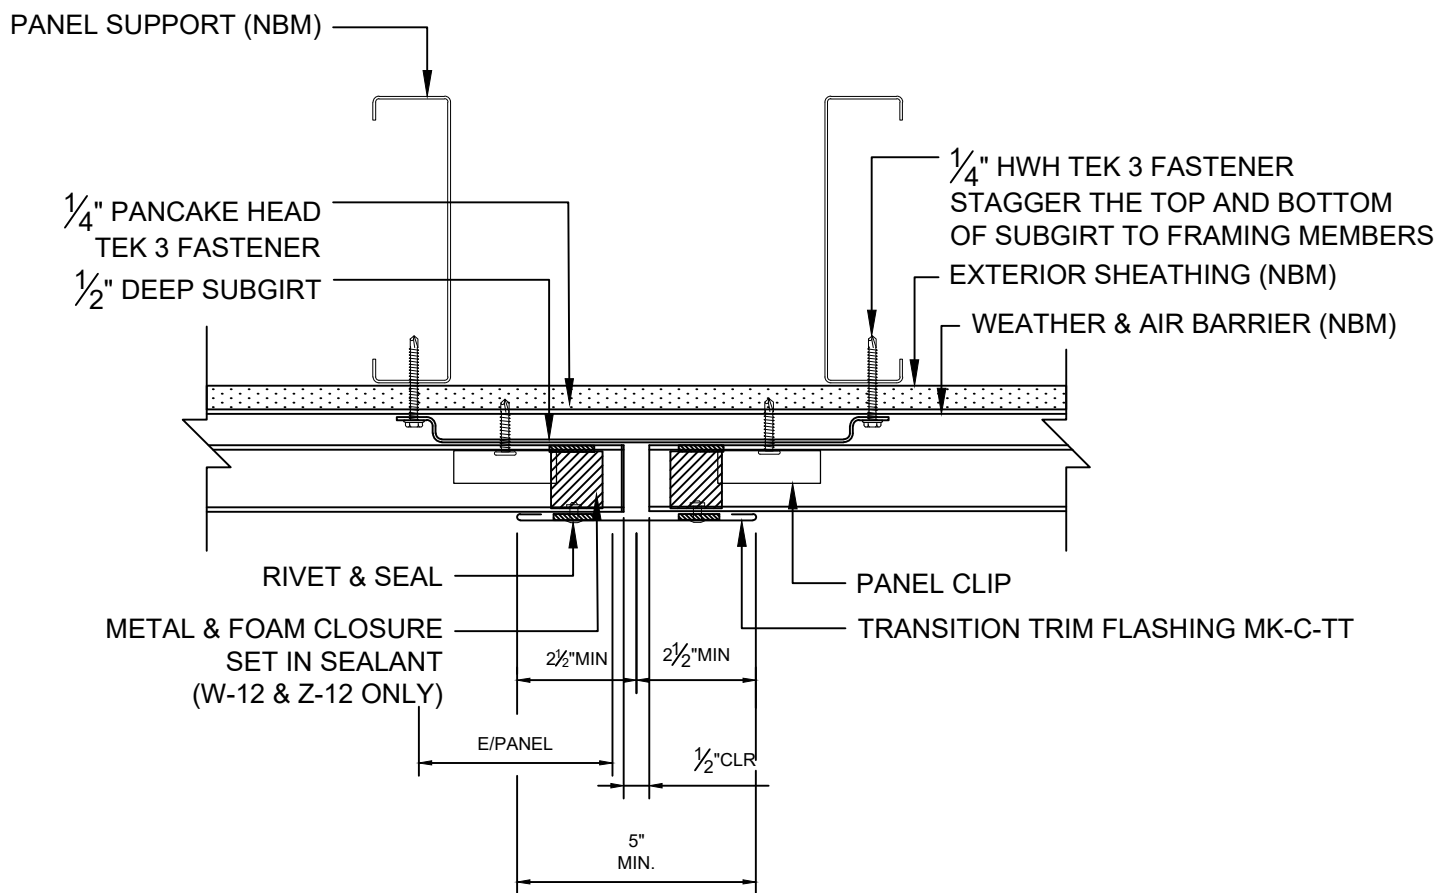

FLAT REVEAL TRIM DETAIL


*NBM=(NOT BY MORIN)

Horizontal Installation

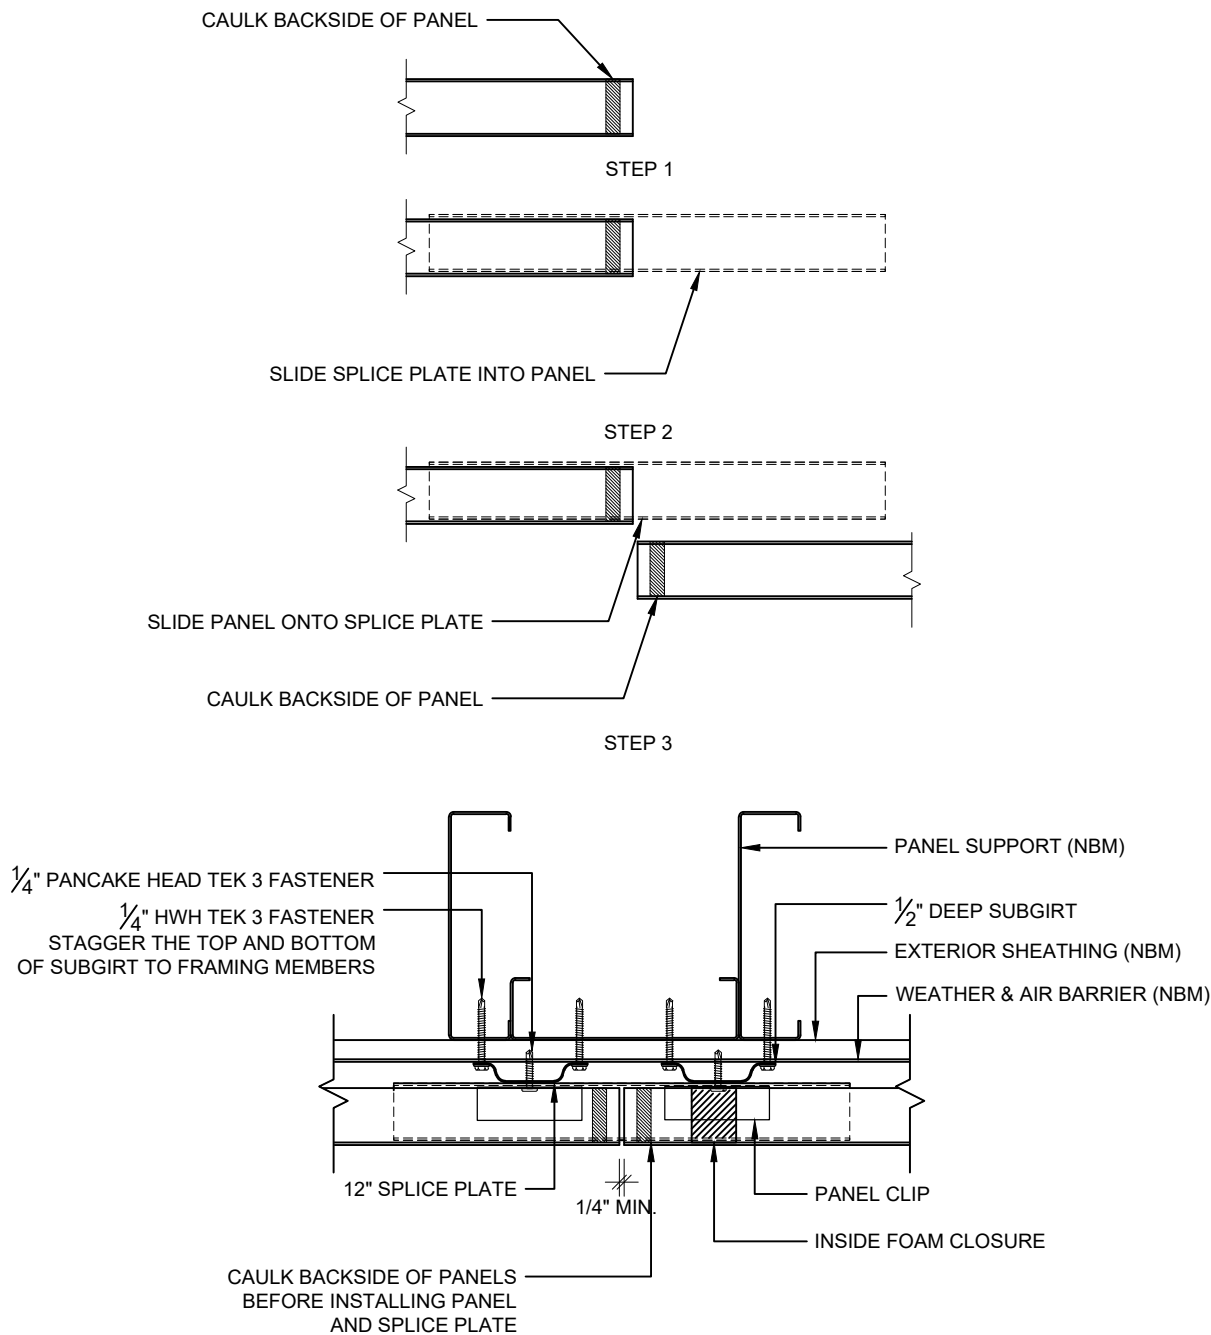

*NBM=(NOT BY MORIN)

Horizontal Installation

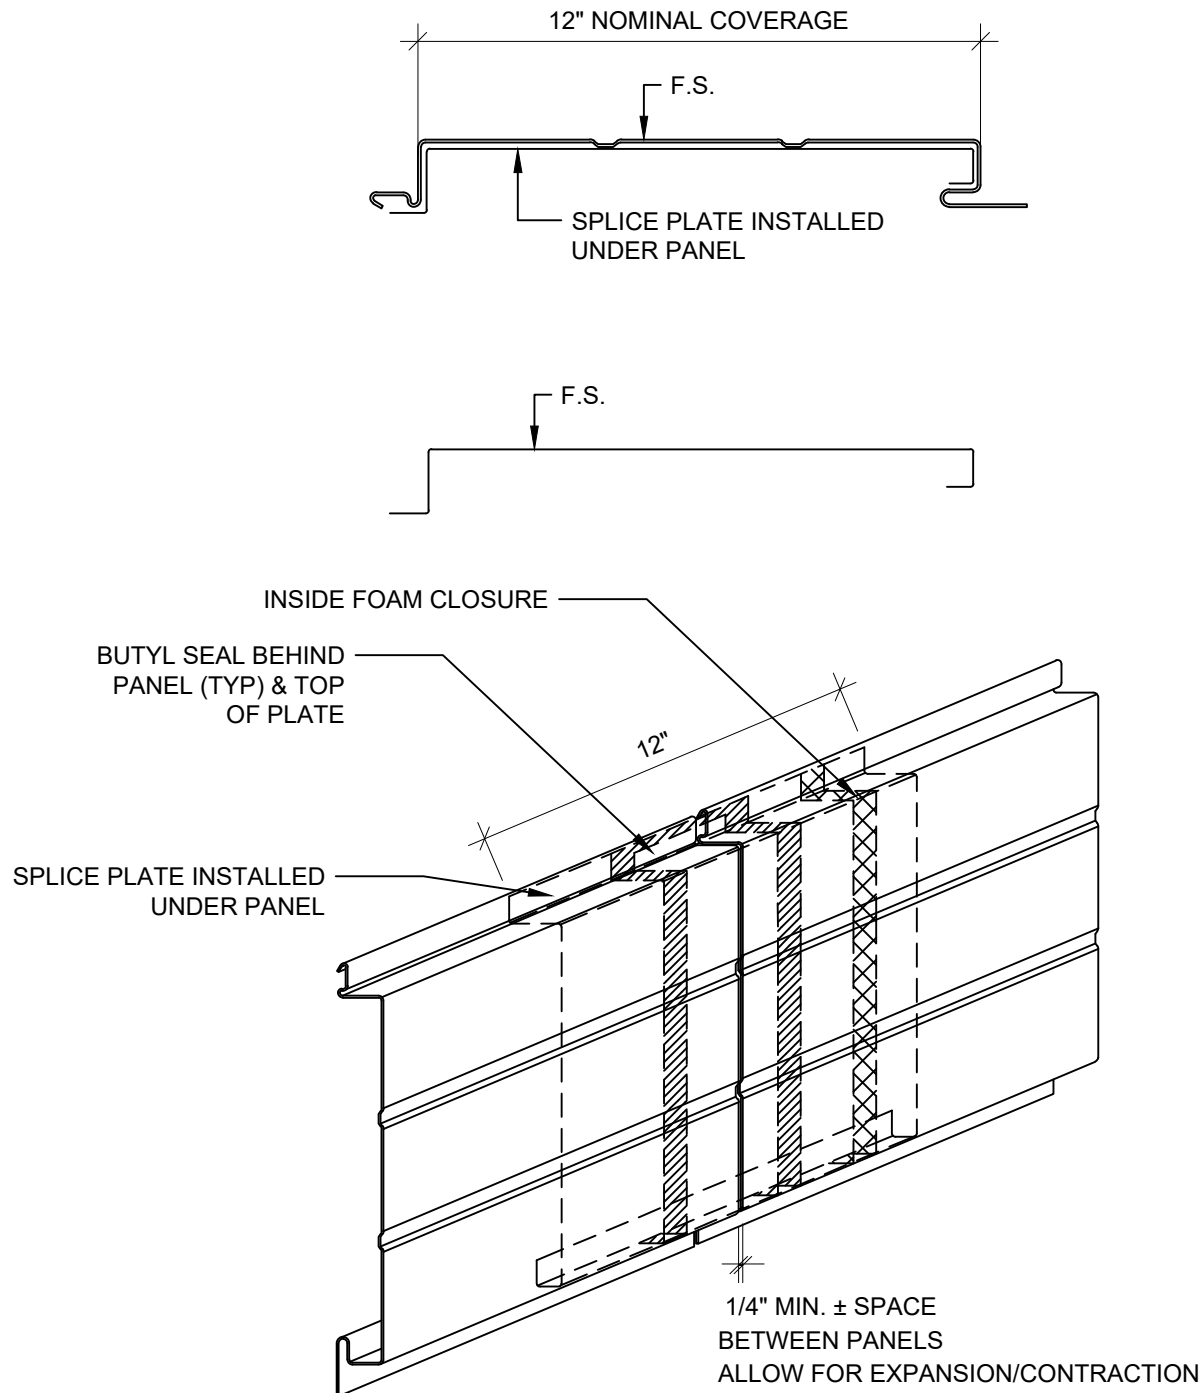


SPLICE PLATE ASSEMBLY

SPECIAL NOTE:
DUE TO MATERIAL THICKNESS,
SPlice PLATES MADE OF .050AL
OR 18GA ARE NOT SUGGESTED

*NBM=(NOT BY MORIN)

Horizontal Installation


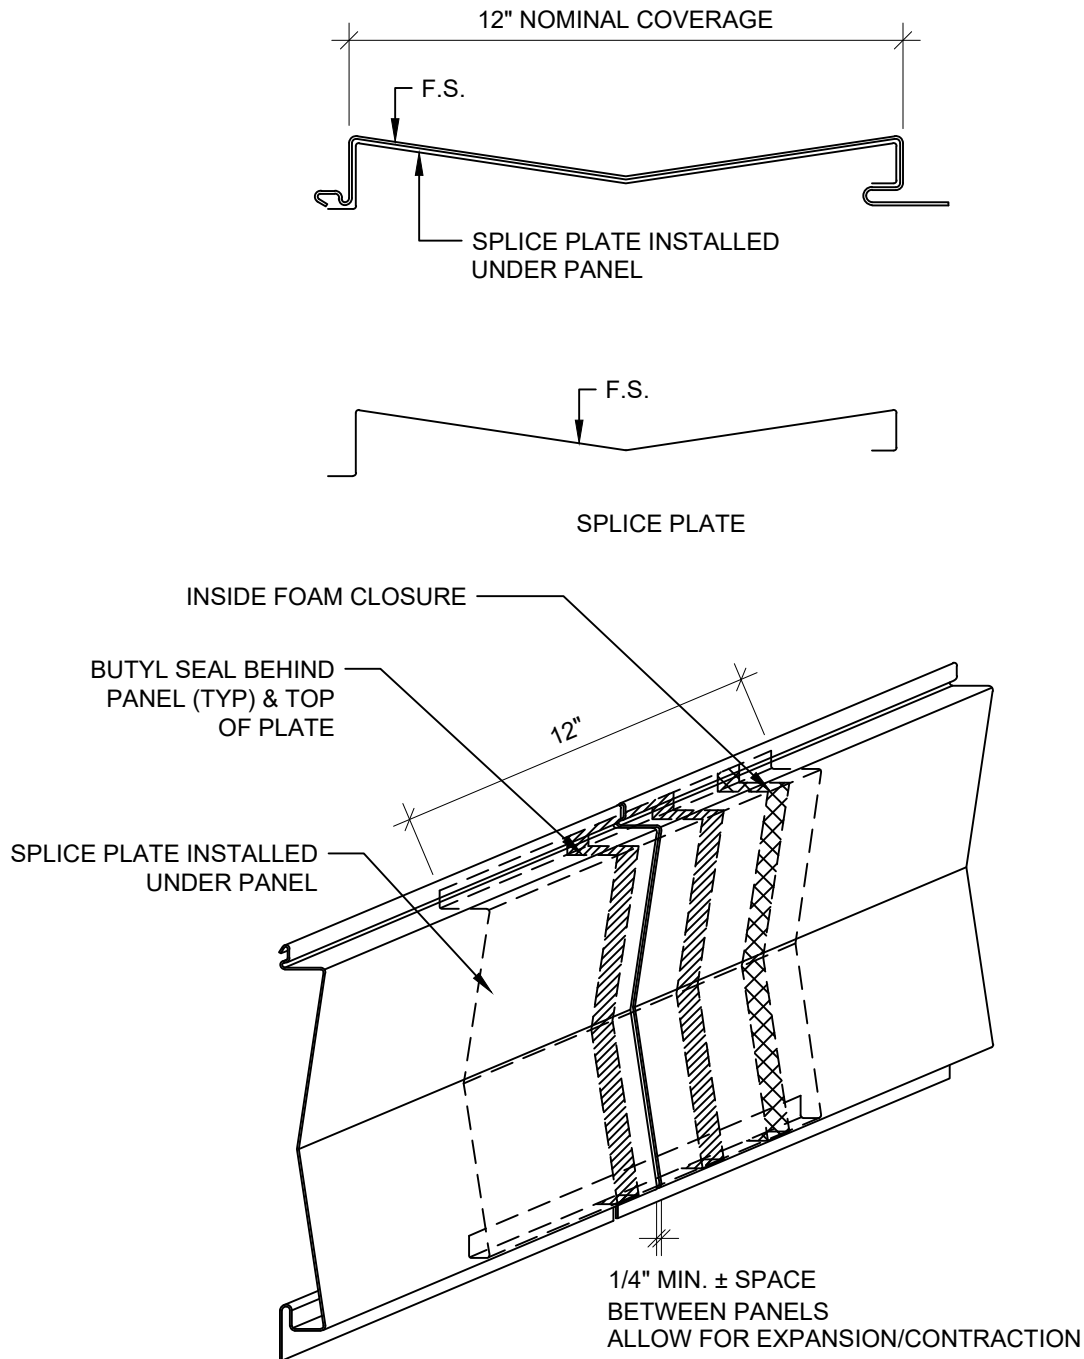


SPLICE PLATE ASSEMBLY (W-12)

SPECIAL NOTE:
DUE TO MATERIAL THICKNESS,
SPLICE PLATES MADE OF .050AL
OR 18GA ARE NOT SUGGESTED

*NBM=(NOT BY MORIN)



Horizontal Installation

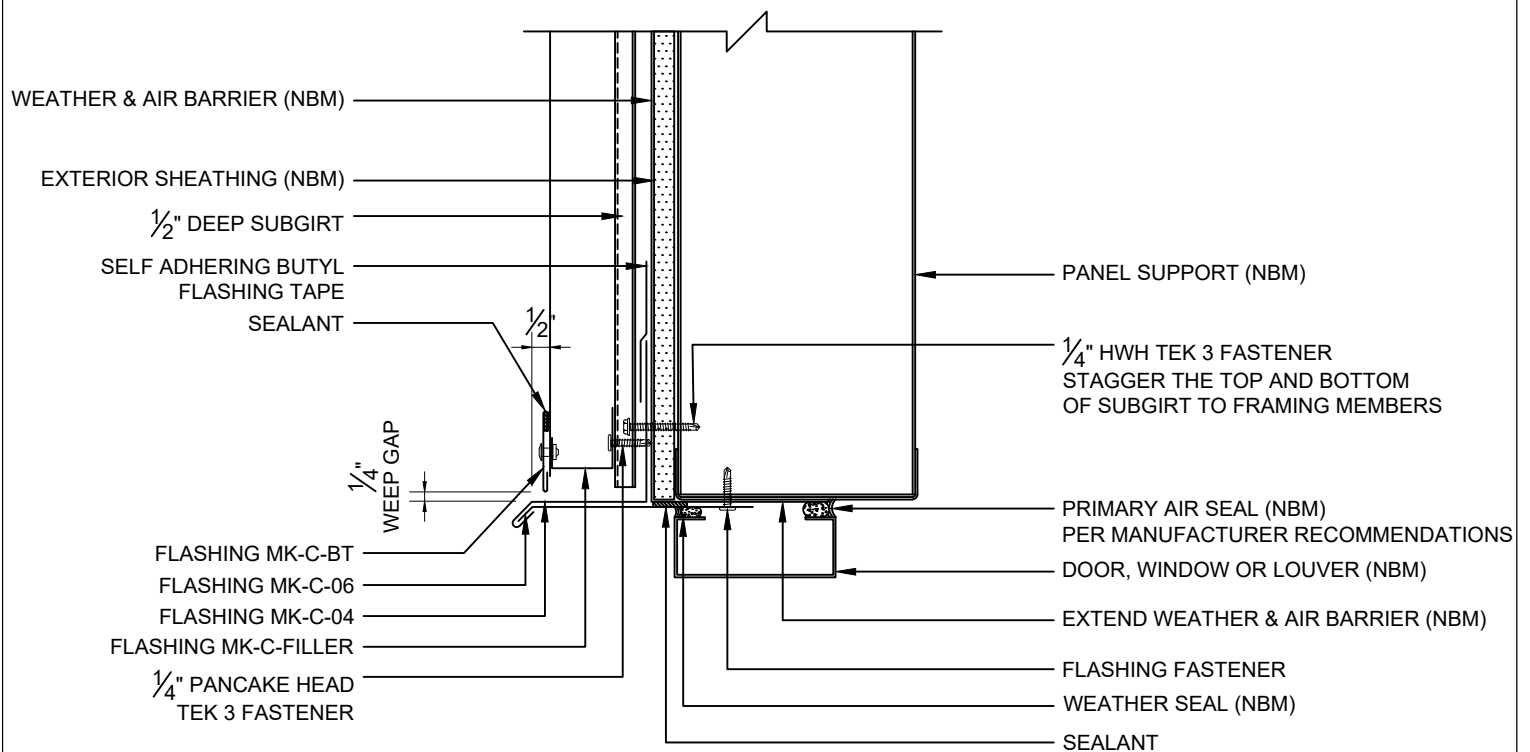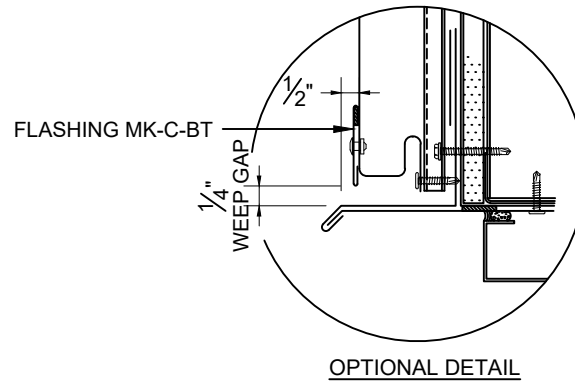

DOOR/WINDOW/LOUVER HEAD (F-12)

*NBM=(NOT BY MORIN)



Horizontal Installation

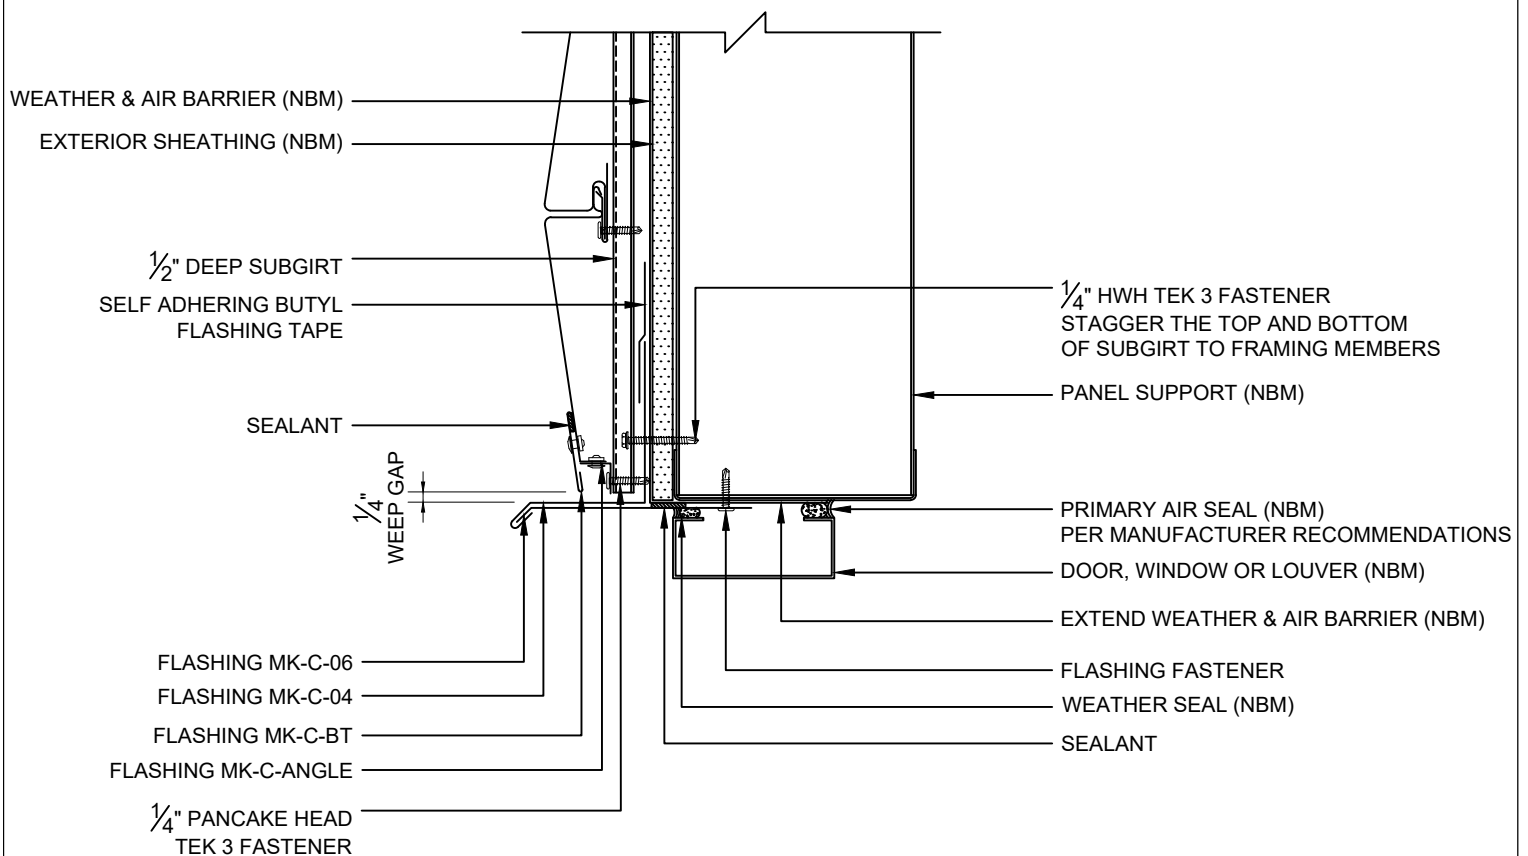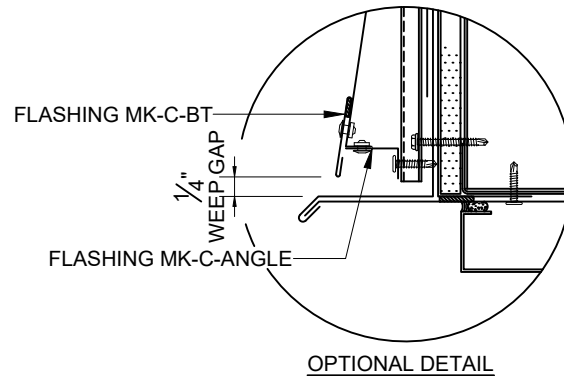

DOOR/WINDOW/LOUVER HEAD (W-12)

*NBM=(NOT BY MORIN)



Horizontal Installation

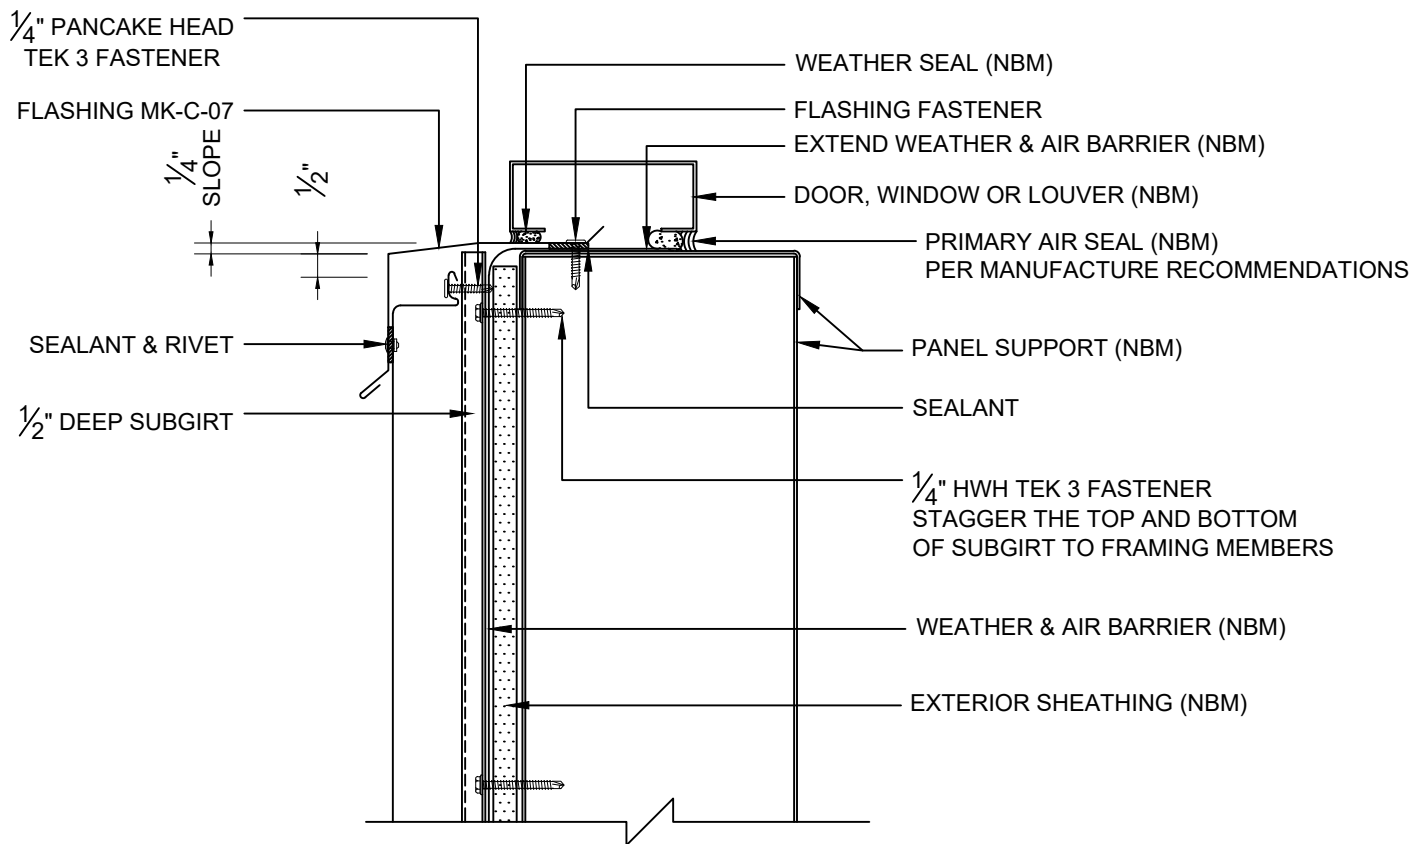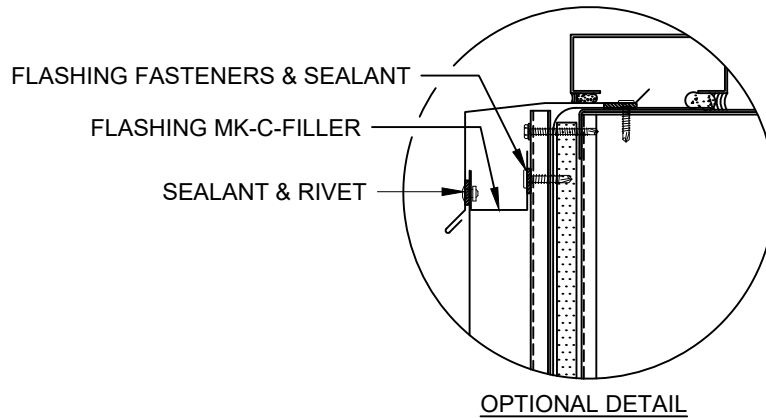

DOOR/WINDOW/LOUVER SILL (F-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

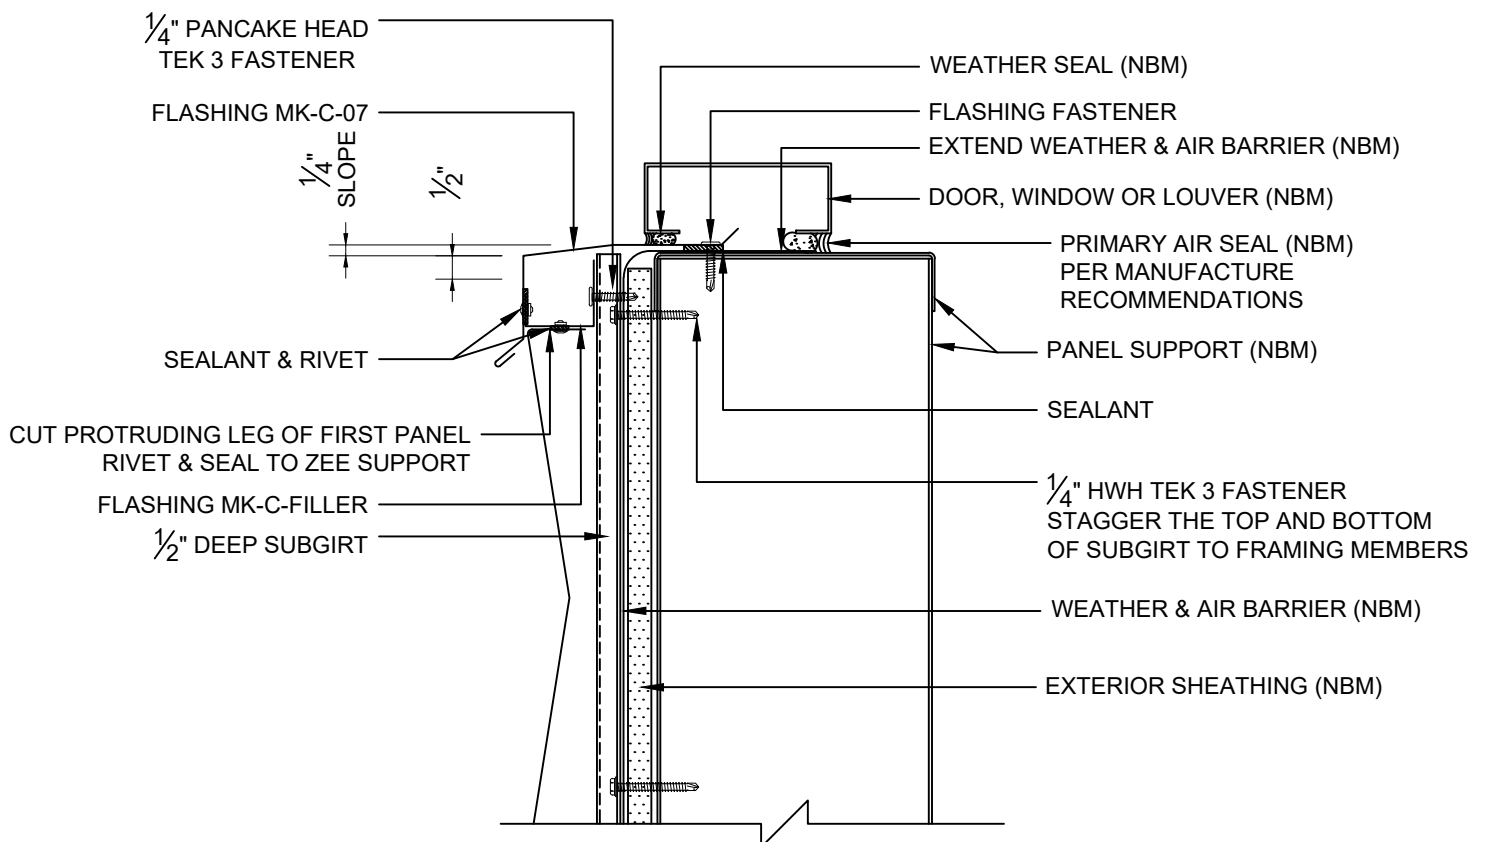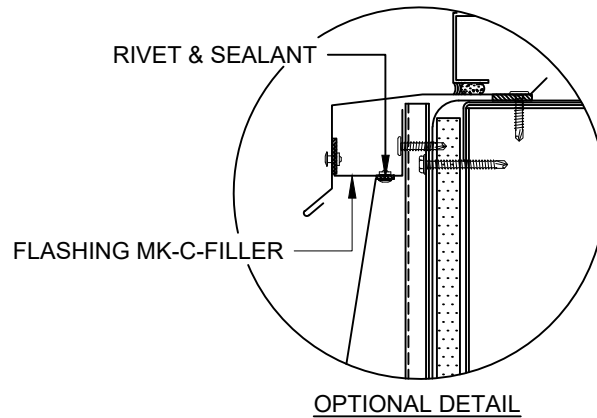

DOOR/WINDOW/LOUVER SILL (W-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

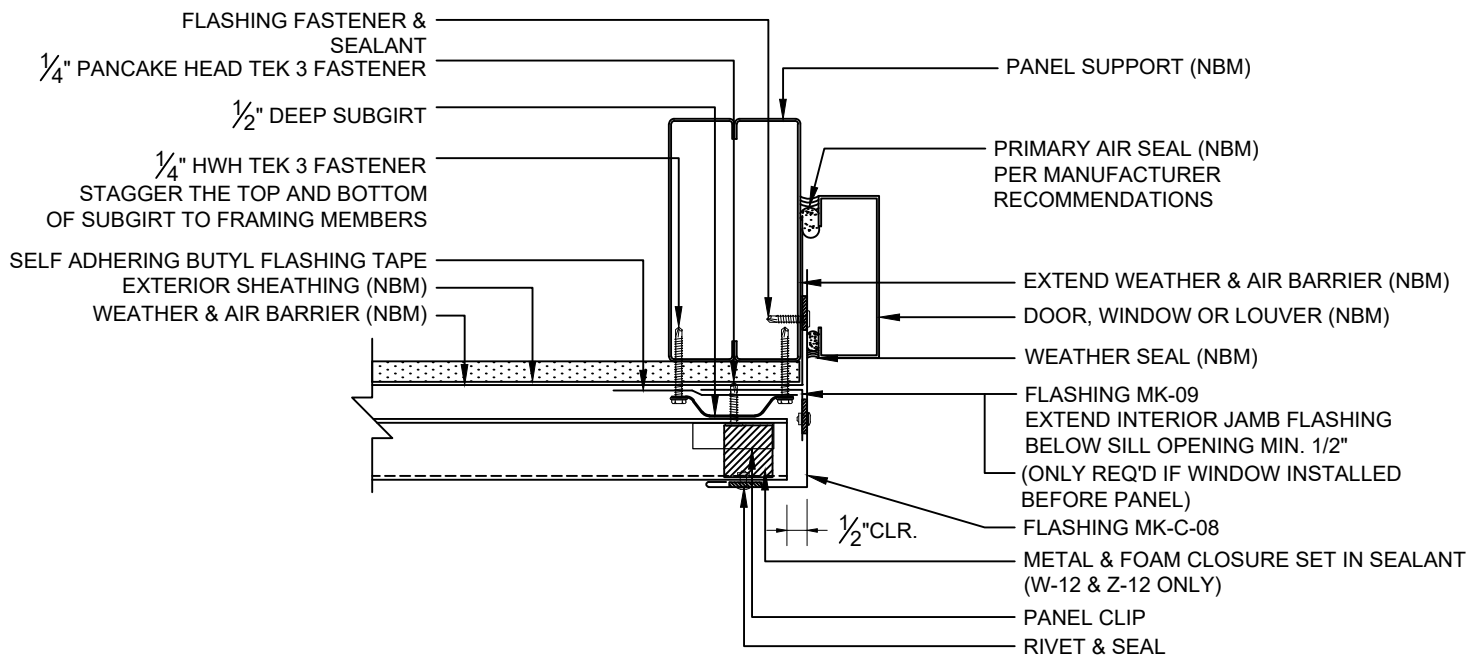

DOOR/WINDOW/LOUVER JAMB

*NBM=(NOT BY MORIN)


Horizontal Installation

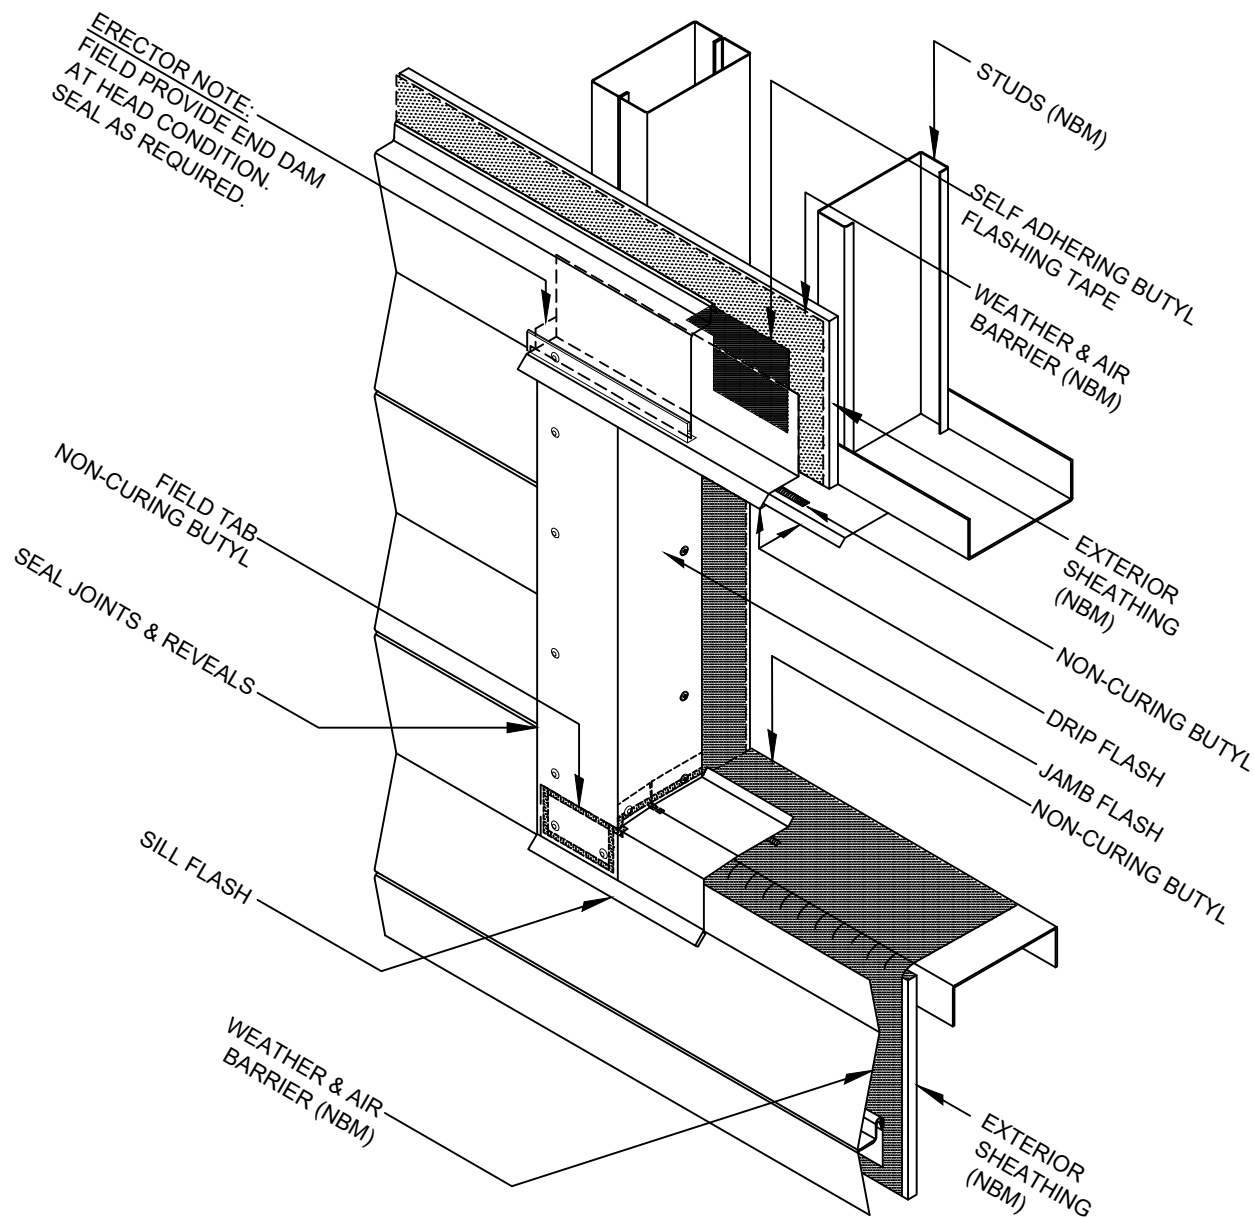

INTERSECTION OF HEAD/JAMB/SILL

*NBM=(NOT BY MORIN)


Horizontal Installation

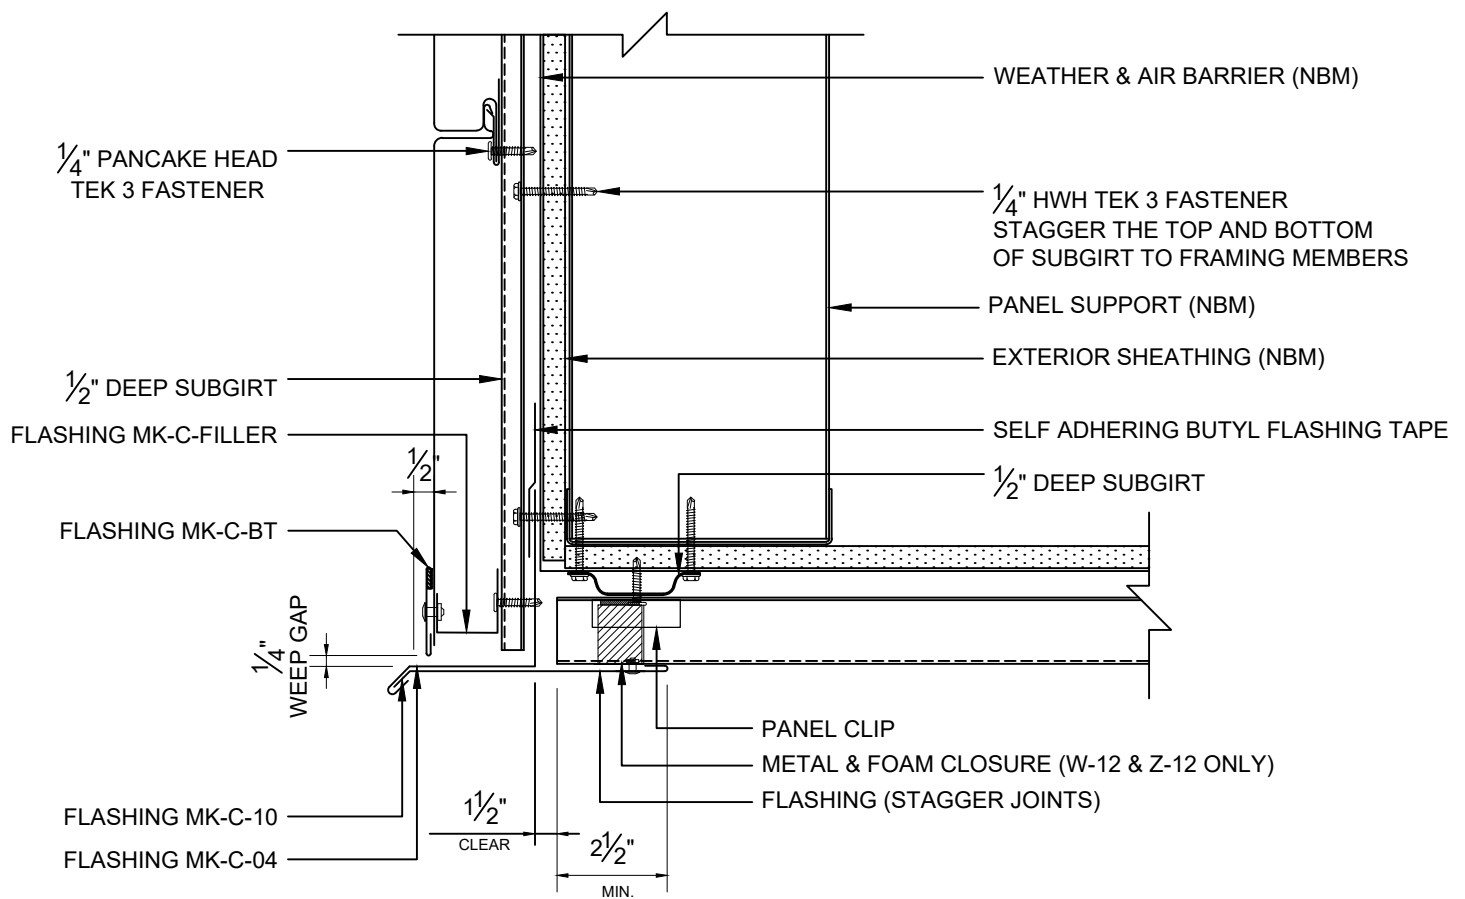

FRONT SOFFIT DETAIL (F-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

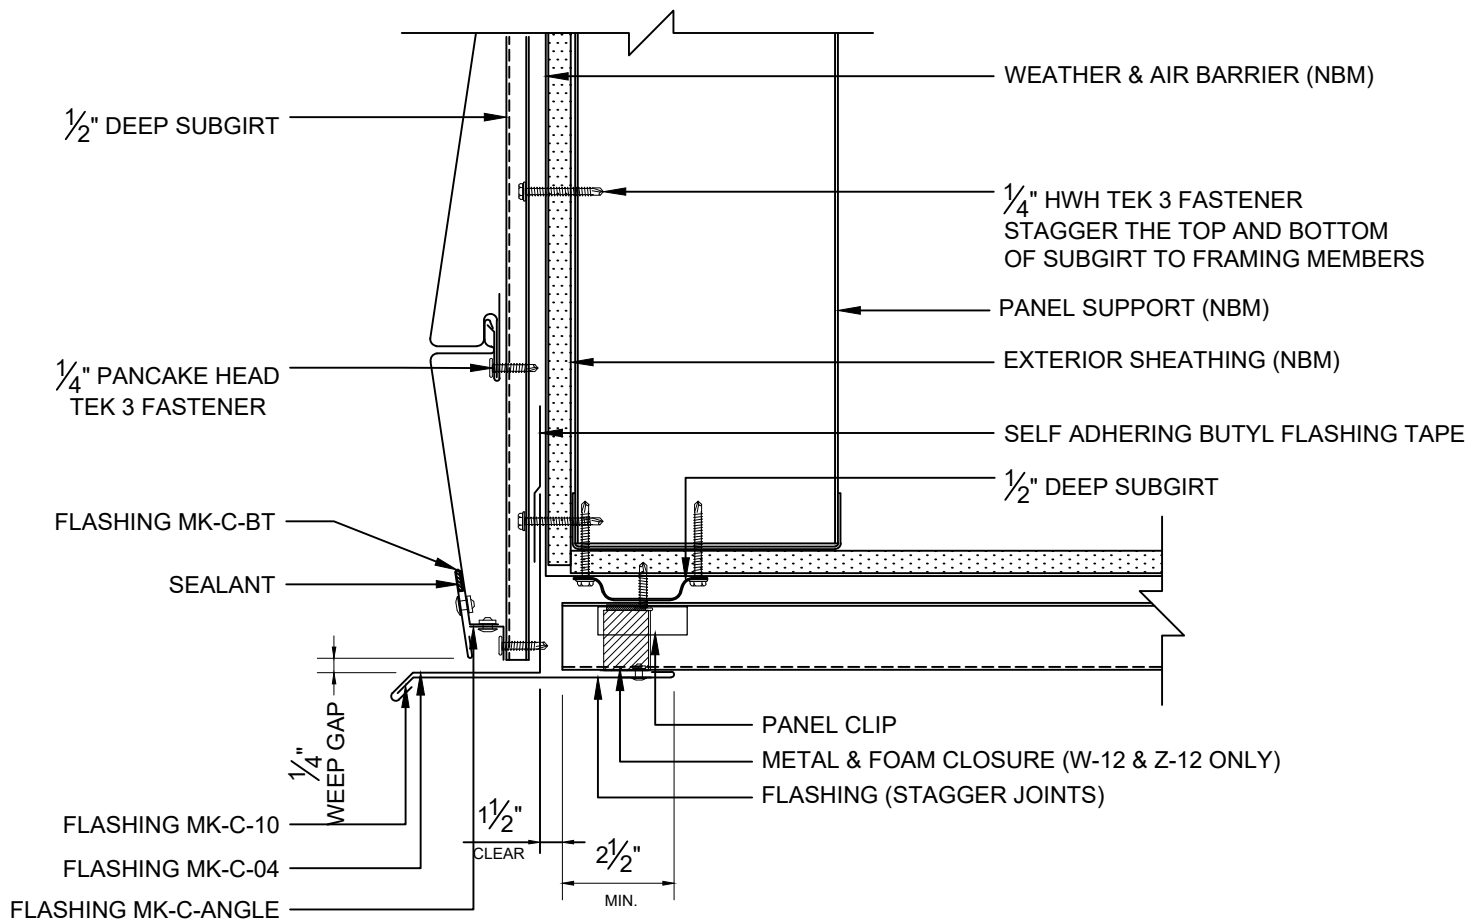

FRONT SOFFIT DETAIL (W-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

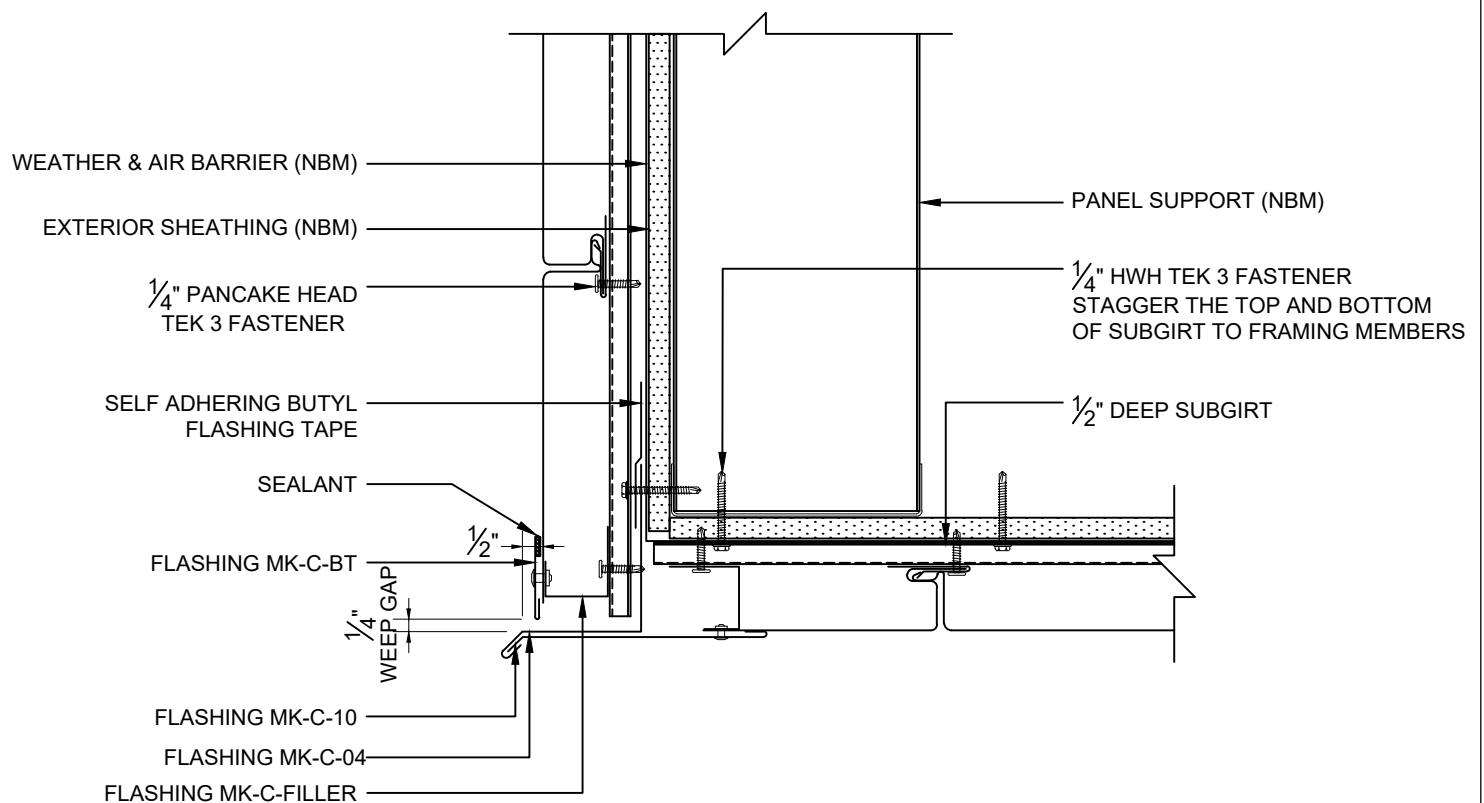

FRONT SOFFIT DETAIL (F-12)

*NBM=(NOT BY MORIN)



Horizontal Installation

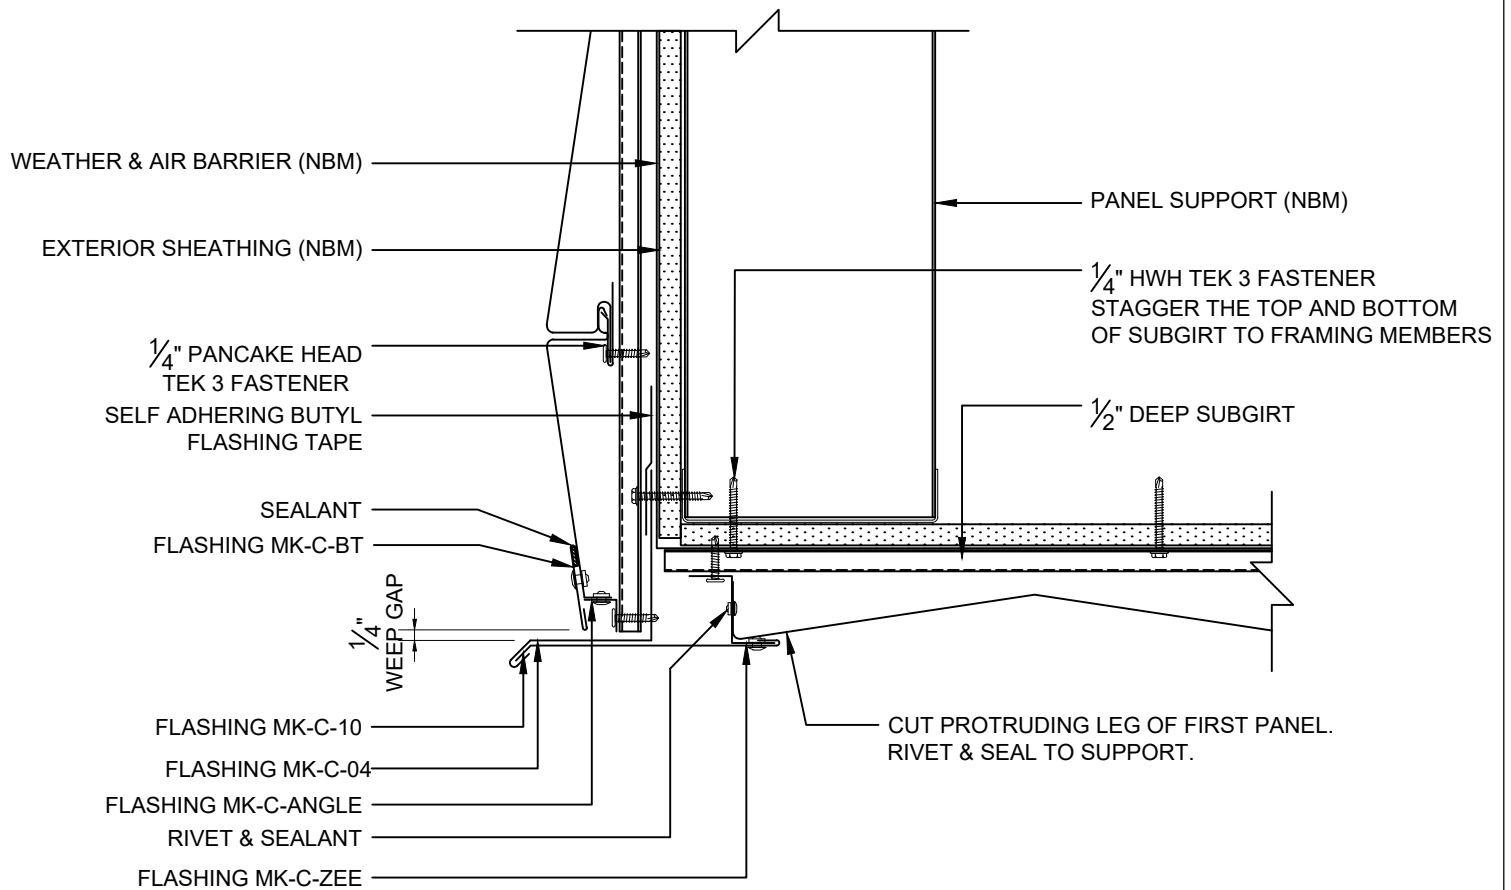

FRONT SOFFIT DETAIL (W-12)

*NBM=(NOT BY MORIN)



Horizontal Installation

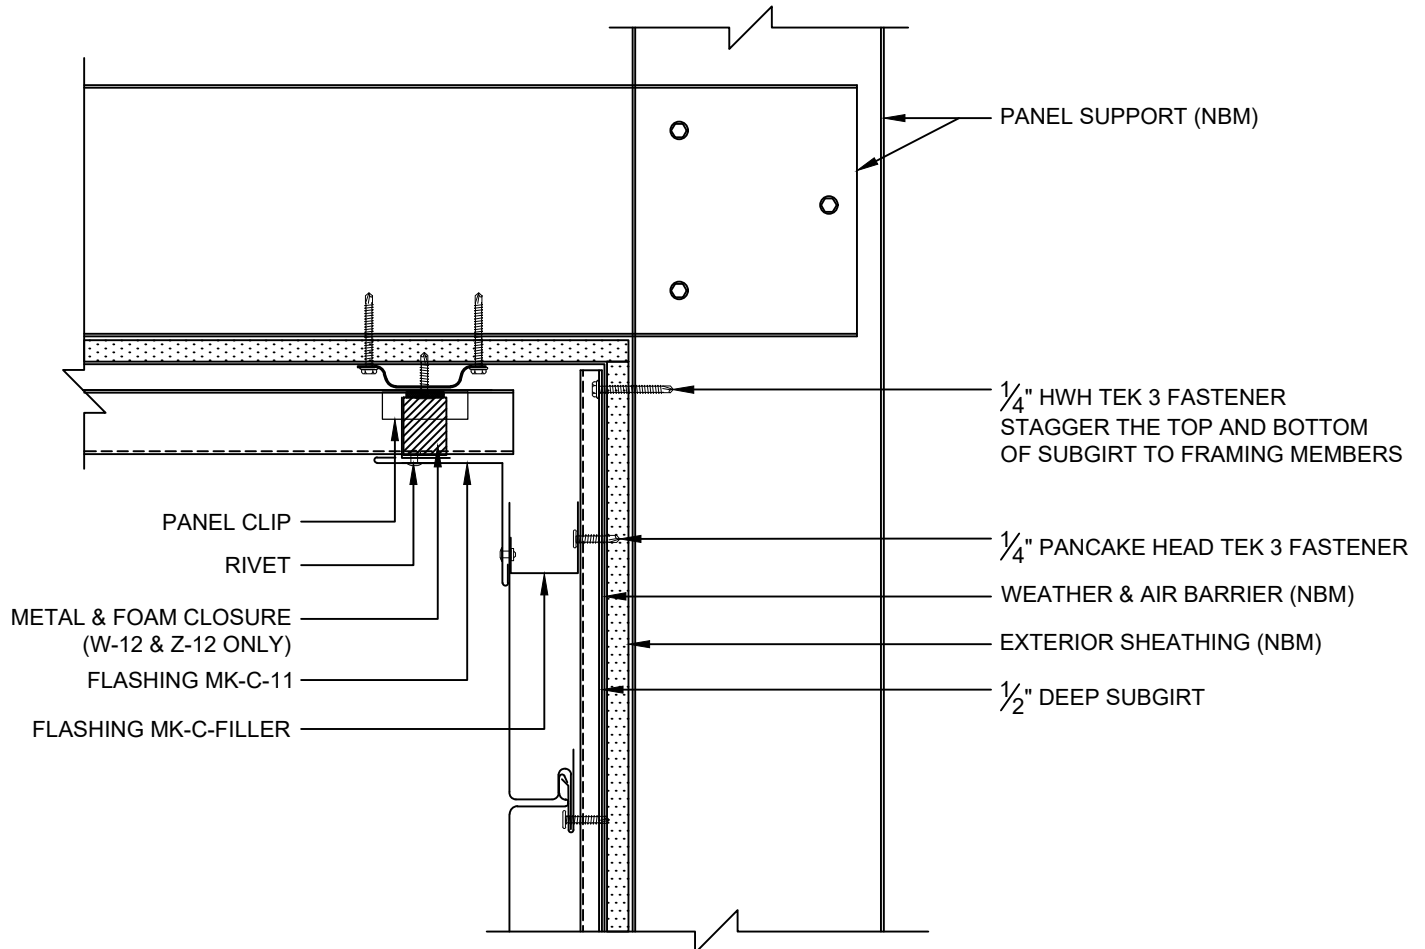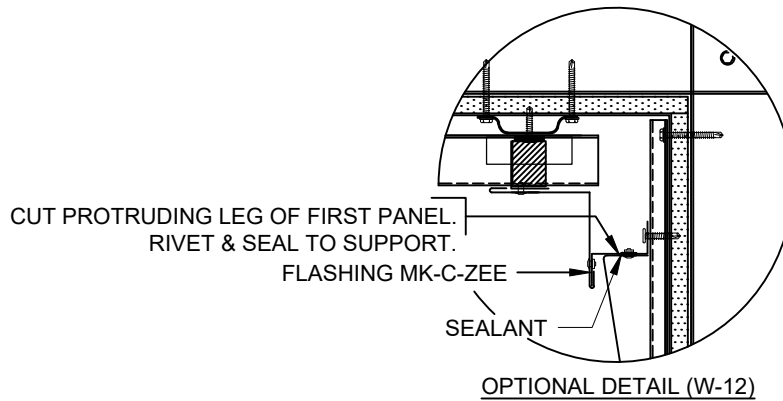

BACK SOFFIT DETAIL


*NBM=(NOT BY MORIN)

Horizontal Installation

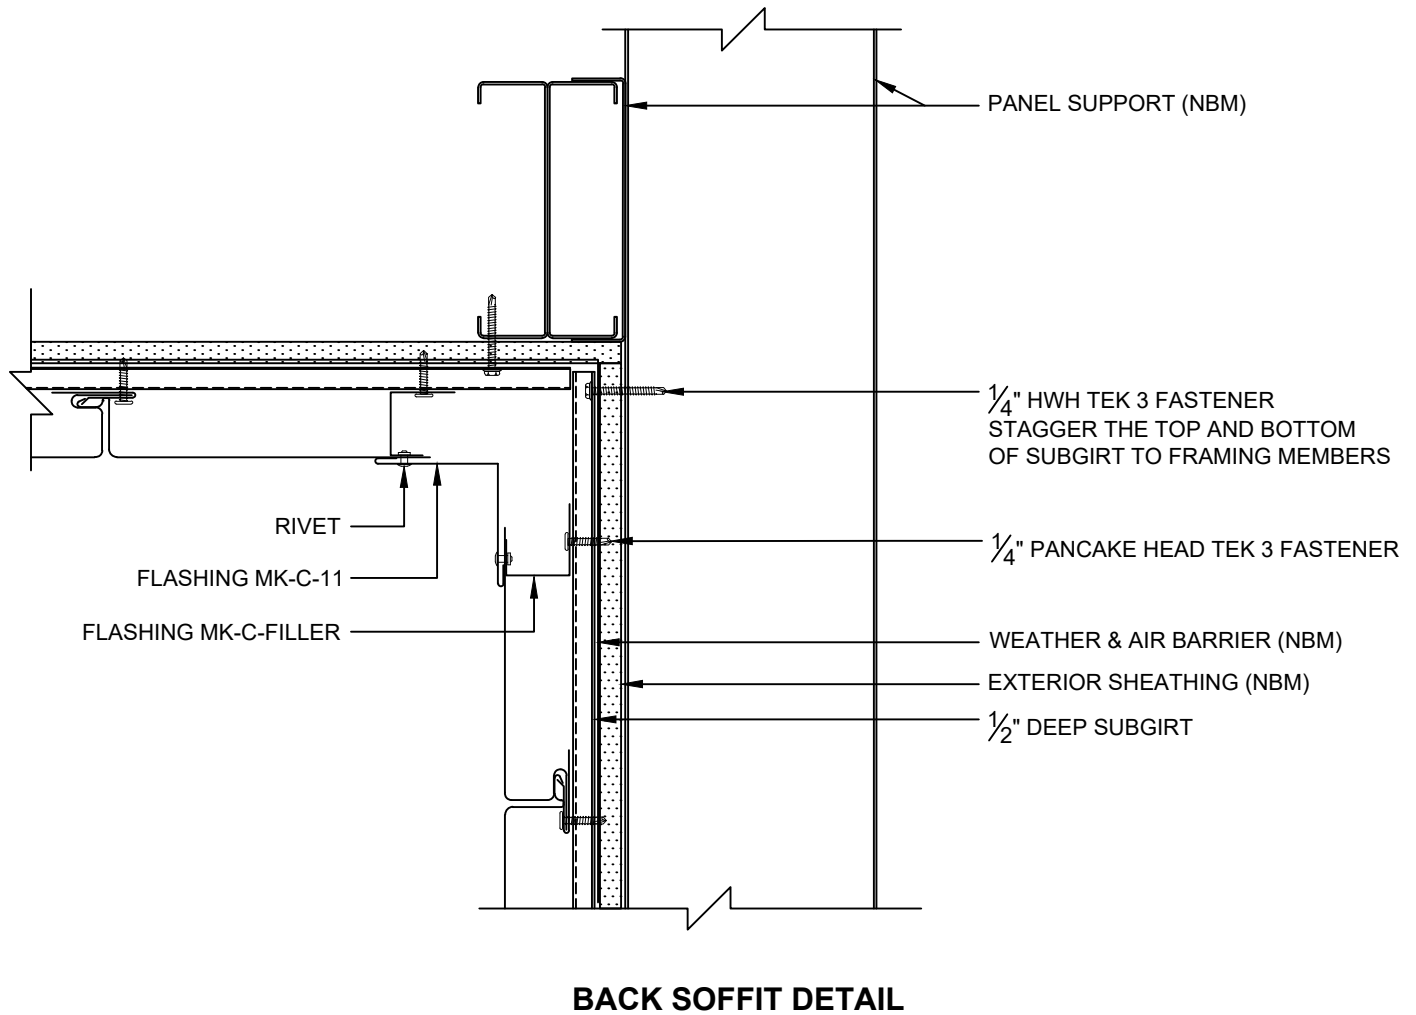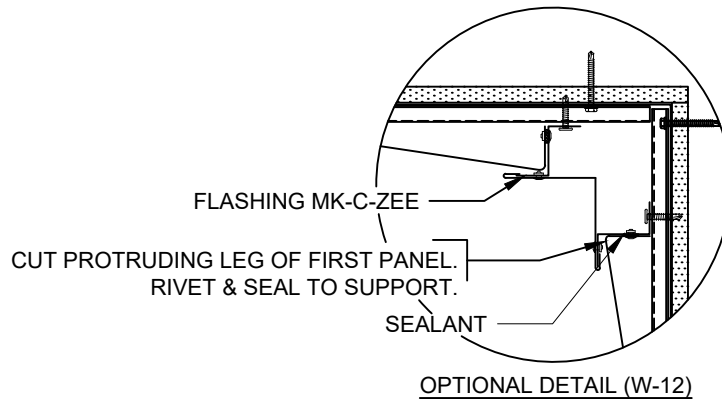

*NBM=(NOT BY MORIN)


Horizontal Installation

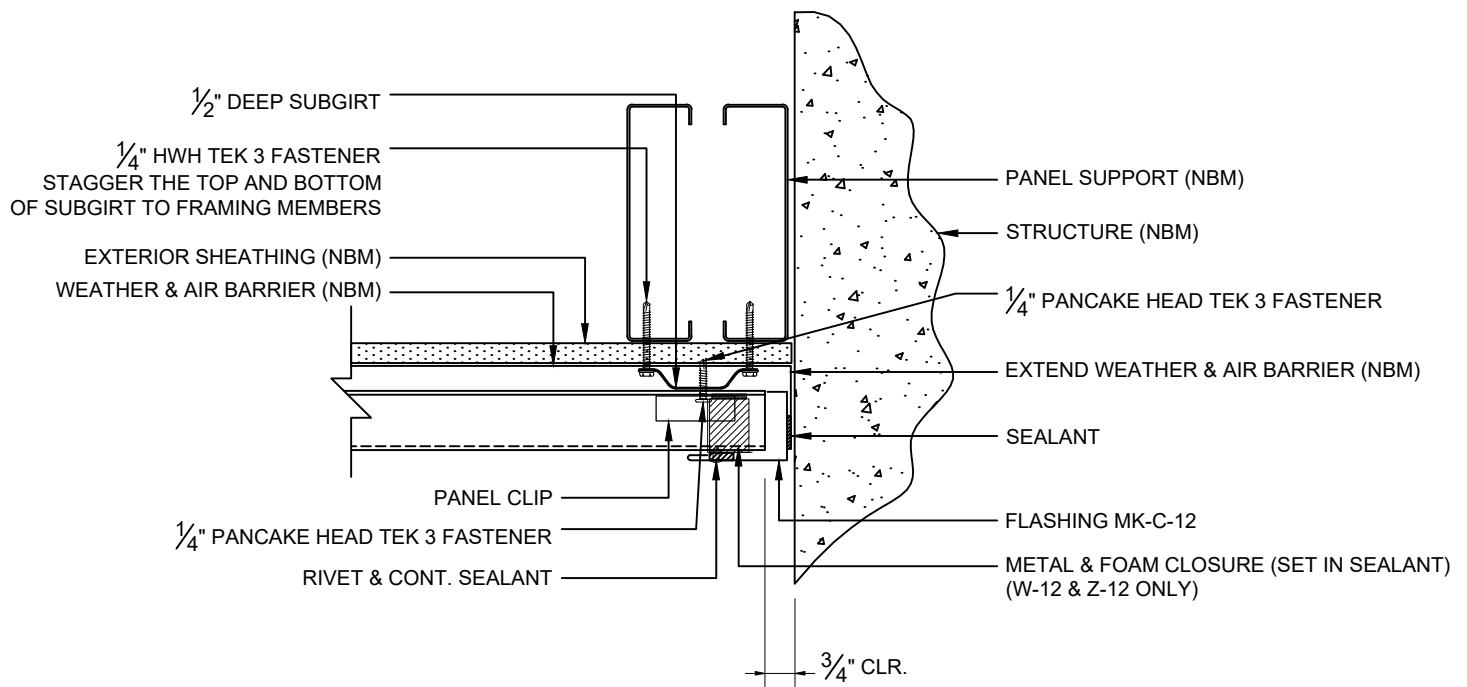

ENDWALL DETAIL

*NBM=(NOT BY MORIN)

Horizontal Installation

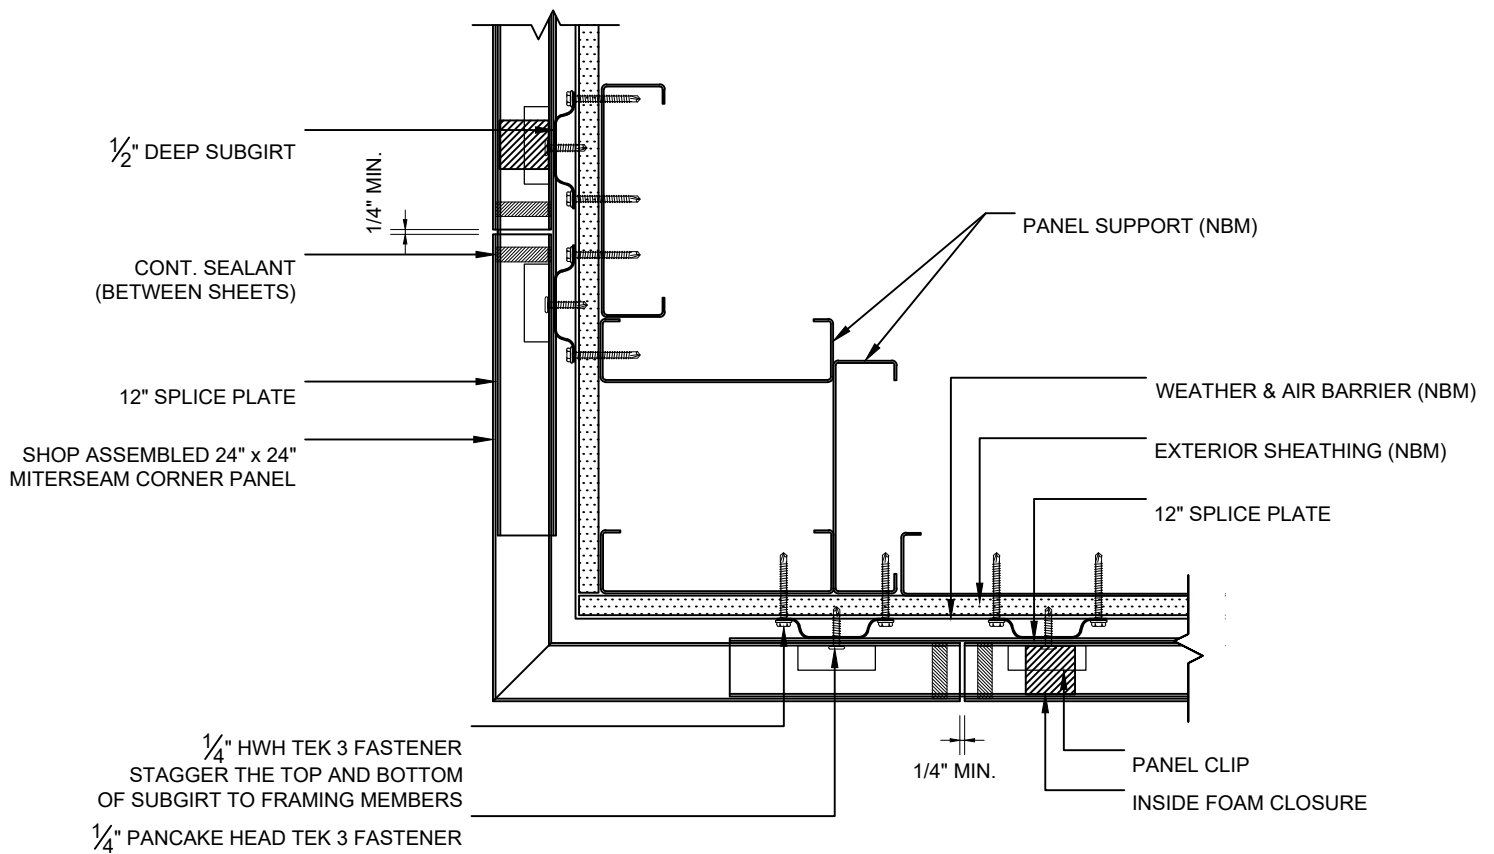


OUTSIDE CORNER (MITERSEAM) DETAIL

CORNER TO BE INSTALLED
AT SAME TIME AS PANELS

*NBM=(NOT BY MORIN)


Horizontal Installation

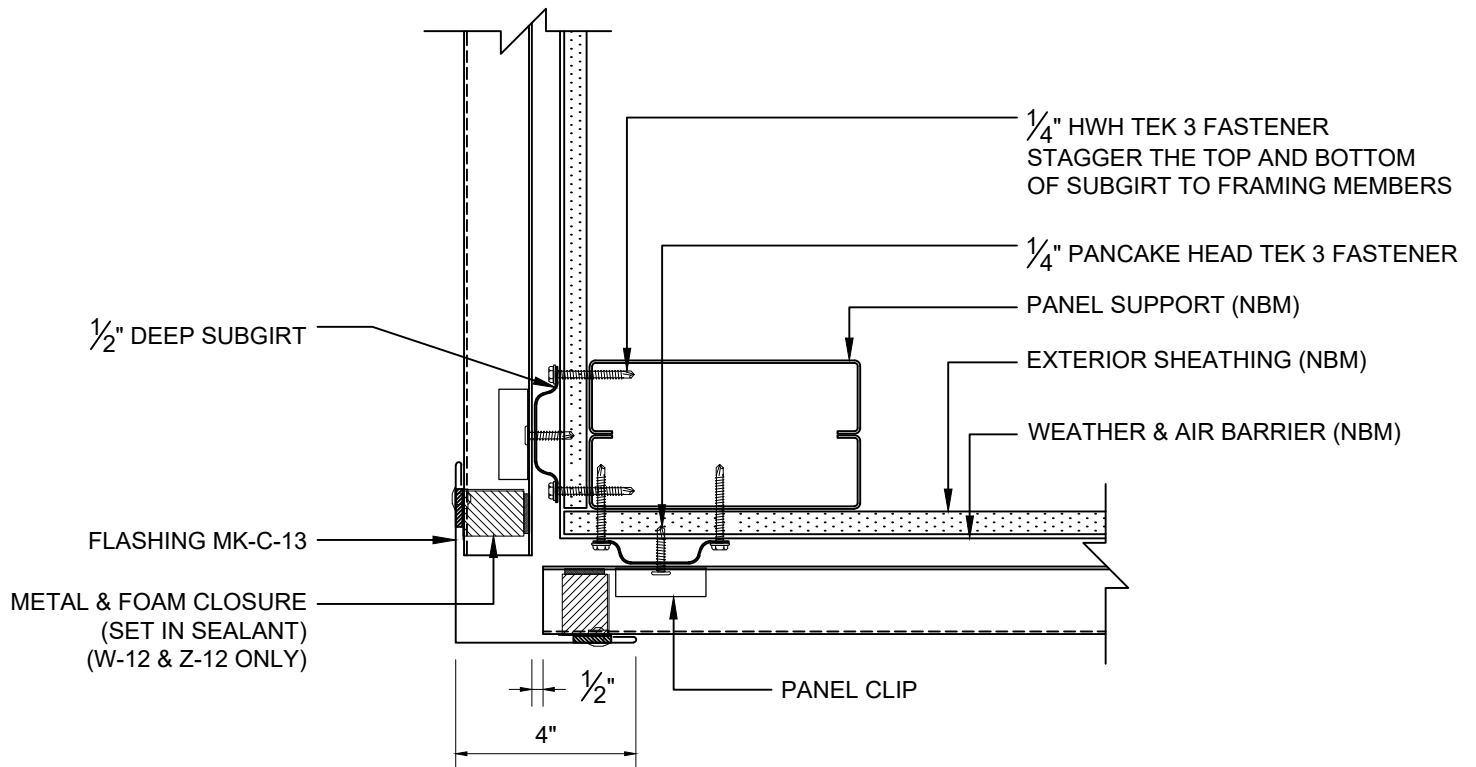

OUTSIDE CORNER DETAIL

*NBM=(NOT BY MORIN)

Horizontal Installation

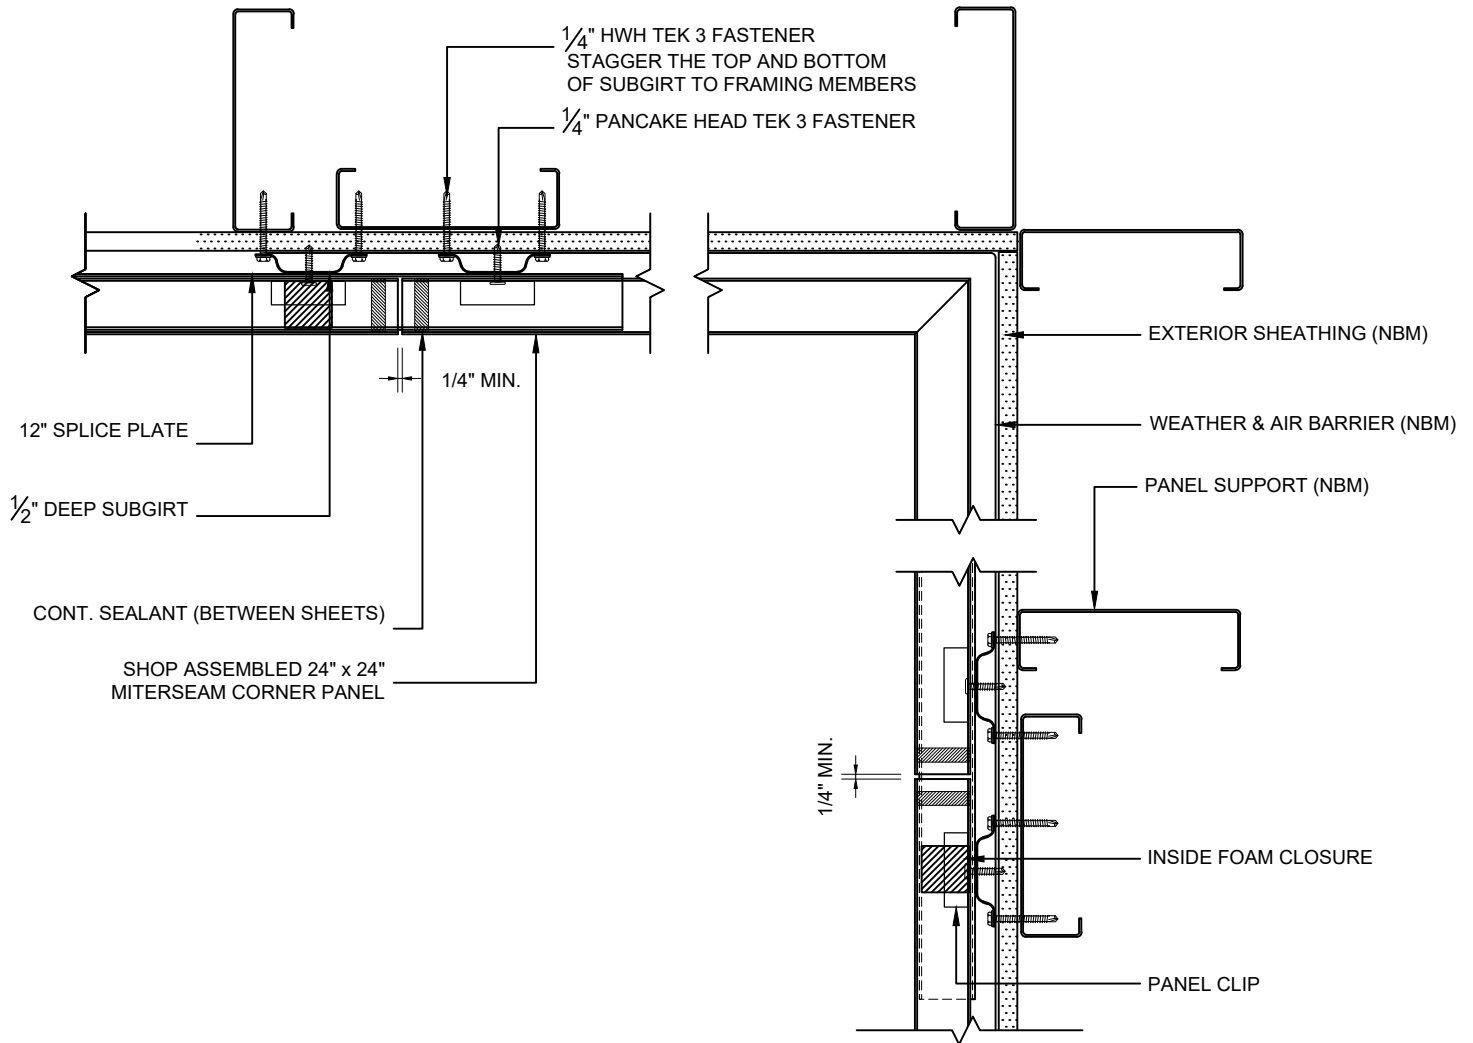


INSIDE CORNER (MITERSEAM) DETAIL

CORNER TO BE INSTALLED
AT SAME TIME AS PANELS

*NBM=(NOT BY MORIN)


Horizontal Installation

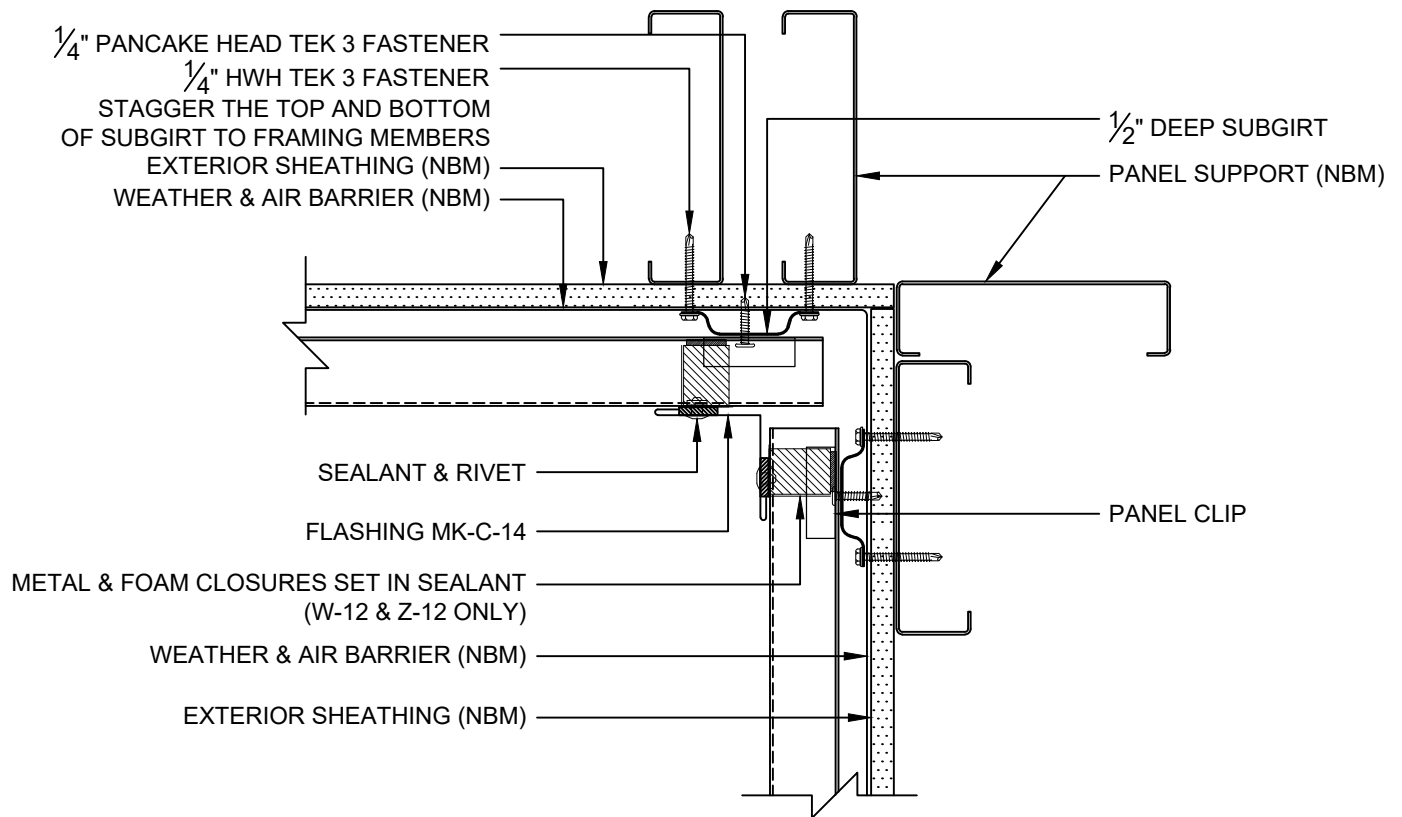

INSIDE CORNER DETAIL

*NBM=(NOT BY MORIN)


Horizontal Installation

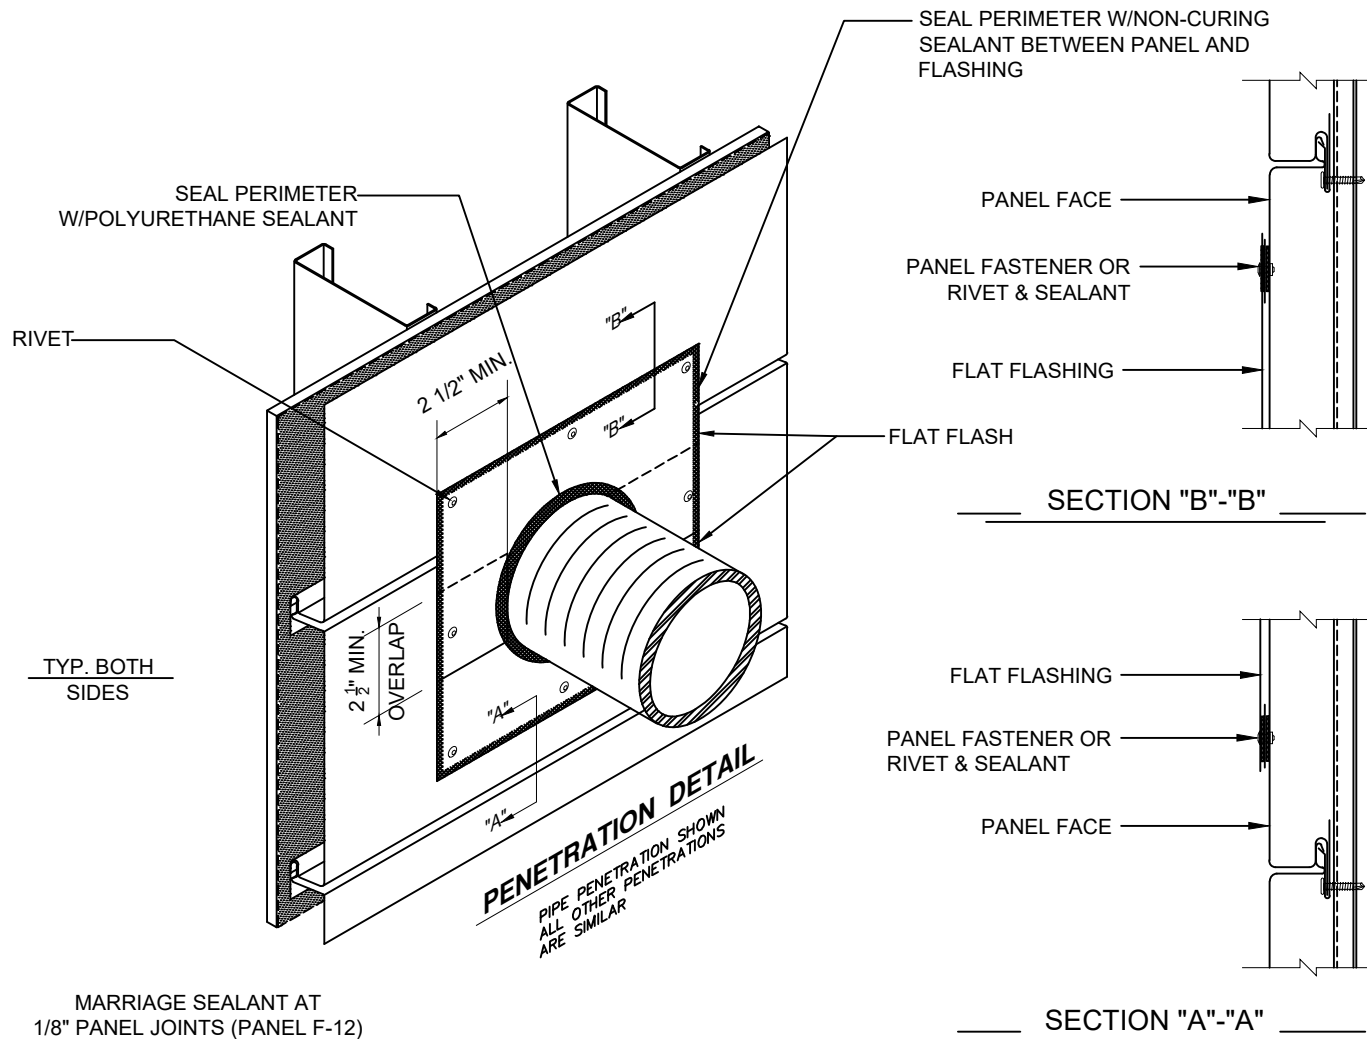

PENETRATION DETAIL (F-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

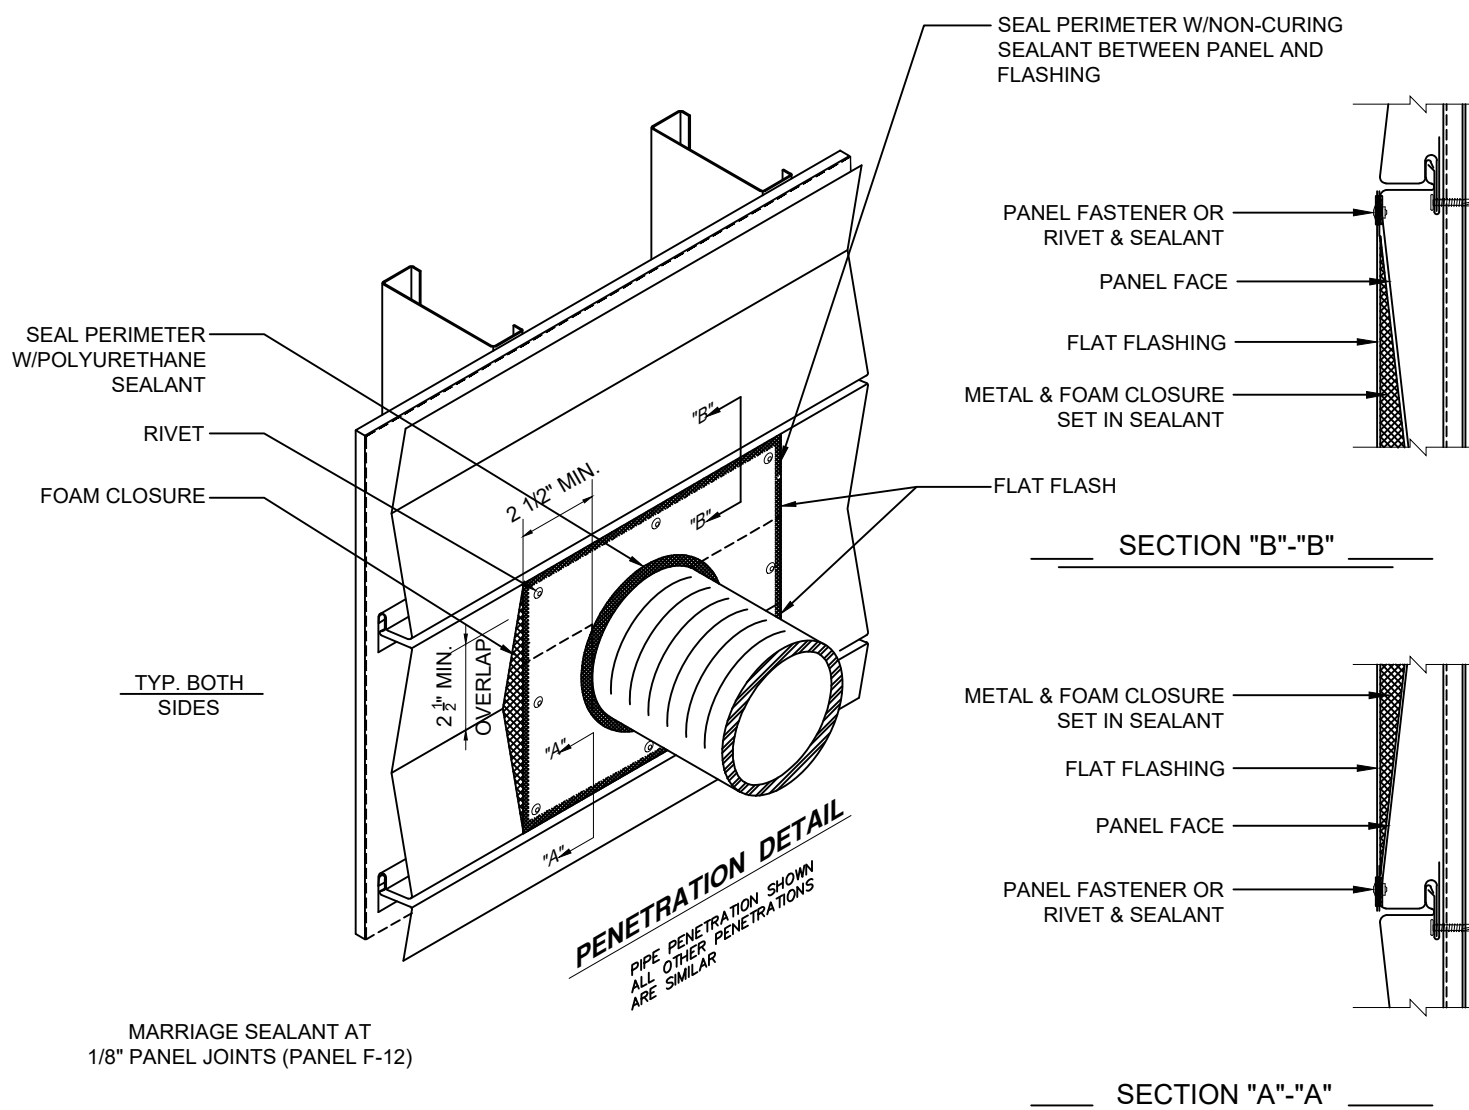

PENETRATION DETAIL (W-12)

*NBM=(NOT BY MORIN)


Horizontal Installation

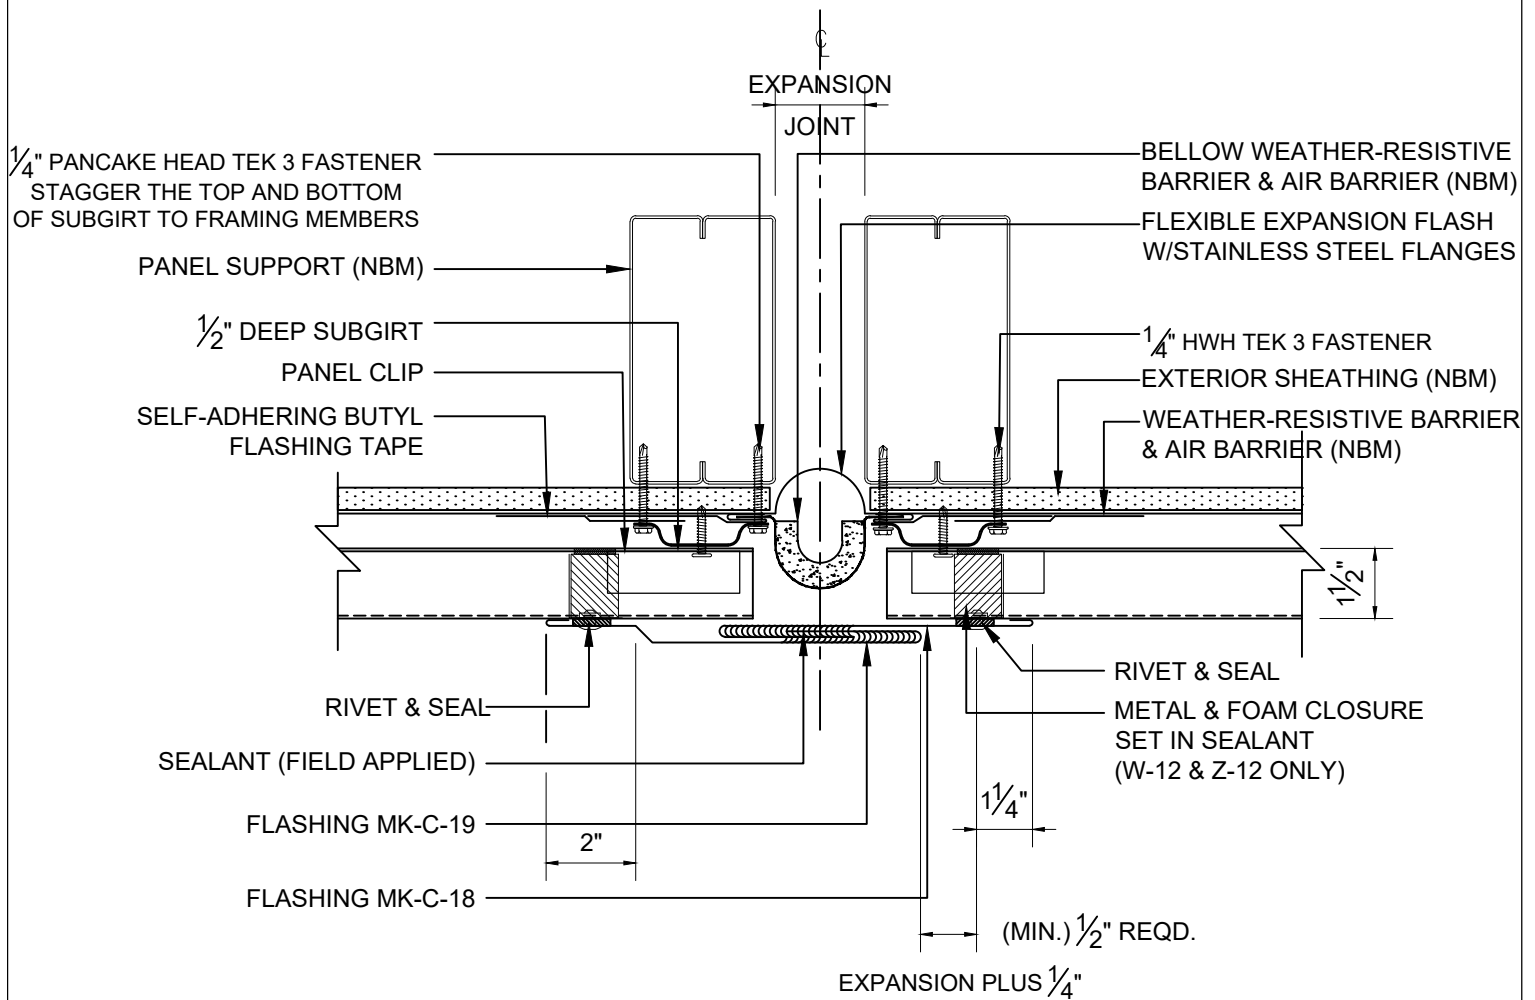

EXPANSION DETAIL

*NBM=(NOT BY MORIN)


Horizontal Installation

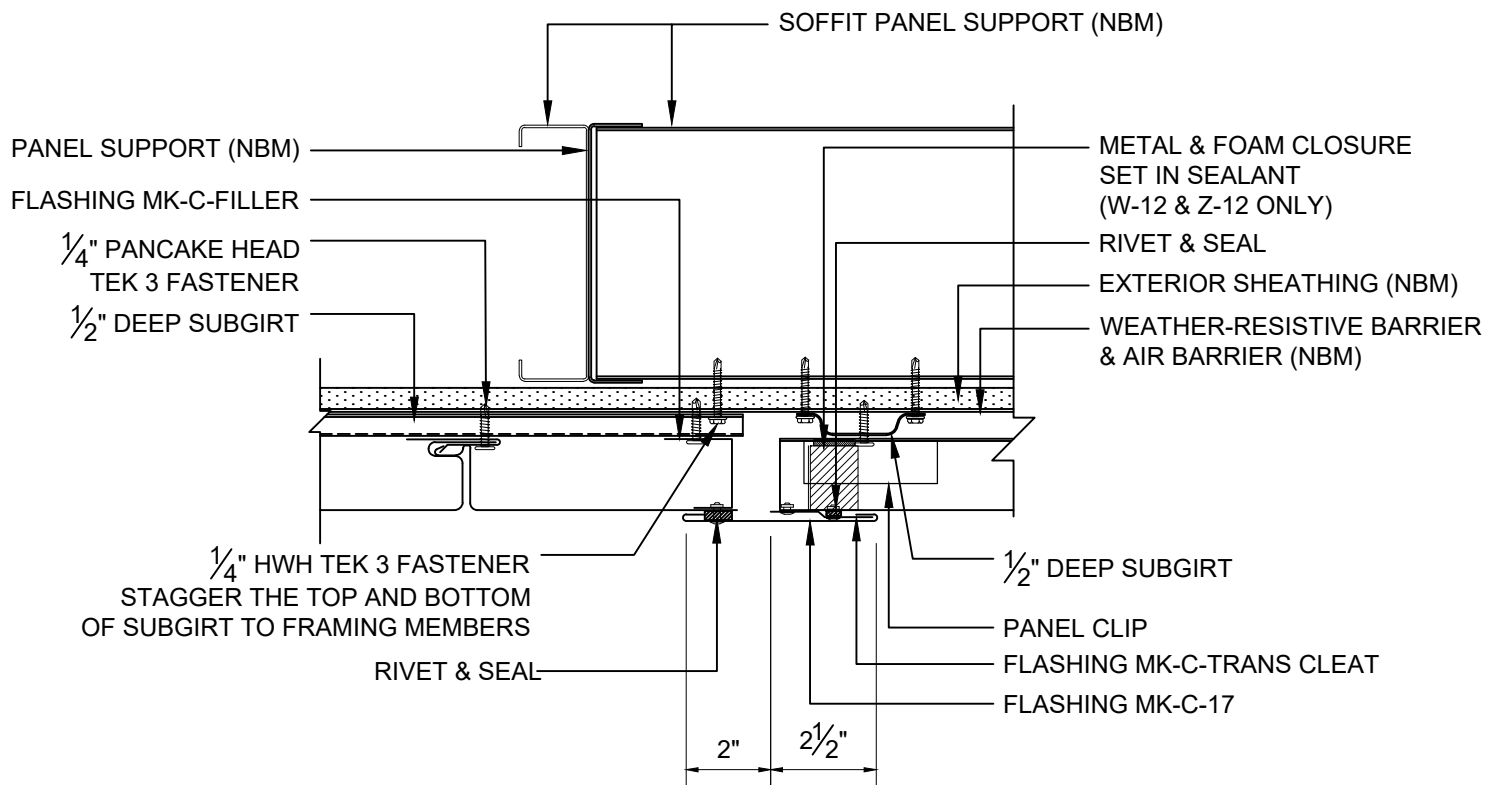

PANEL TRANSITION DETAIL

*NBM=(NOT BY MORIN)

Horizontal Installation

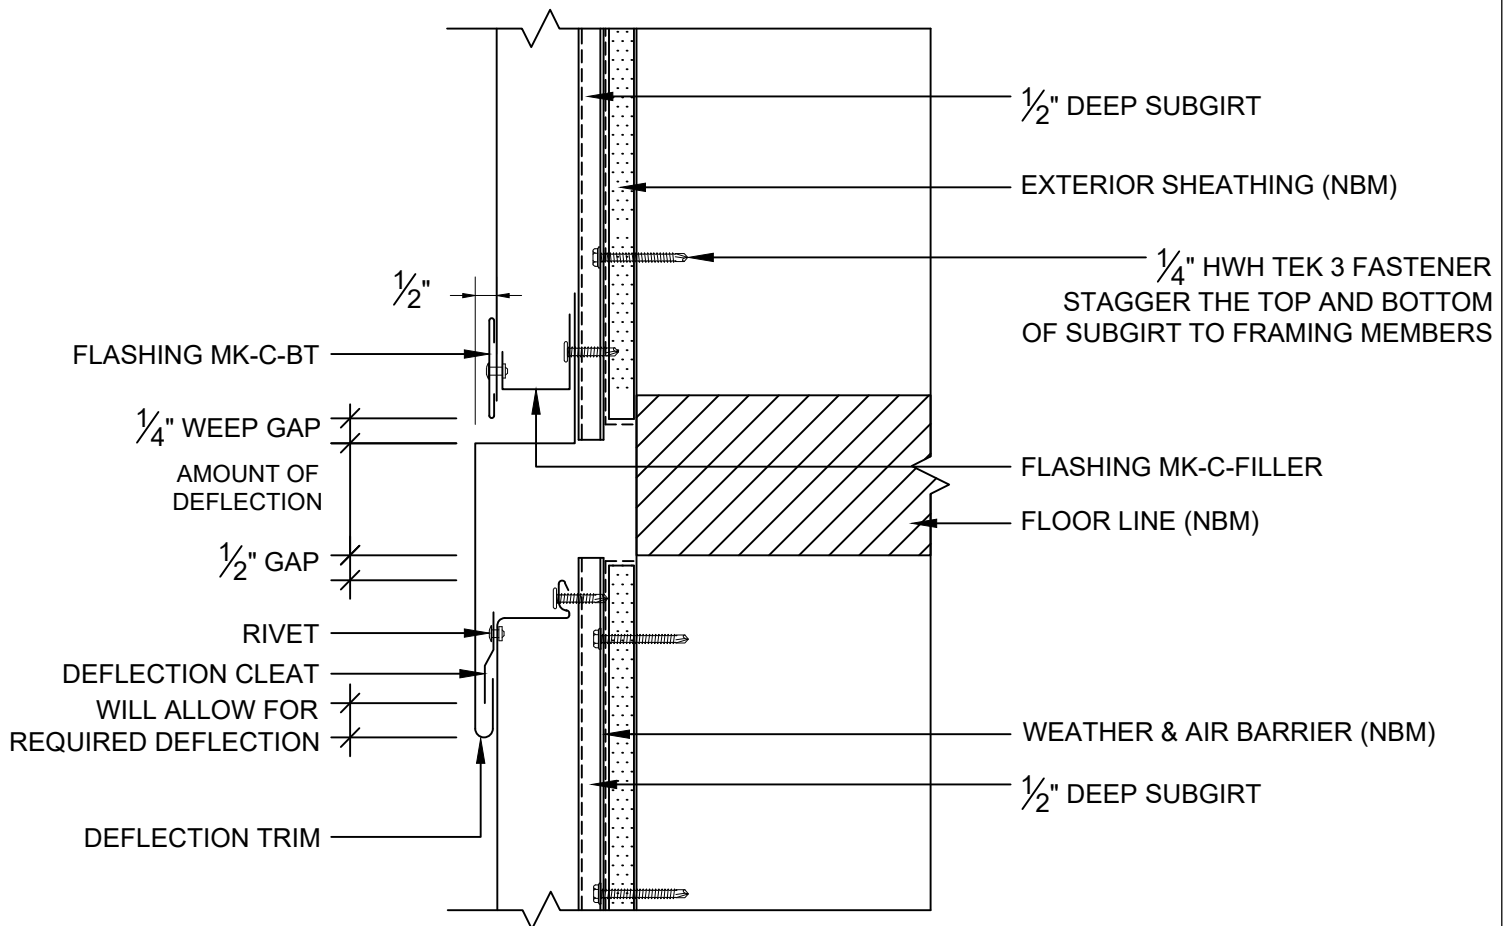

DEFLECTION JOINT DETAIL

*NBM=(NOT BY MORIN)

Contact Details

USA

HQ / East

685 Middle Street | Bristol
CT 06010

T: 1-800-640-9501

West

10707 Commerce Way | Fontana
CA 92337

T: 1-800-700-6140

South

1975 Eidson Drive | DeLand
FL 32724

T: 1-800-640-9501

www.morincorp.com



For the latest product information please visit www.morincorp.com

Care has been taken to ensure that the contents of this publication are accurate, but Morin Corporation does not accept responsibility for errors or for information that is found to be misleading. Suggestions for, or description of, the end use or application of products or methods of working are for information only and Morin Corporation accepts no liability in respect thereof.

Morin[®]
By Kingspan