

Metal Wall & Roof Systems
North America




Morin SymmeTry Series® Metal Roof System Installation Details

Innovative Single Element Building Envelope Solution



Morin®
By Kingspan

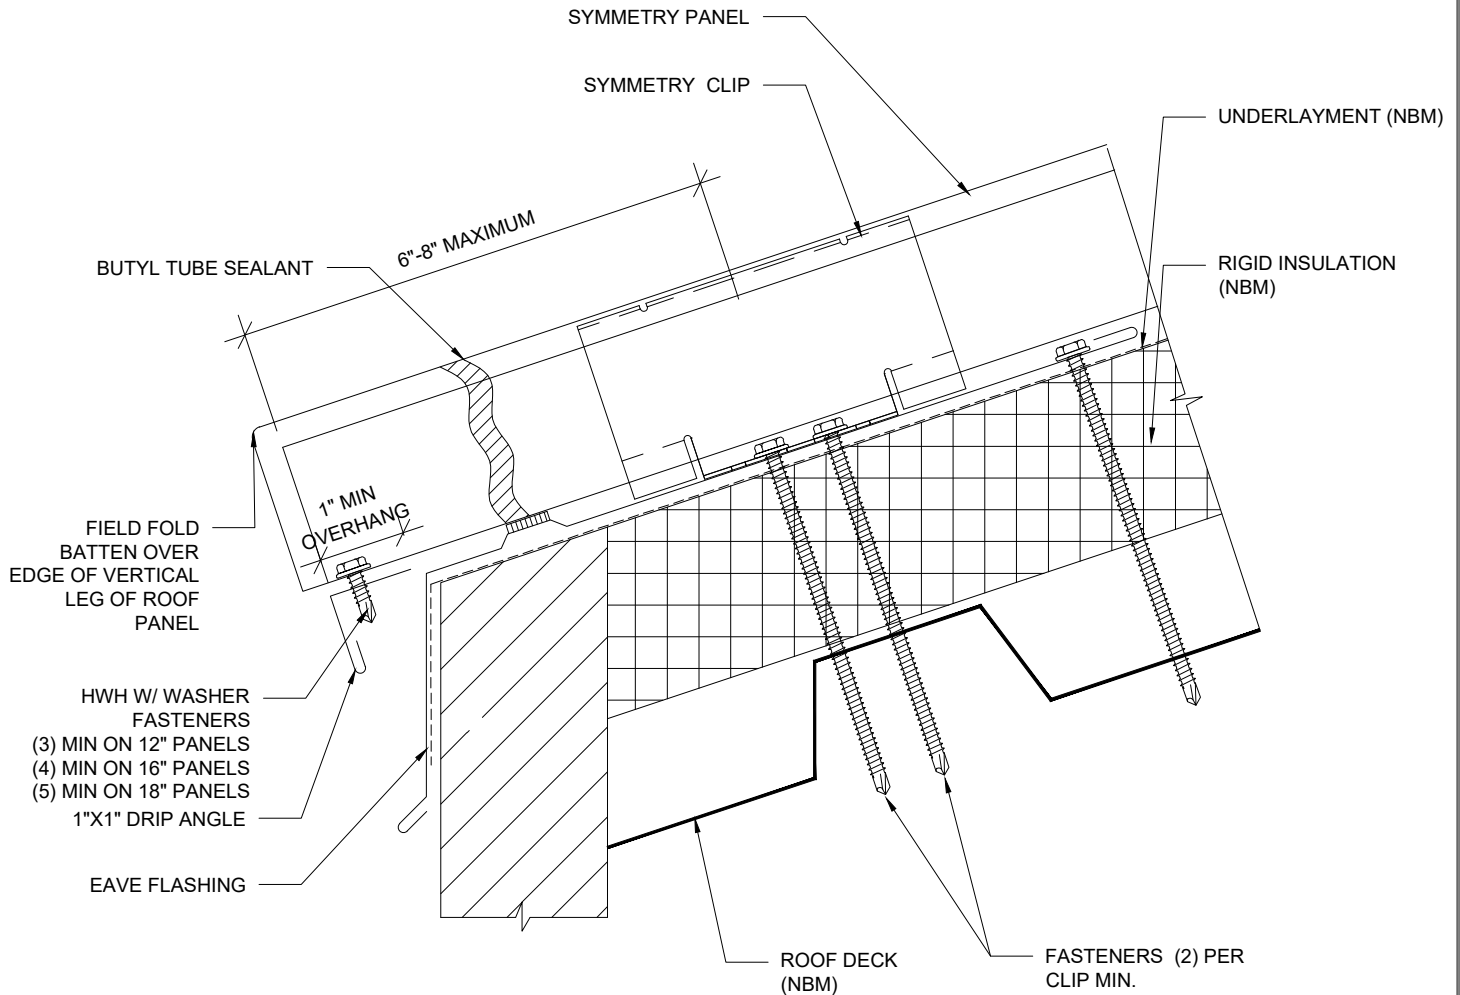

Note:

- Clip fasteners must be long enough to fasten into low cells of decking.


Eave design must be able to allow for the total amount of expansion of the panel if the ridge or mid-point is fixed. A drip trim should be used to stiffen the flat of the panel and block wind driven rain. This piece also assists in limiting the amount of bow of the flat under high wind.

Since sealant between roof underlayment and panel may limit expansion or rupture, protection against wind blown water infiltration is provided by folding the panel under, which allows for thermal expansion.

Detail must be designed to allow for maximum thermal movement. Floating eave requires fixed ridge or mid-point of panel length.

FLOATING LOW EAVE DETAIL

*NBM = Not By Morin

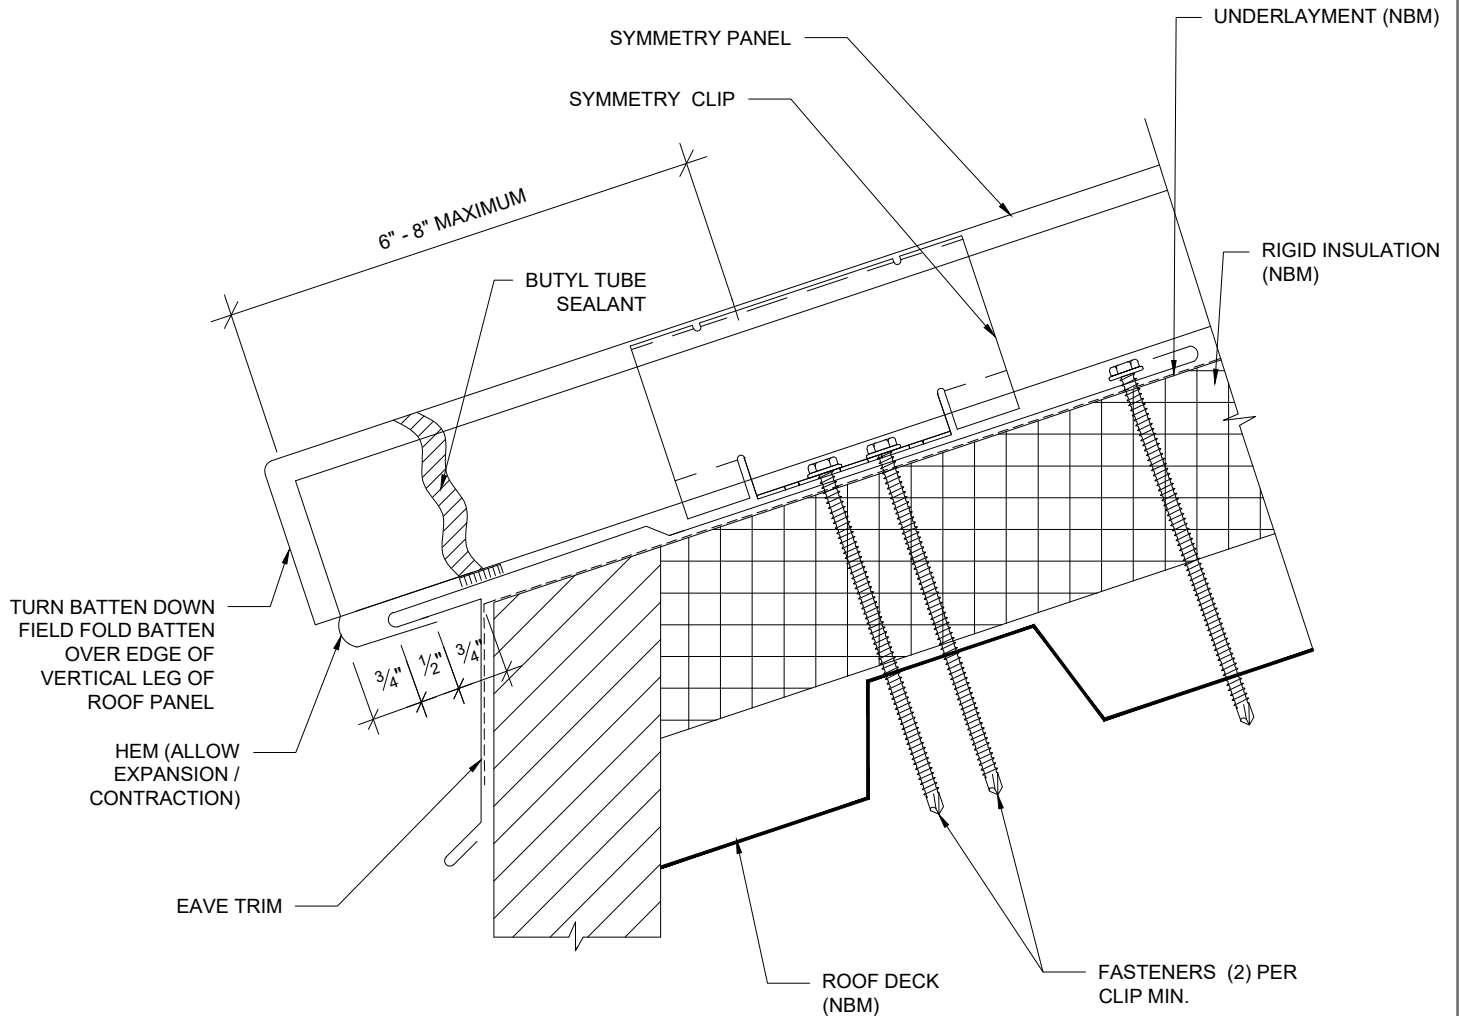

Note:


- Clip fasteners must be long enough to fasten into low cells of decking.

Eave design must be able to allow for the total amount of expansion of the panel if the ridge or mid-point is fixed. A drip trim should be used to stiffen the flat of the panel and block wind driven rain. This piece also assists in limiting the amount of bow of the flat under high wind.

Since sealant between roof underlayment and panel may limit expansion or rupture, protection against wind blown water infiltration is provided by folding the panel under, which allows for thermal expansion. Detail must be designed to allow for maximum thermal movement. Floating eave requires fixed ridge or mid-point of panel length.

FLOATING LOW EAVE WITH EXTENDED DRIP DETAIL

*NBM = Not By Morin

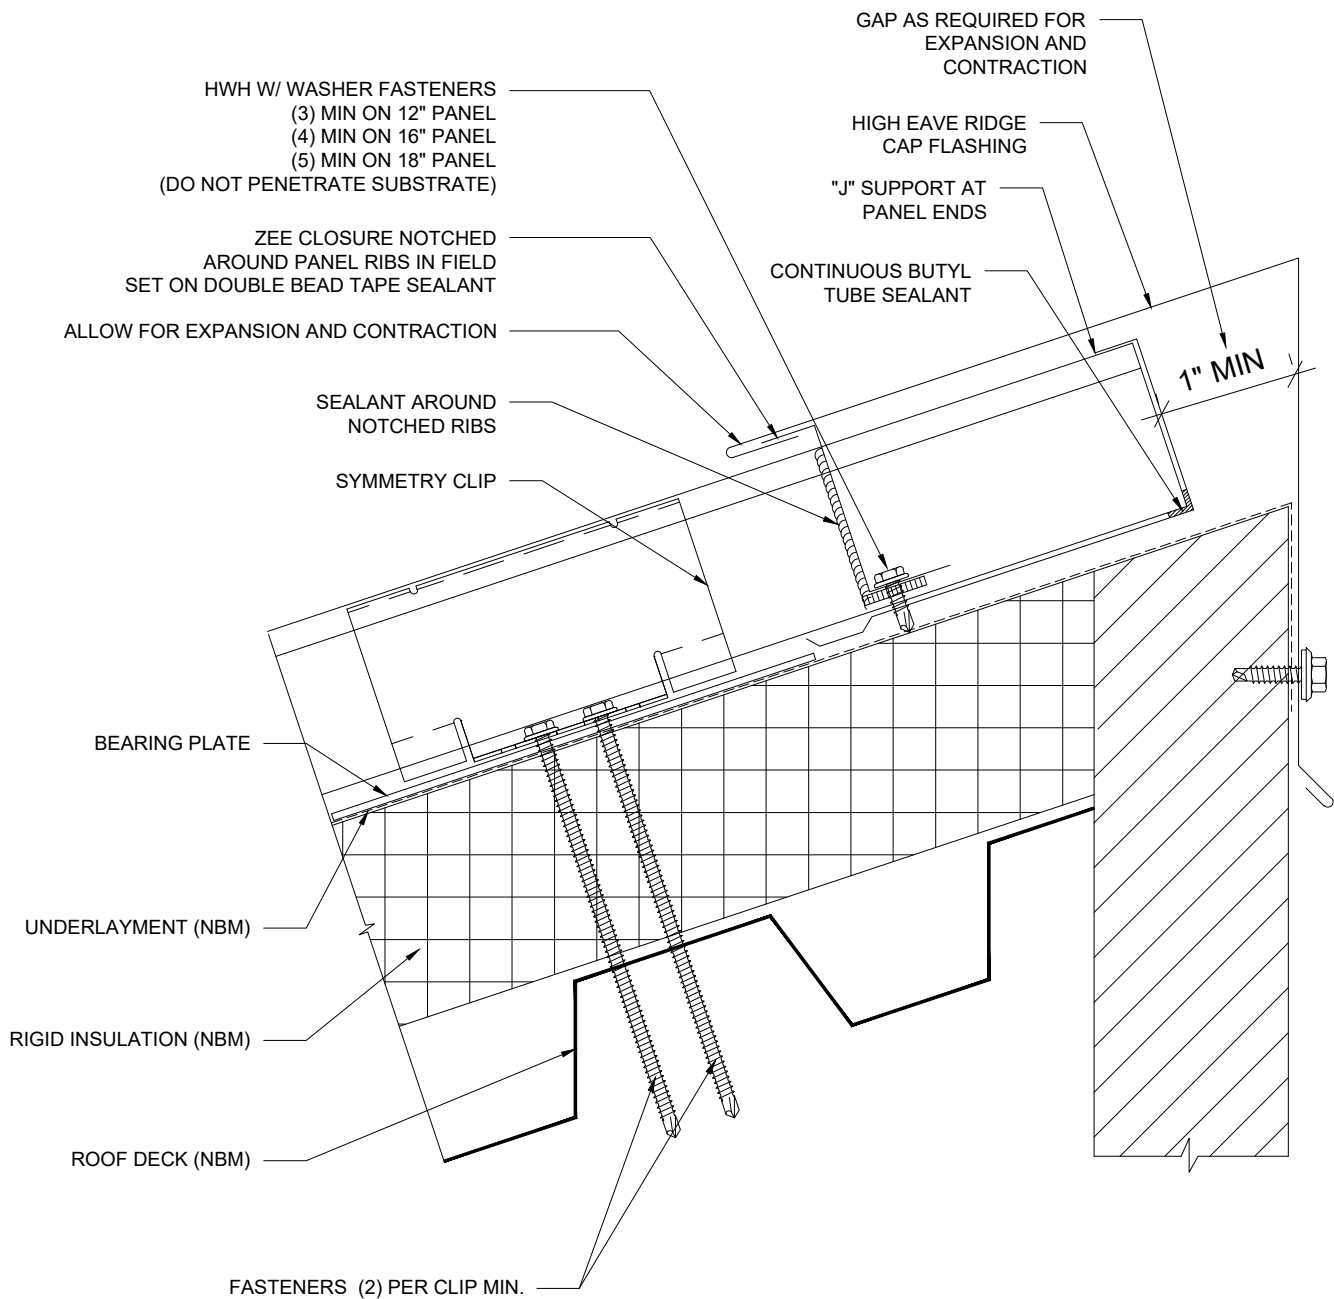


Note:

- Clip fasteners must be long enough to fasten into low cells of decking.
- Use larger J- support for panel with clip relief, pencil ribs and striated.
- Floating high eave requires fixed low eave or mid-point of roof.
- Gap as required for thermal movement.
- Slip joint at ridge cap to Z closure is required to allow project thermal movement.

FLOATING HIGH EAVE DETAIL

*NBM = Not By Morin

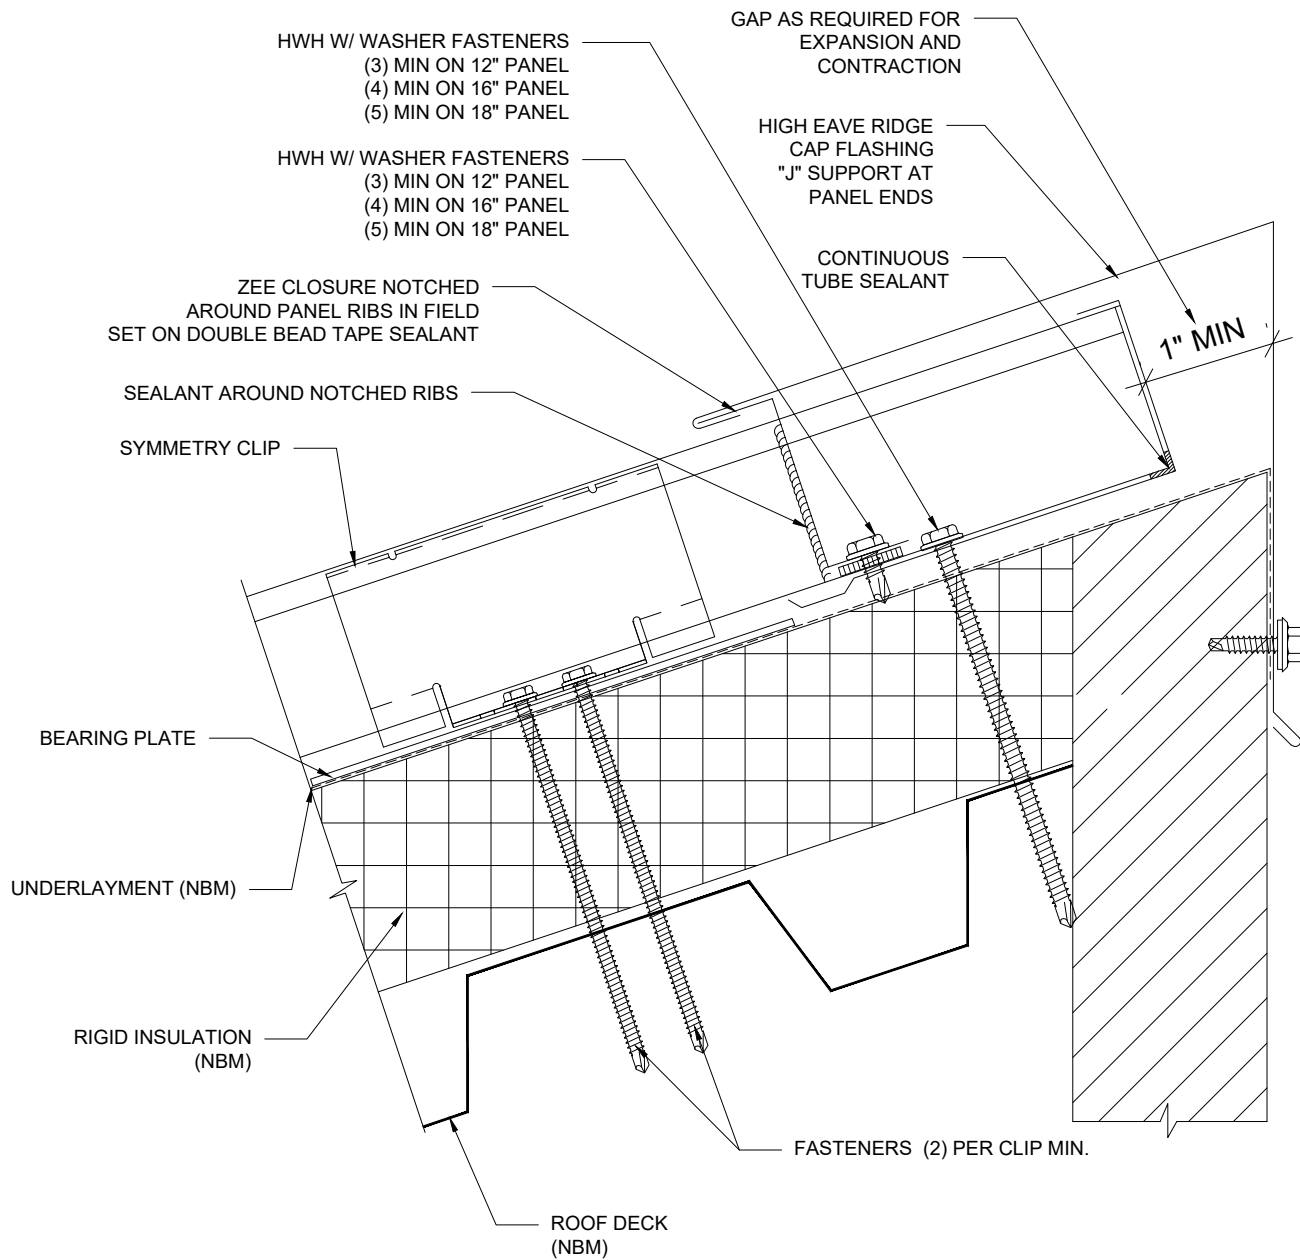


Note:

- Clip fasteners must be long enough to fasten into low cells of decking.
- Use larger J- support for panel with clip relief, pencil ribs and striated.
- Fixed high eave requires floating low eave and mid-point of roof.

FIXED HIGH EAVE DETAIL

*NBM = Not By Morin

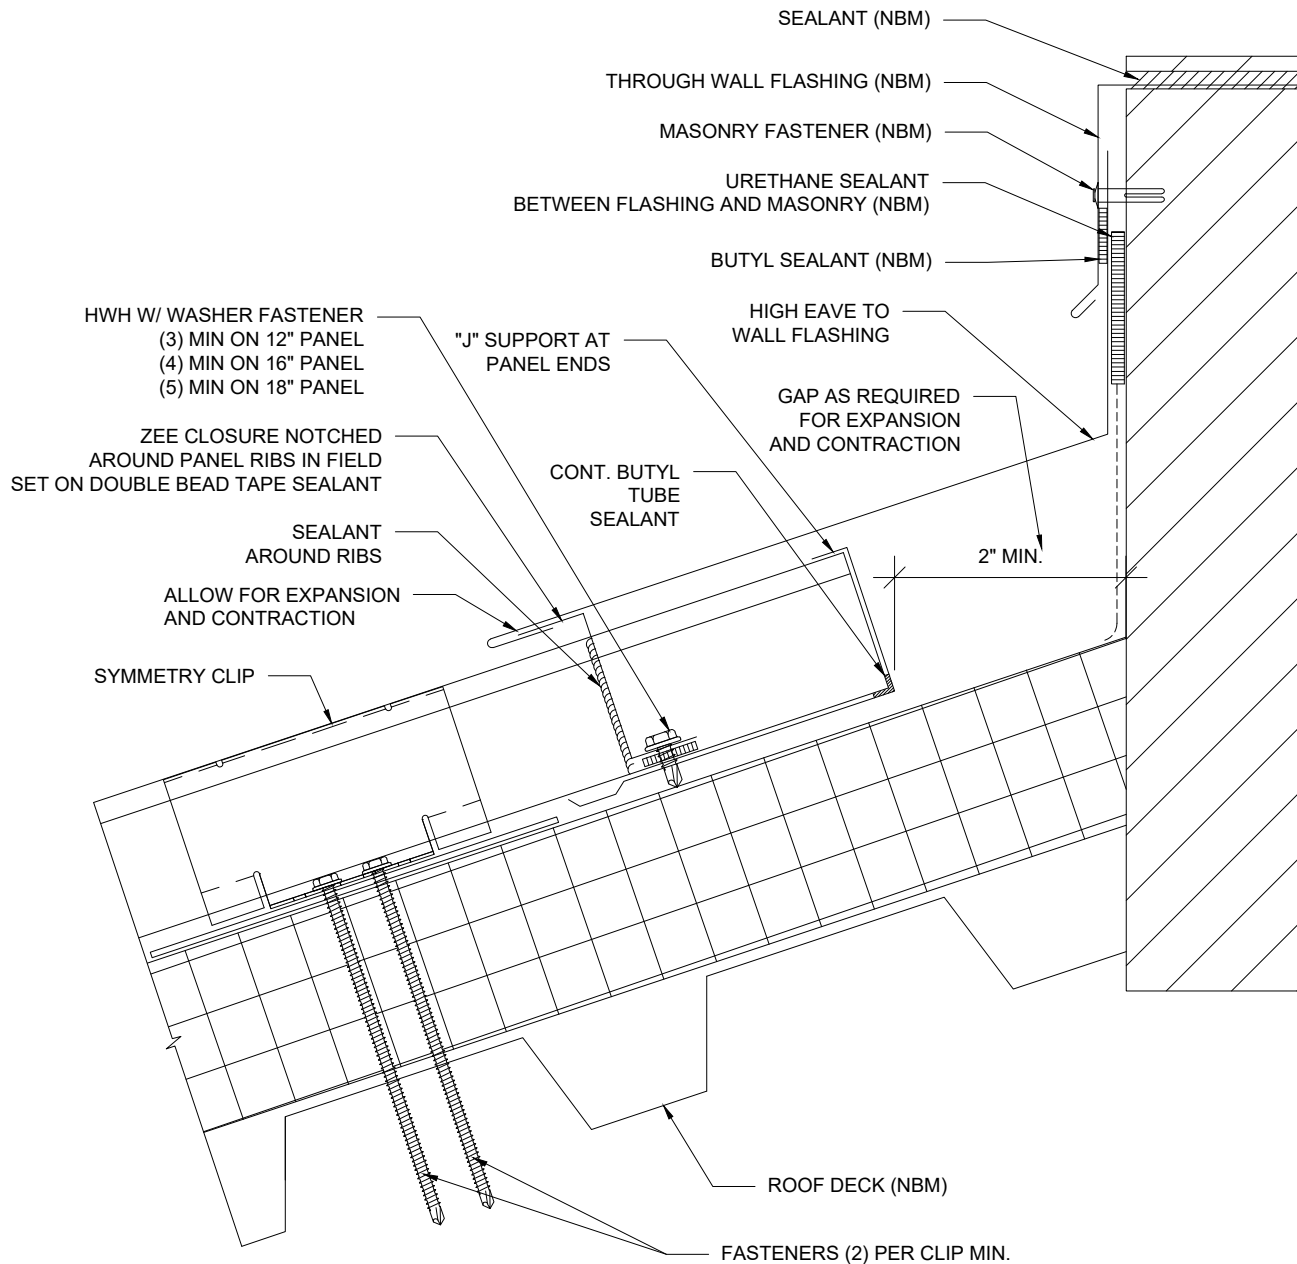


Note:

- Clip fasteners must be long enough to fasten into low cells of decking.
- Use larger J- support for panel with clip relief, pencil ribs and striated.
- High eave to wall flashings are similar to ridge conditions.
- Attention must be given to the design for sealing and panel movement.
- Where snow buildup is a concern, the design of the trim must take into account the excess loading.
- Use larger J- support for panel with clip relief, pencil ribs and striated.
- Slip joint at ridge cap to Z closure is required to allow project thermal movement.

FLOATING WALL TO ROOF HIGH EAVE DETAIL

*NBM = Not By Morin

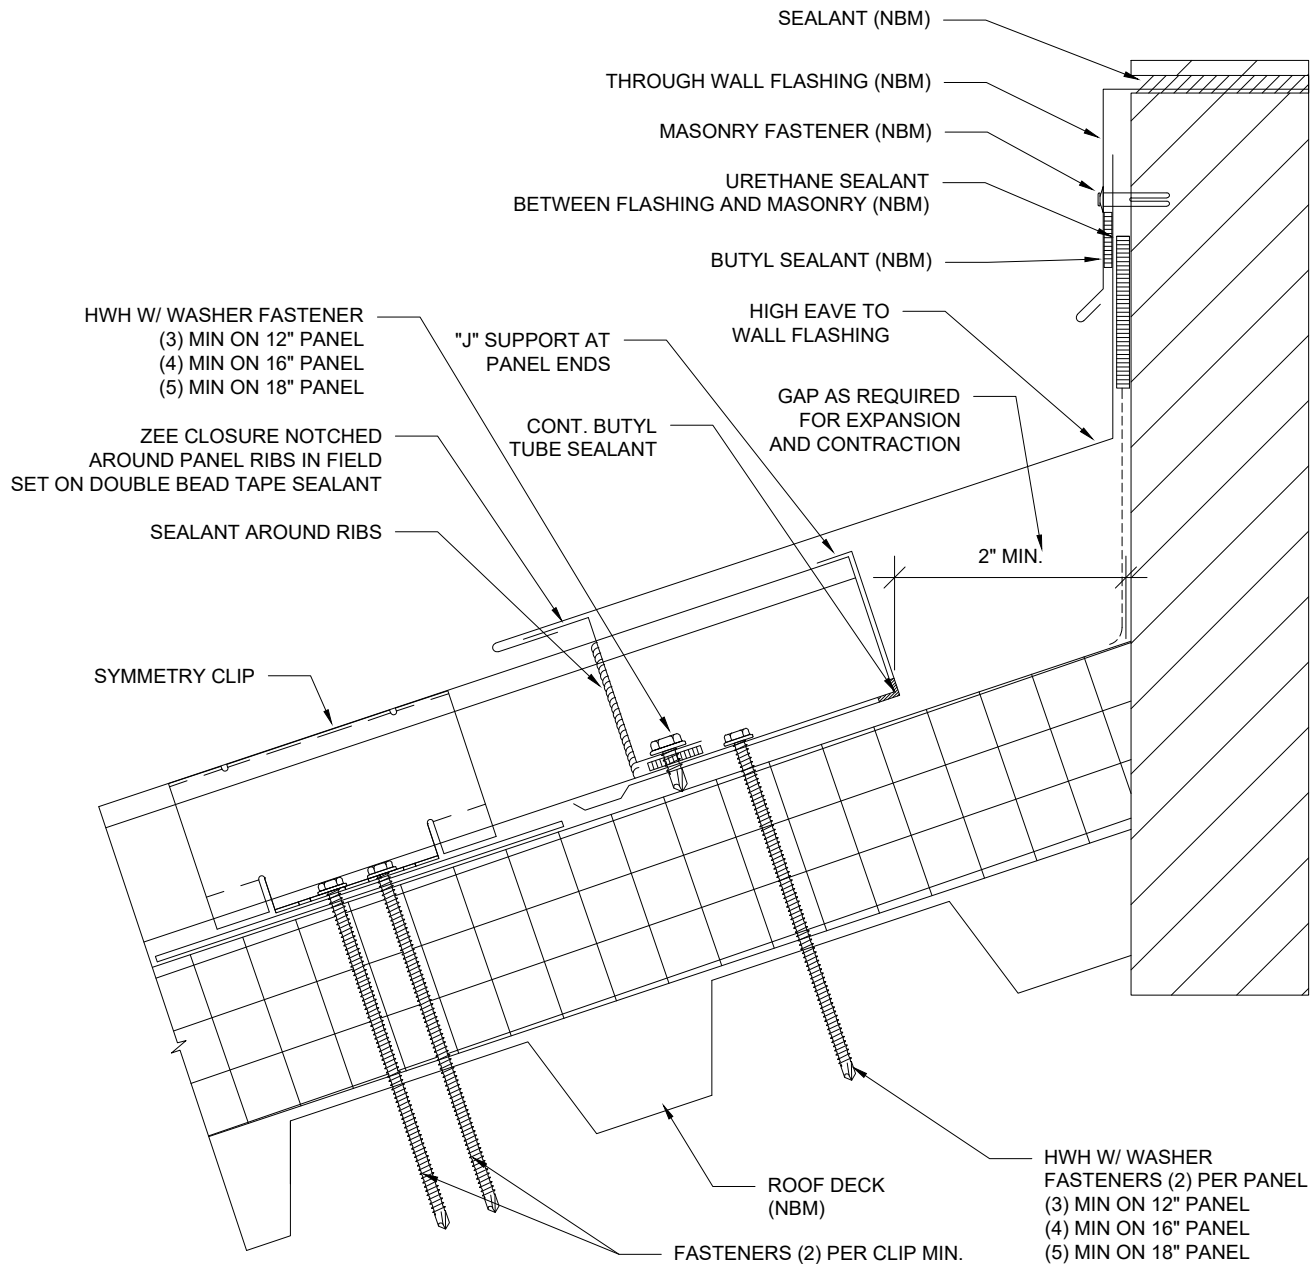


Note:

- Clip fasteners must be long enough to fasten into low cells of decking.
- Use larger J- support for panel with clip relief, pencil ribs and striated.
- High eave to wall flashings are similar to ridge conditions.
- Where snow buildup is a concern, the design of the trim must take into account the excess loading.
- If ridge condition is required to "float", slip joints must be made to accommodate the required expansion.

FIXED WALL TO ROOF HIGH EAVE DETAIL


*NBM = Not By Morin

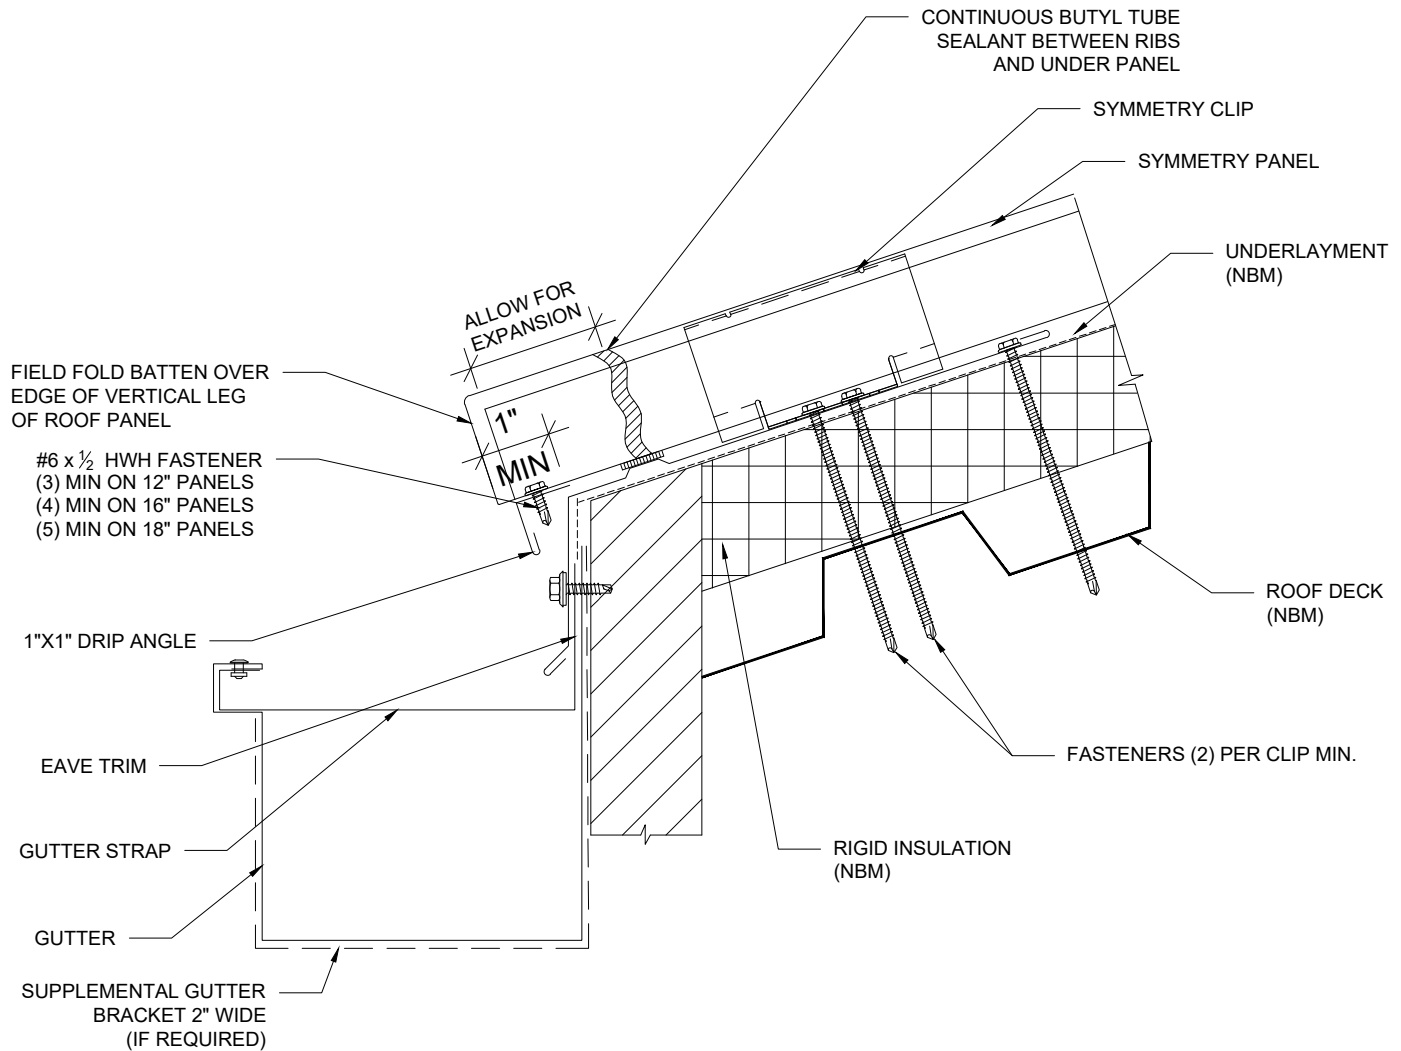

Consideration during design must be given to capacity, overflow, accessibility for cleaning, and aesthetics. Attachments must provide structural supports and allow for thermal movement. Protection from ice and snow must be considered during the detailing of this condition. Edge of gutter should be reinforced in areas of snow or ice accumulation. The edge of the gutter should be below the roof plane to allow for evacuation of the snow build-up. The gutter should be independent of the roof panel as not to inhibit the thermal movement of the roof. Floating eave requires fixed ridge or mid-point of panel length.

FLOATING LOW EAVE WITH GUTTER DETAIL


*NBM = Not By Morin

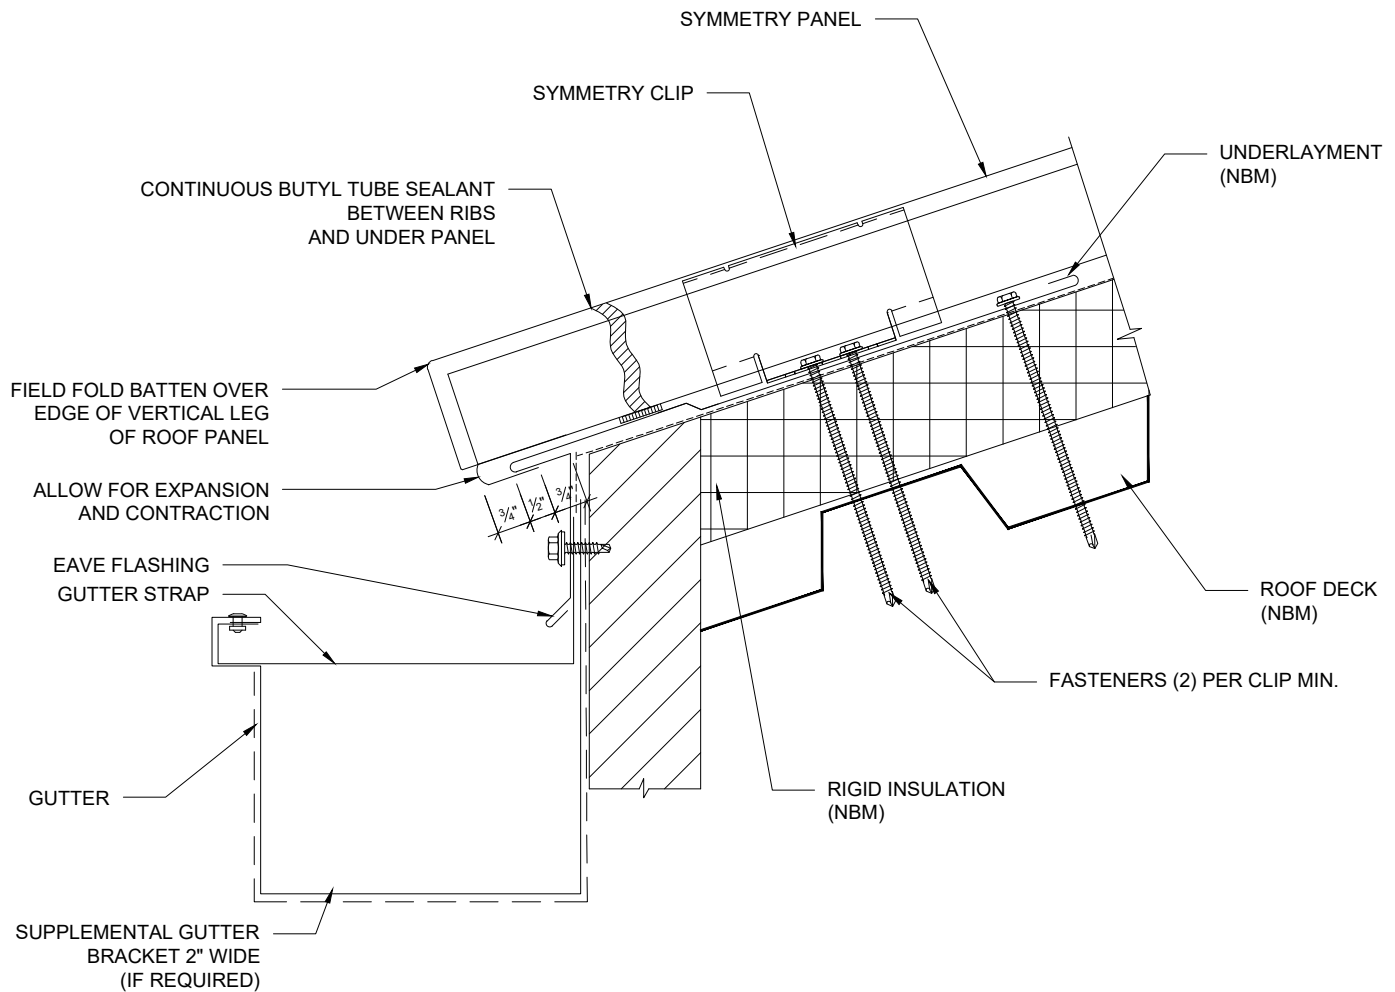

Consideration during design must be given to capacity, overflow, accessibility for cleaning, and aesthetics. Attachments must provide structural supports and allow for thermal movement. Protection from ice and snow must be considered during the detailing of this condition. Edge of gutter should be reinforced in areas of snow or ice accumulation. The edge of the gutter should be below the roof plane to allow for evacuation of the snow build-up. The gutter should be independent of the roof panel as not to inhibit the thermal movement of the roof. Floating eave requires fixed ridge or mid-point of panel length.

FLOATING LOW EAVE WITH GUTTER DETAIL
OPTIONAL DETAIL WITH HEM PANEL EDGE

*NBM = Not By Morin

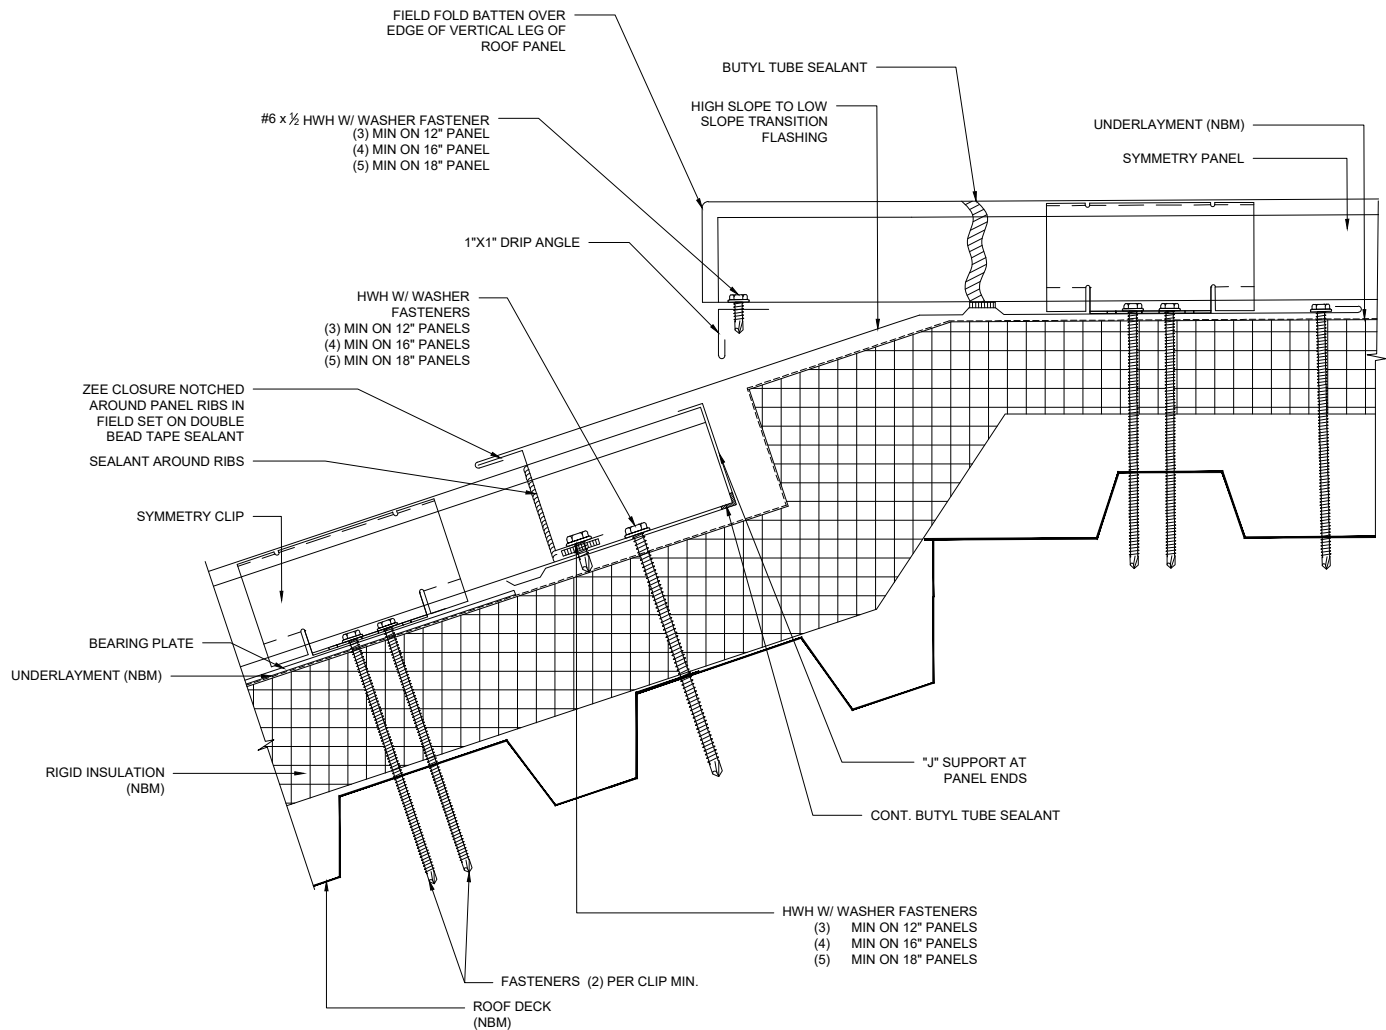


Note:

- Clip fasteners must be long enough to fasten into low cells of decking.
- Use larger J- support for panel with clip relief, pencil ribs and striated.
- Attention must be given to the design for sealing and panel movement.
- Where snow buildup is a concern, the design of the trim must take into account the excess loading.
- If ridge condition is required to "float", slip joints must be made to accommodate the required expansion.
- Use larger J- support for panel with clip relief, pencil ribs and striated.
- Slip joint at ridge cap to Z closure is required to allow project thermal movement.

**FIXED LOW ROOF TO FLOATING HIGH ROOF
TRANSITION HIGH SLOPE TO LOW SLOPE DETAIL**

*NBM = Not By Morin

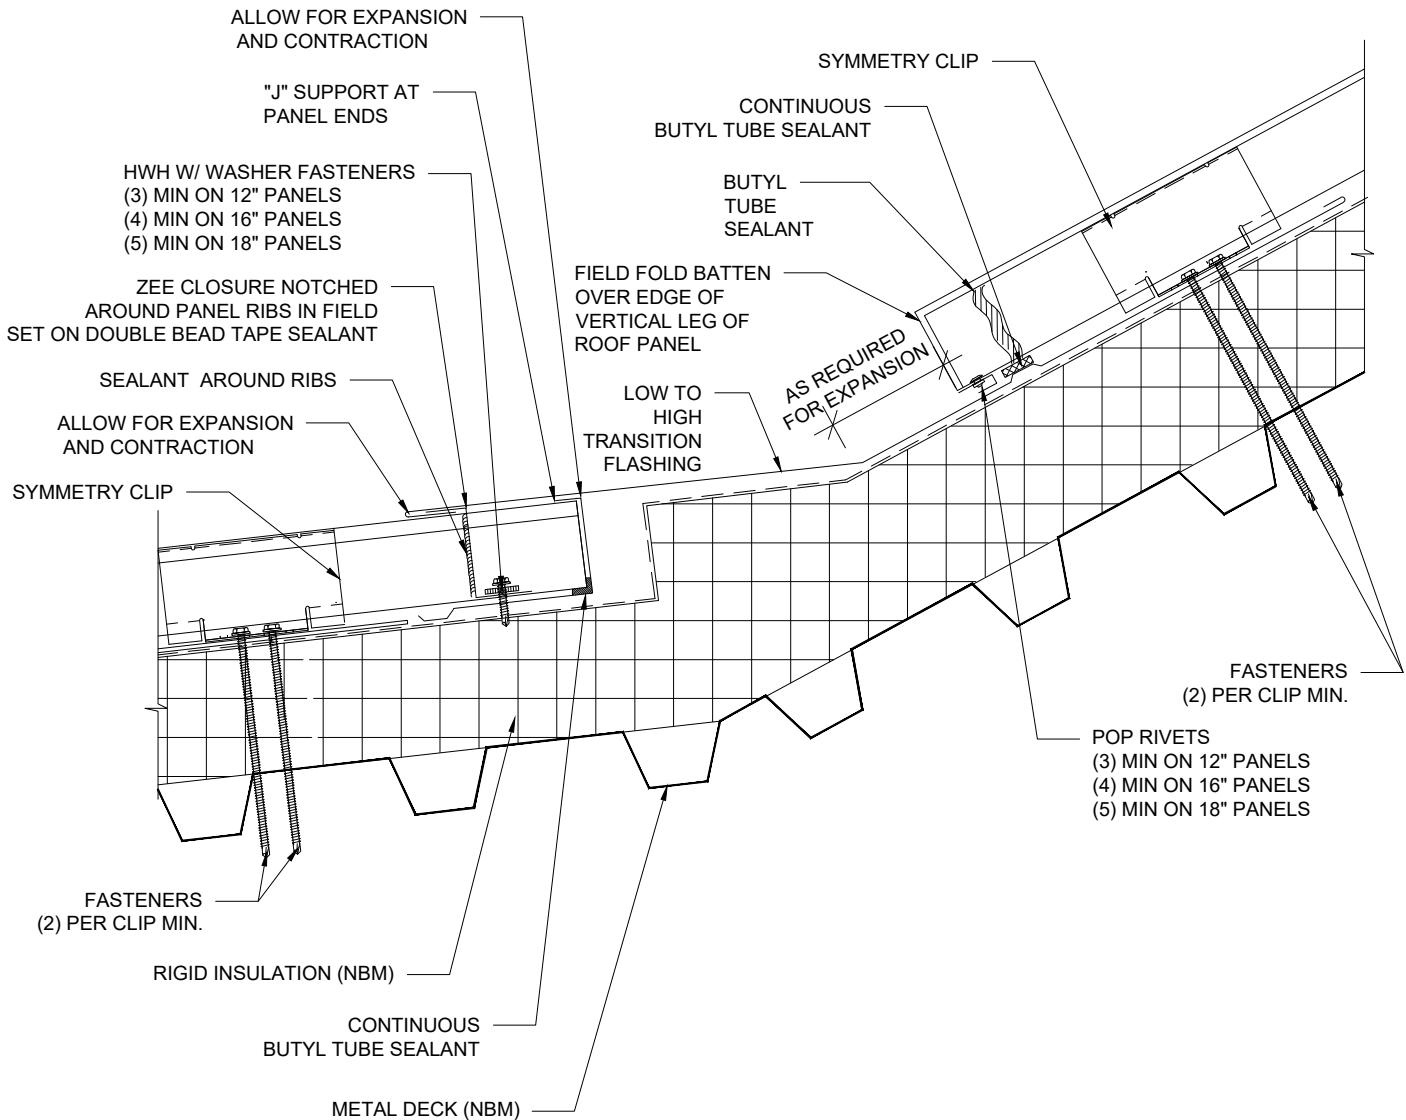


Note:

- Clip fasteners must be long enough to fasten into low cells of decking.
- Floating panels require fixed connections at opposite ends.
- Use larger J- support for panel with clip relief, ribs and striated.
- Attention must be given to the design for sealing and panel movement.
- Where snow buildup is a concern, the design of the trim must take into account the excess loading
- If ridge condition is required to "float", slip joints must be made to accommodate the required expansion

FLOATING LOW SLOPE TO HIGH SLOPE DETAIL

*NBM = Not By Morin

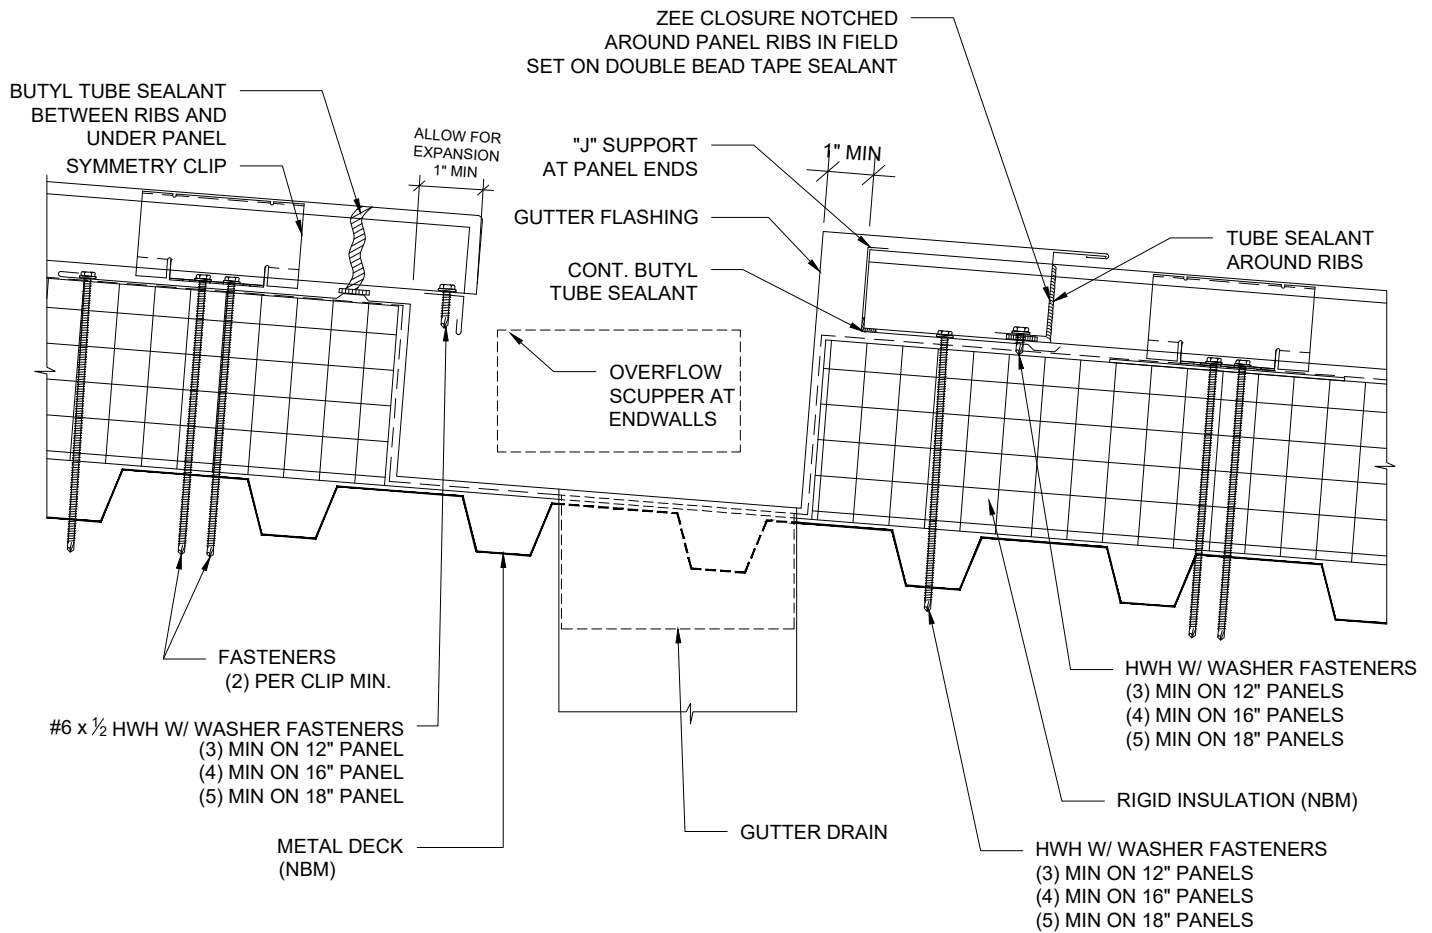


Where an exposed gutter may distract from the aesthetics of the building, an internal gutter may be required. The condition and roof design must allow for this condition to be "fixed and floating" against thermal movement. Considerations must be made in areas of ice or snow to avoid blockage of the gutter or drains. Overflow scuppers are required at each end of the gutter. This design relies on sealant to form the weather barrier. Designers should be aware of the hazards and allow for adequate drainage. Note: Upper panel is shown as floating and lower panel as fixed. Some locations on project may have opposite conditions.

- Morin requires stainless steel liner and membrane for all internal gutter (NBM).
 - Use larger J- support fasten at 24" O.C for panel with clip relief, ribs and striated.
 - Reference low eave detail for optional hemmed panel.
- Contact Morin Technical Dept. for optional details.

INTERNAL GUTTER DETAIL

*NBM = Not By Morin

MORIN DOES NOT WARRANT INTERNAL GUTTER CONDITIONS

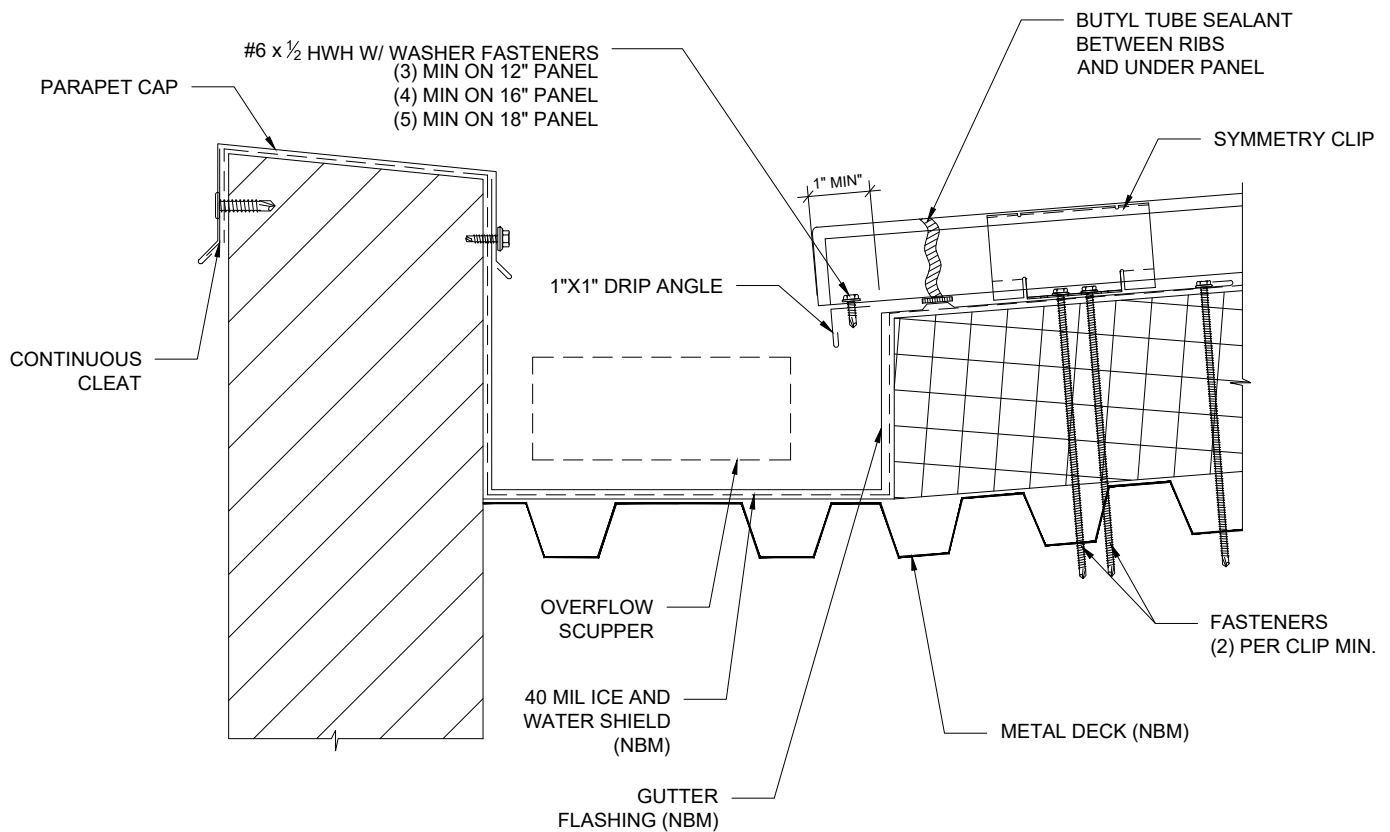


Note:

- Panel is shown as floating. Some locations on project may have fixed condition.
- Over flow scupper recommended at ends of gutter.
- Use larger J- support for panel with clip relief, ribs and striated.
- Reference low eave detail for optional hemmed panel.

Contact Morin Technical Dept. for optional details.

FLOATING INTERNAL GUTTER WITH PARAPET WALL DETAIL
MORIN DOES NOT WARRANT INTERNAL GUTTER CONDITIONS

*NBM = Not By Morin

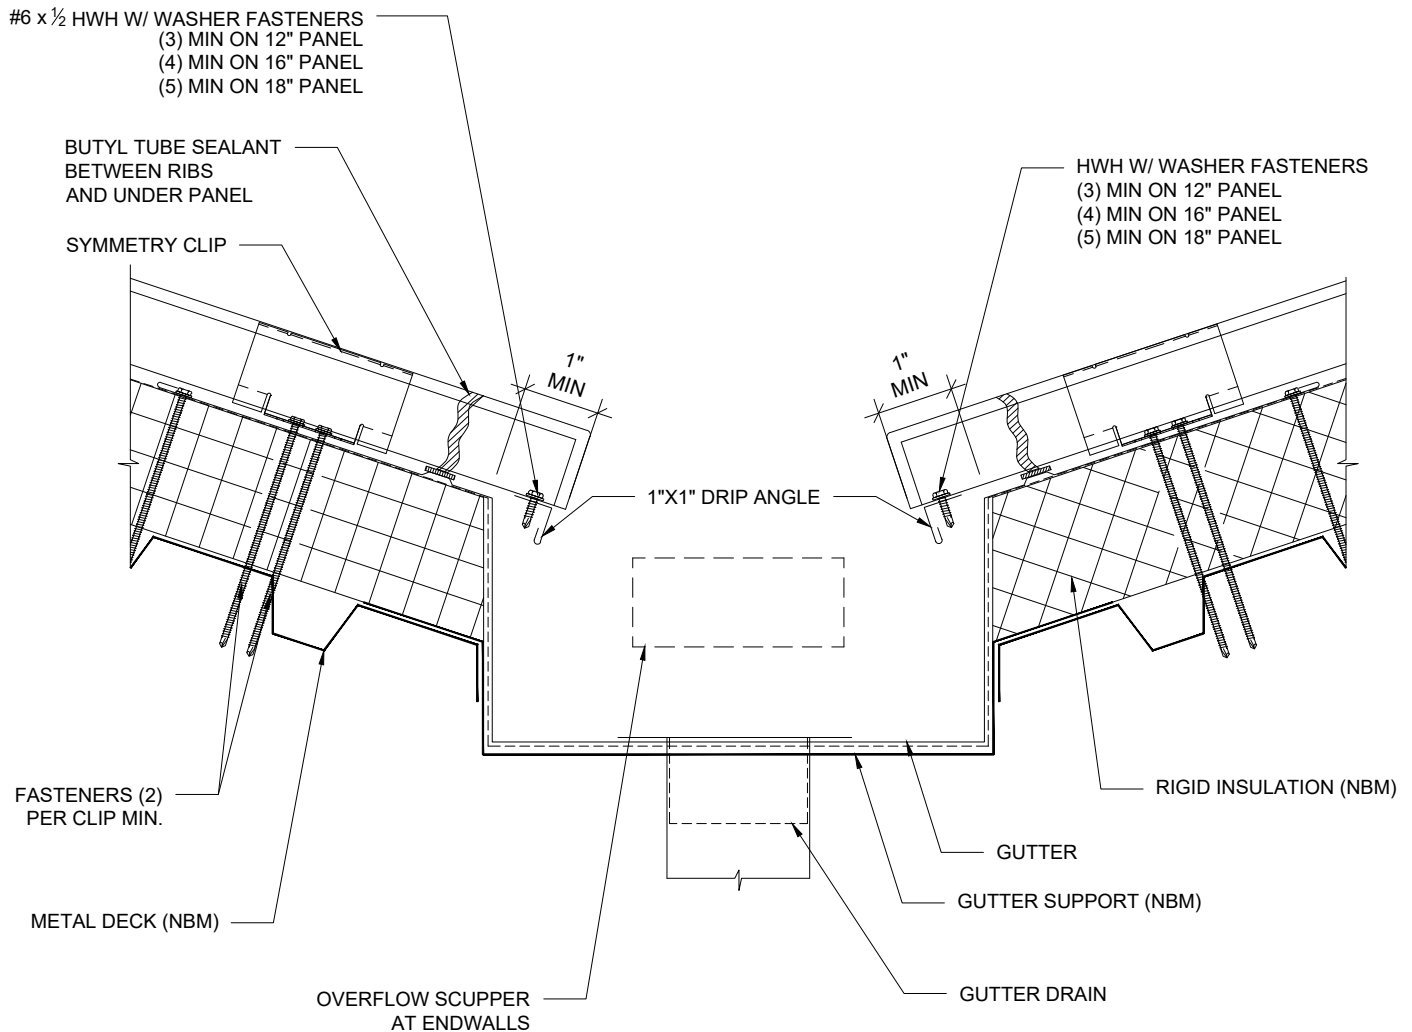

Note:


- Panel is shown as floating. Some locations on project may have fixed condition.
- Over flow scupper recommended at ends of gutter.
- Use larger J- support for panel with clip relief, ribs and striated.
- Reference low eave detail for optional hemmed panel.

Contact Morin Technical Dept. for optional details.

FLOATING INTERNAL VALLEY GUTTER DETAIL

MORIN DOES NOT WARRANT INTERNAL GUTTER CONDITIONS

*NBM = Not By Morin

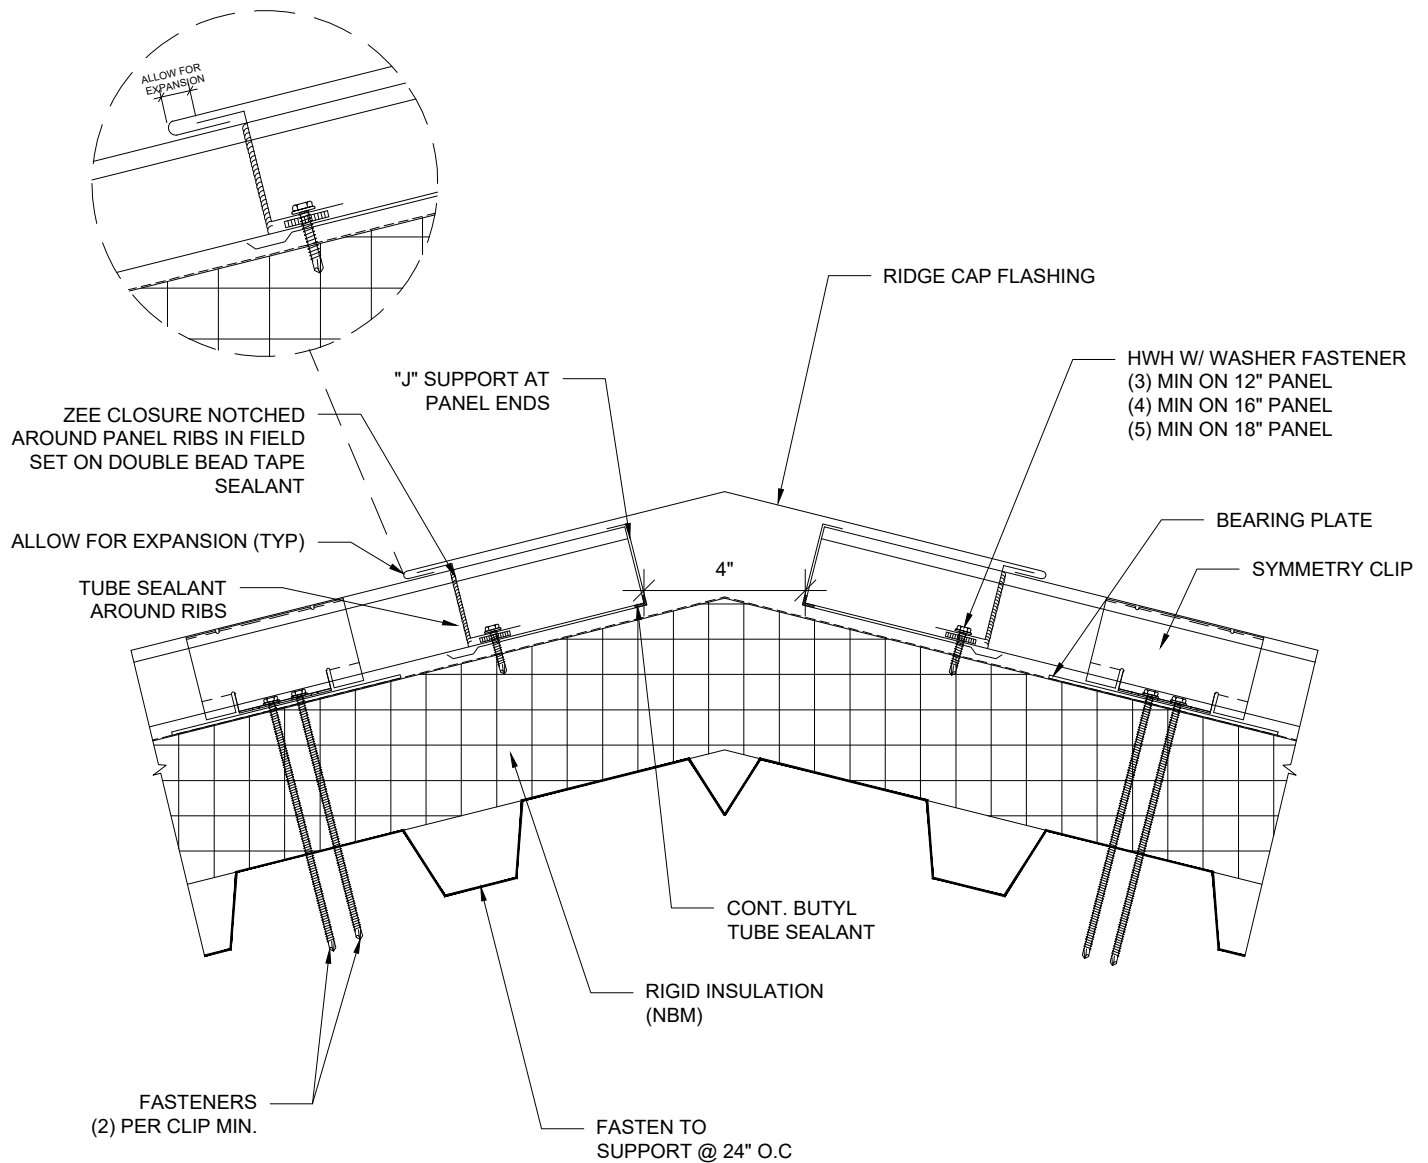


Note:

- If ridge condition is required to “float”, slip joints must be made to accommodate the required expansion.
- Clip fasteners must be long enough to fasten into low cells of decking.
- Use larger J- support for panel with clip relief, ribs and striated.
- Floating high eave requires fixed low eave or mid-point of roof.
- Gap as required for thermal movement.
- Slip joint at ridge cap to Z closure is required to allow project thermal movement.

FLOATING RIDGE AND HIP DETAIL

*NBM = Not By Morin

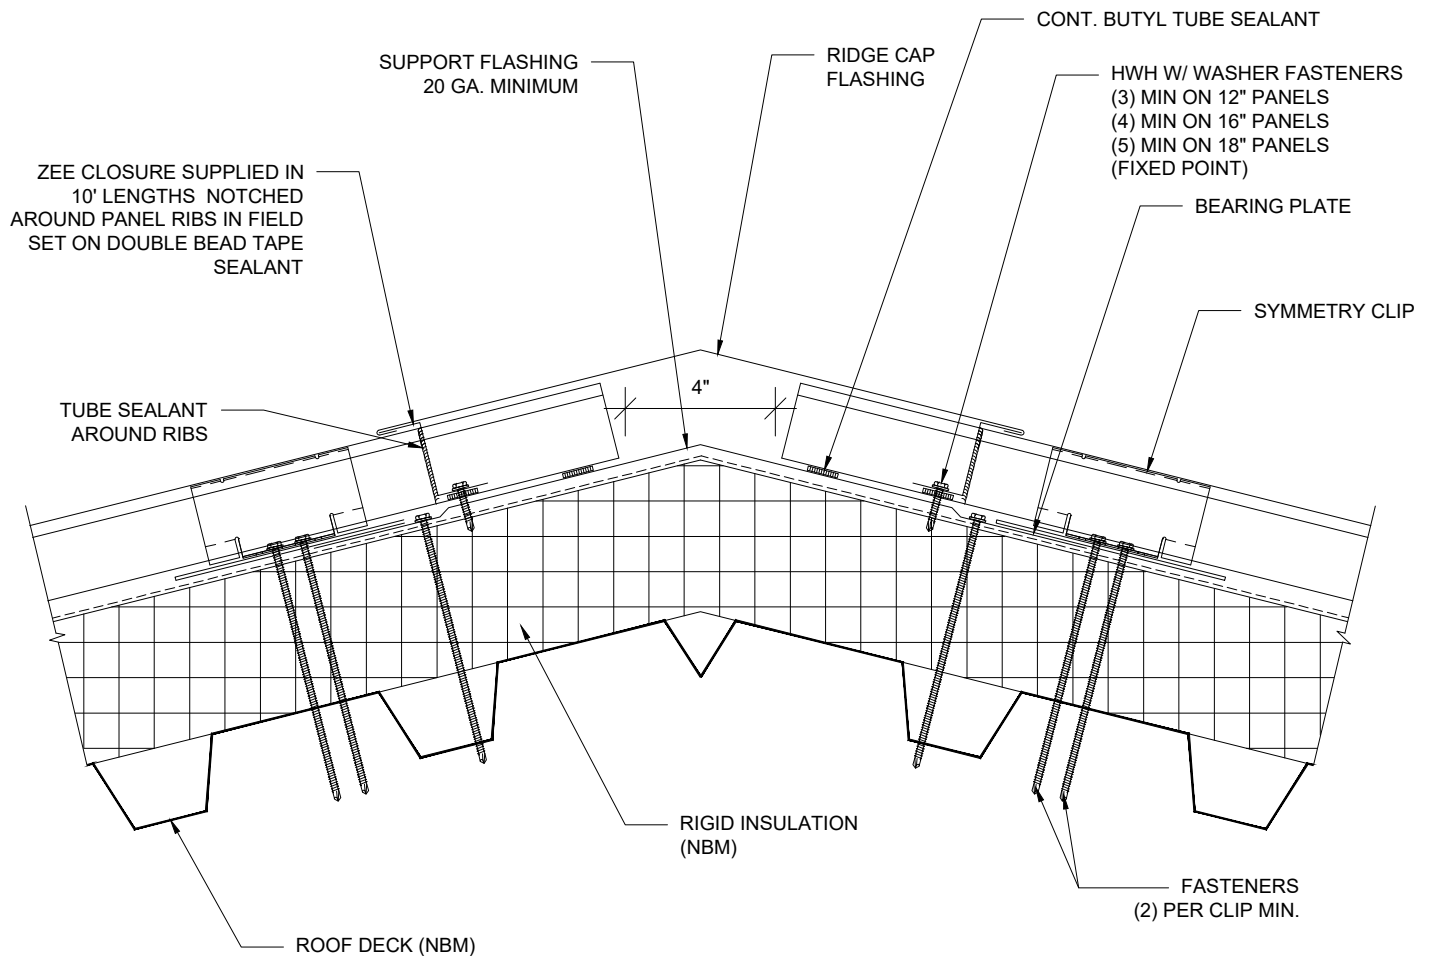


Note:

- Clip fasteners must be long enough to fasten into low cells of decking.
- Floating high eave requires fixed low eave or mid-point of roof.
- Gap as required for thermal movement.
- Slip joint at ridge cap to Z closure is required to allow project thermal movement.


FIXED RIDGE & HIP DETAIL

*NBM = Not By Morin

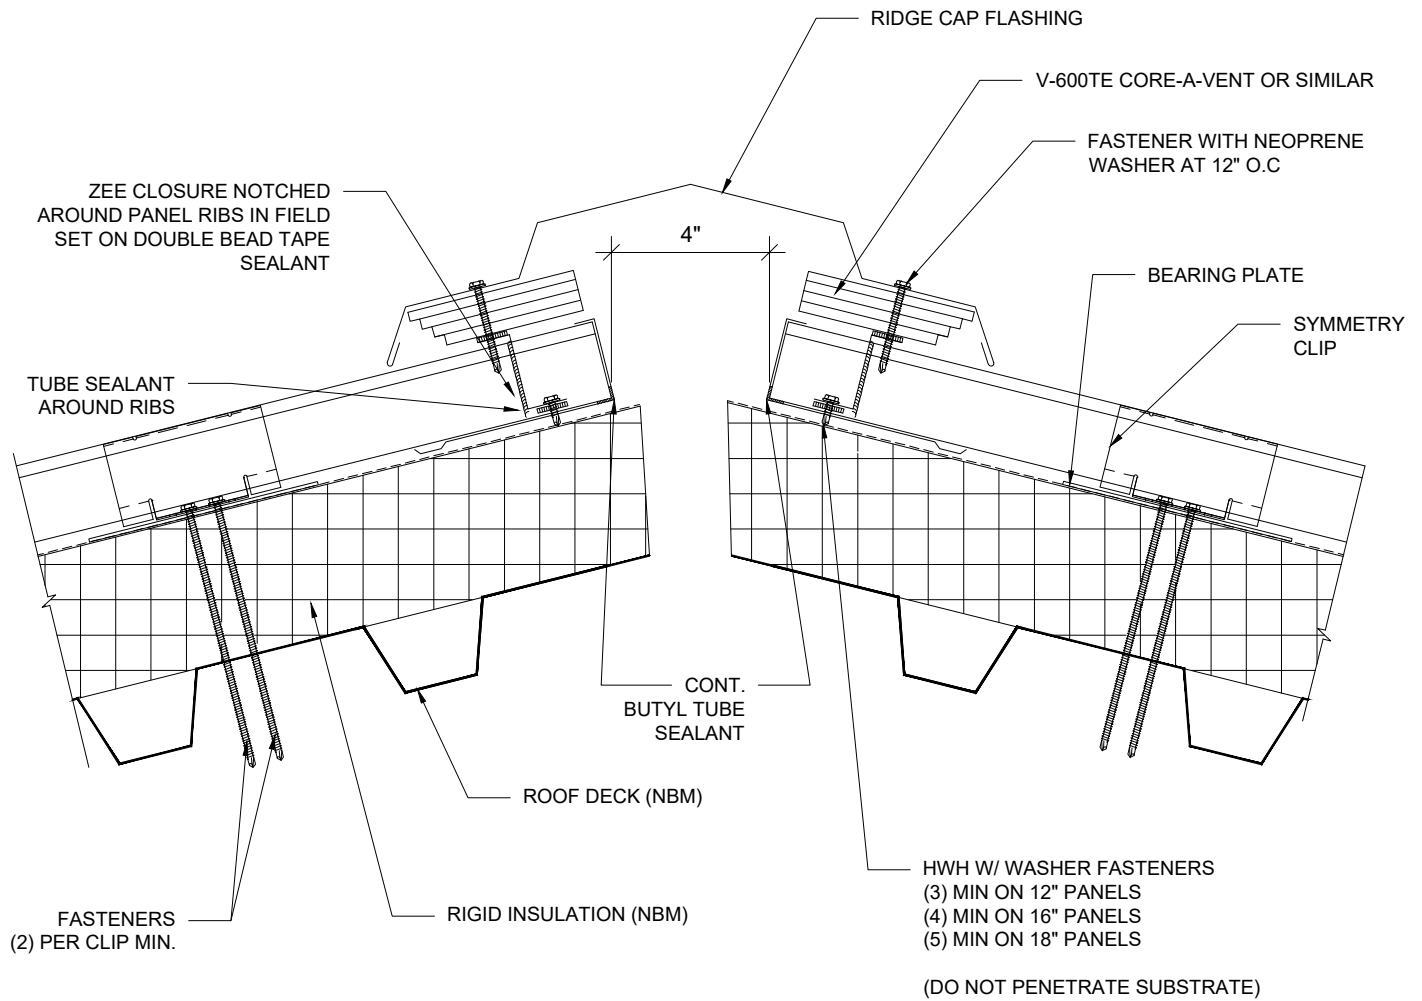


FLOATING VENTED RIDGE DETAIL

*NBM = Not By Morin

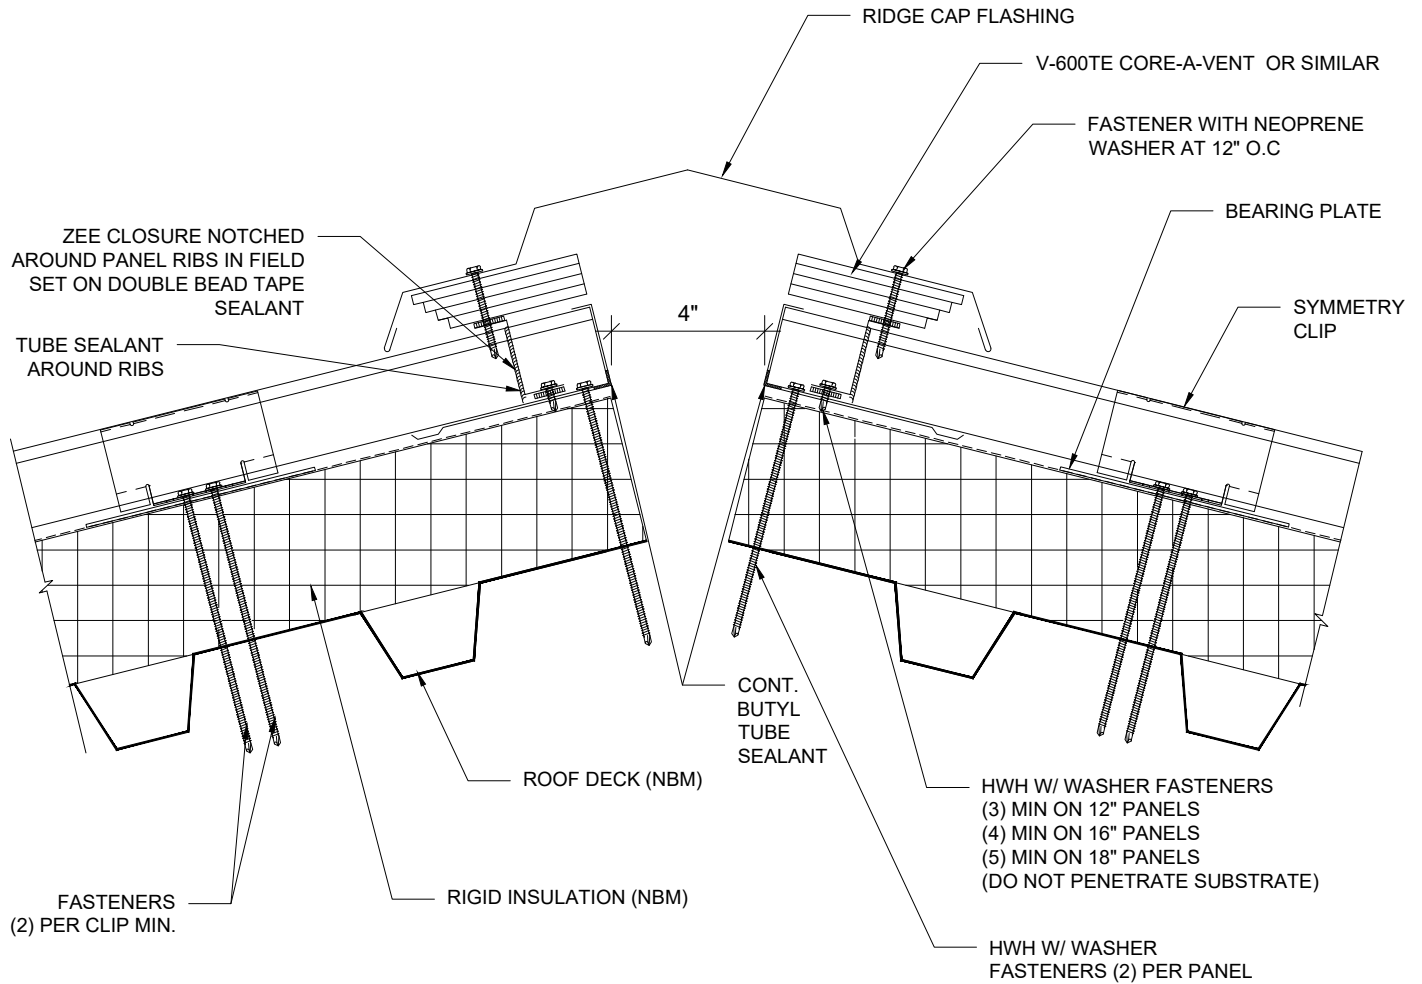

FIXED VENTED RIDGE DETAIL

*NBM = Not By Morin

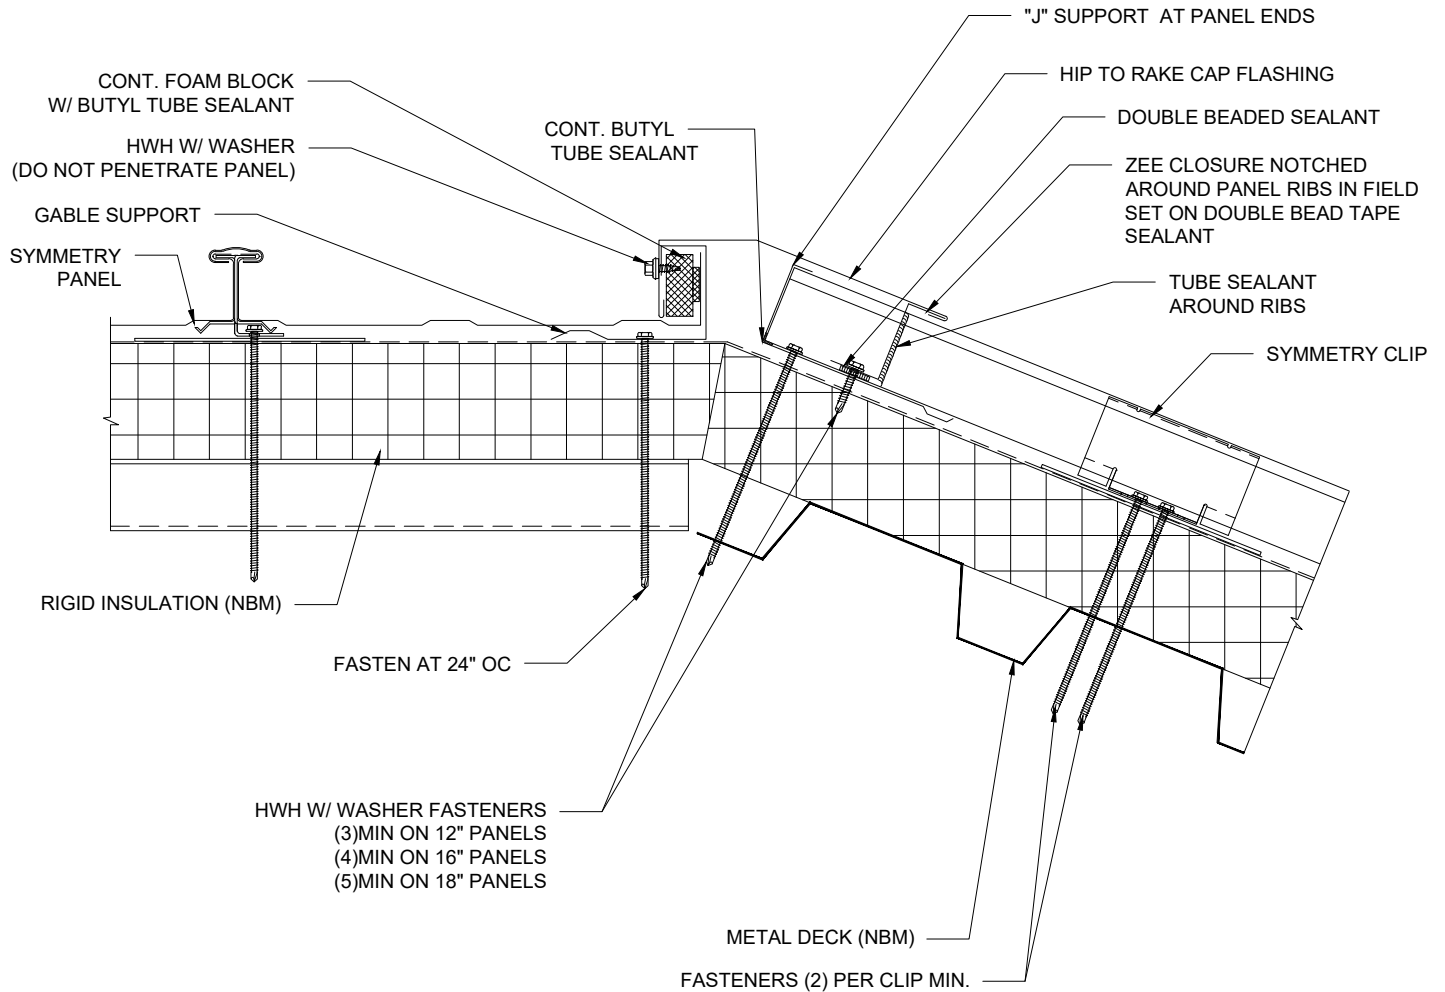

OPTIONS:


- 1) Field cut starter panel so that rake panels on both ends of roof are of same width requires field bending of cut panel to fit under formed 18 gauge gable support (as shown above).
- 2) Start roof with full panel, insert roll formed leg under formed 18 gauge gable support.
- 3) Use larger J- support for panel with clip relief, ribs, and striated.

Note:

- If ridge condition is required to "float", slip joints must be made to accommodate the required expansion.

HIP TO RAKE DETAIL

*NBM = Not By Morin

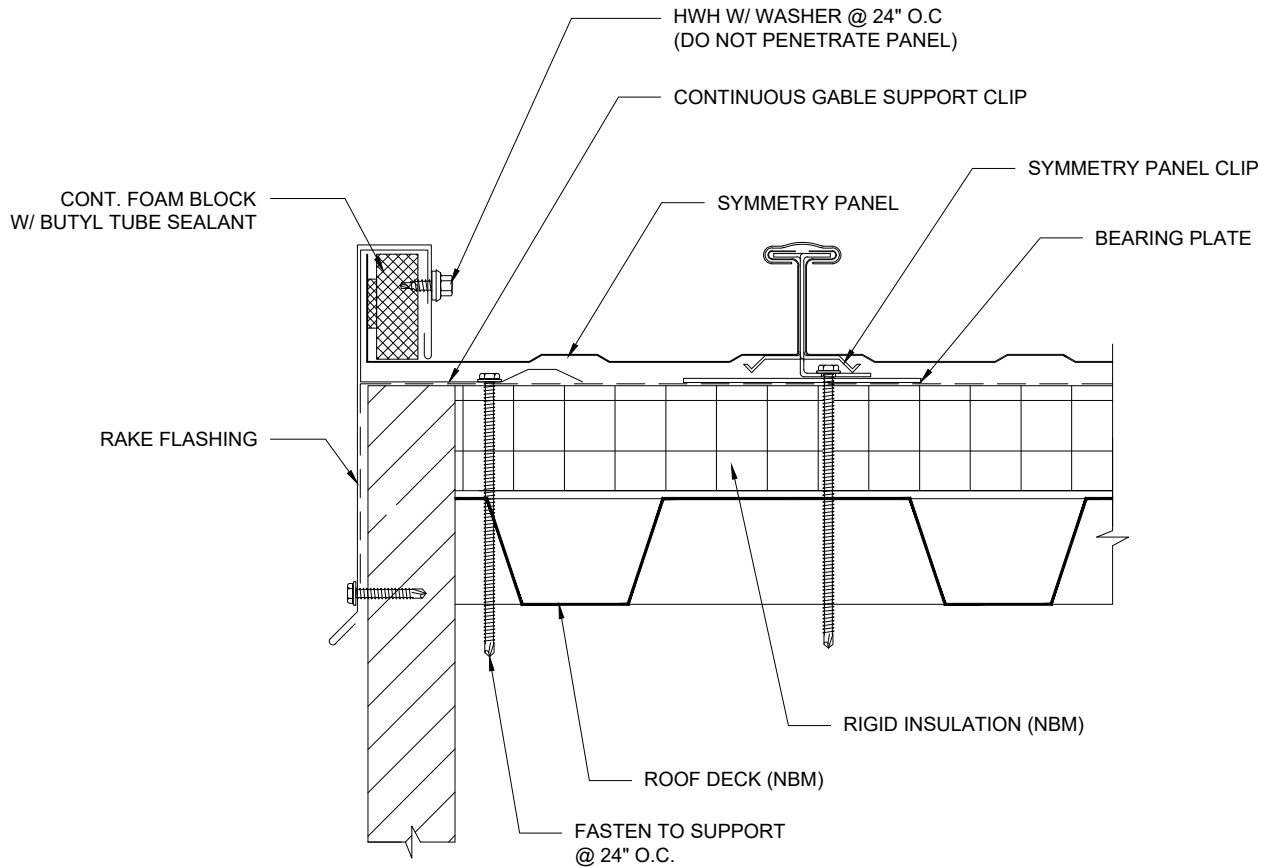


The roof and structure must be allowed to move independently of each other. Thermal movement cannot be restricted. The gable clip is designed to allow this movement while holding down the roof panel. It will also hold the roof panel off the structure the same distance as both hold down clips. Since the gable clip is stationary, the gable trim piece can be attached to it for positive anchoring. The design of the gable flashing can be modified to suit the individual project as long as the basic concept is maintained. The continuous gable supports are supplied in 10' section lengths.

Options:

- 1) Field cut starter panel so that rake panels on both ends of roof are of same width.
Requires field bending of cut panel to fit under formed gable support
- 2) Start roof with full panel, insert female leg under formed gable support.
- 3) Clip fasteners must be long enough to fasten into low cells of decking.

FLOATING GABLE / RAKE DETAIL

*NBM = Not By Morin

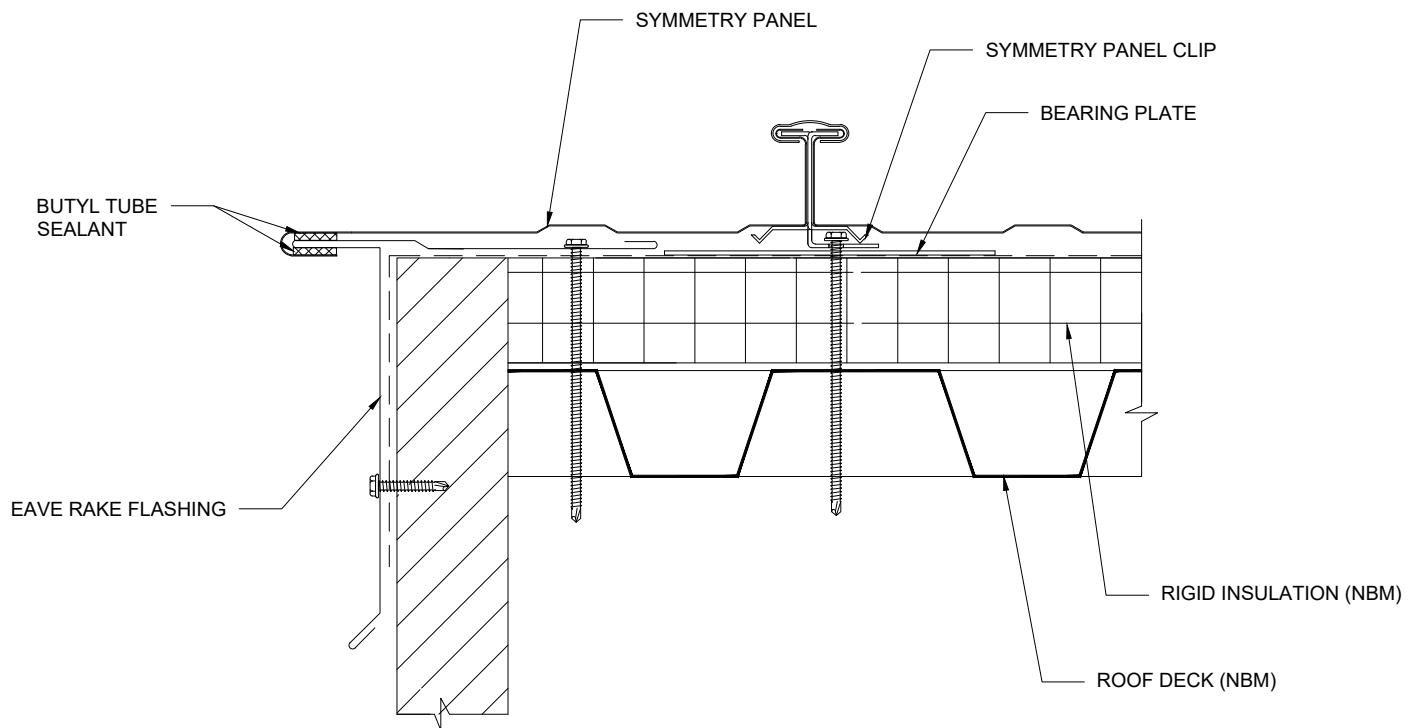


SEE NEXT PAGE FOR INSTALLATION SEQUENCE

Note:




- Field cut starter panel so that rake panels on both ends of roof are of same width.
Requires field bending of cut panel to fit under formed gable support
- Start roof with full panel, insert female leg under formed gable support
- Clip fasteners must be long enough to fasten into low cells of decking

RAKE AT STEPPED EAVE DETAIL

*NBM = Not By Morin

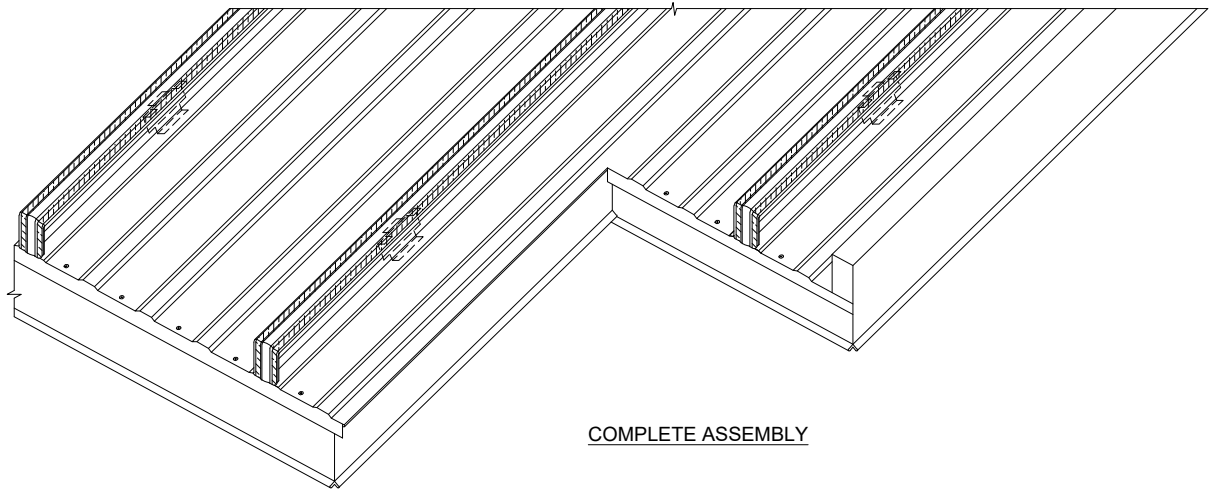


COMPLETE ASSEMBLY

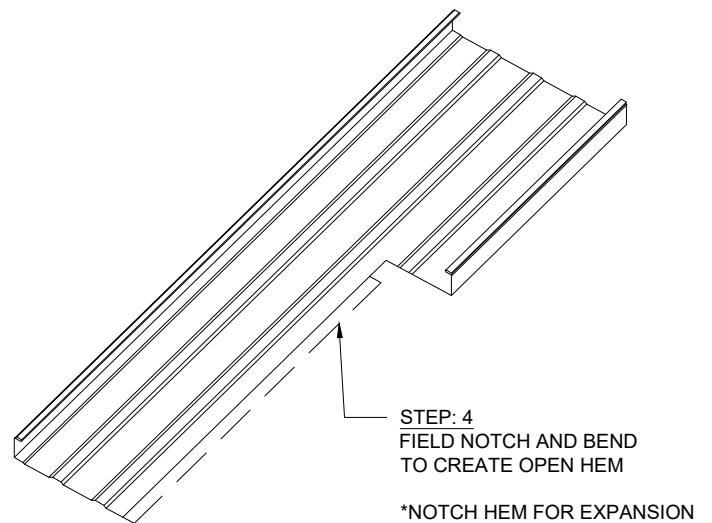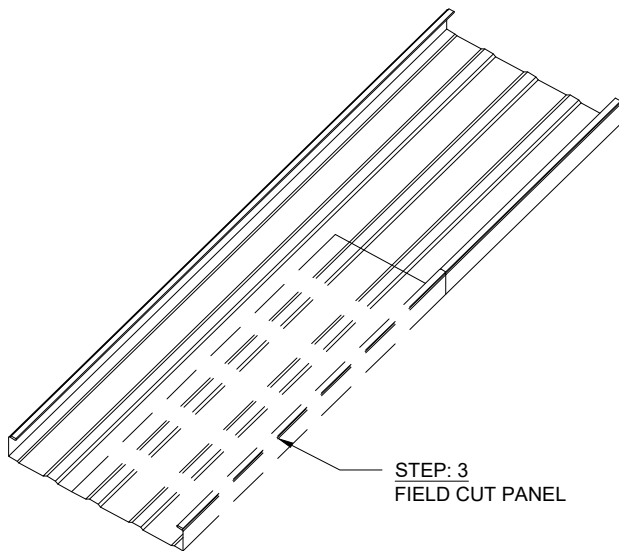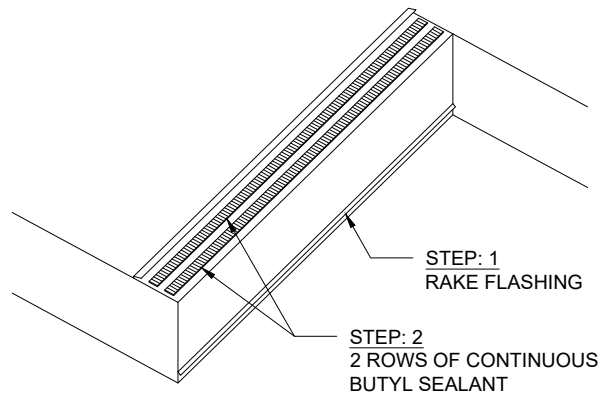

RAKE AT STEPPED EAVE INSTALLATION


Since the width of the standing seam roof can vary due to compression or spreading during the installation, the module can be altered to minimize the endwall trim width. In cases of fixed panel width or module, the designer should center the roof panels if possible, to reduce the width of the trim pieces.

The endwall flash should be sloped to allow drainage of water to avoid leaks at joints in the trim. Reinforcing of the trim may be required at large widths to support the joints.

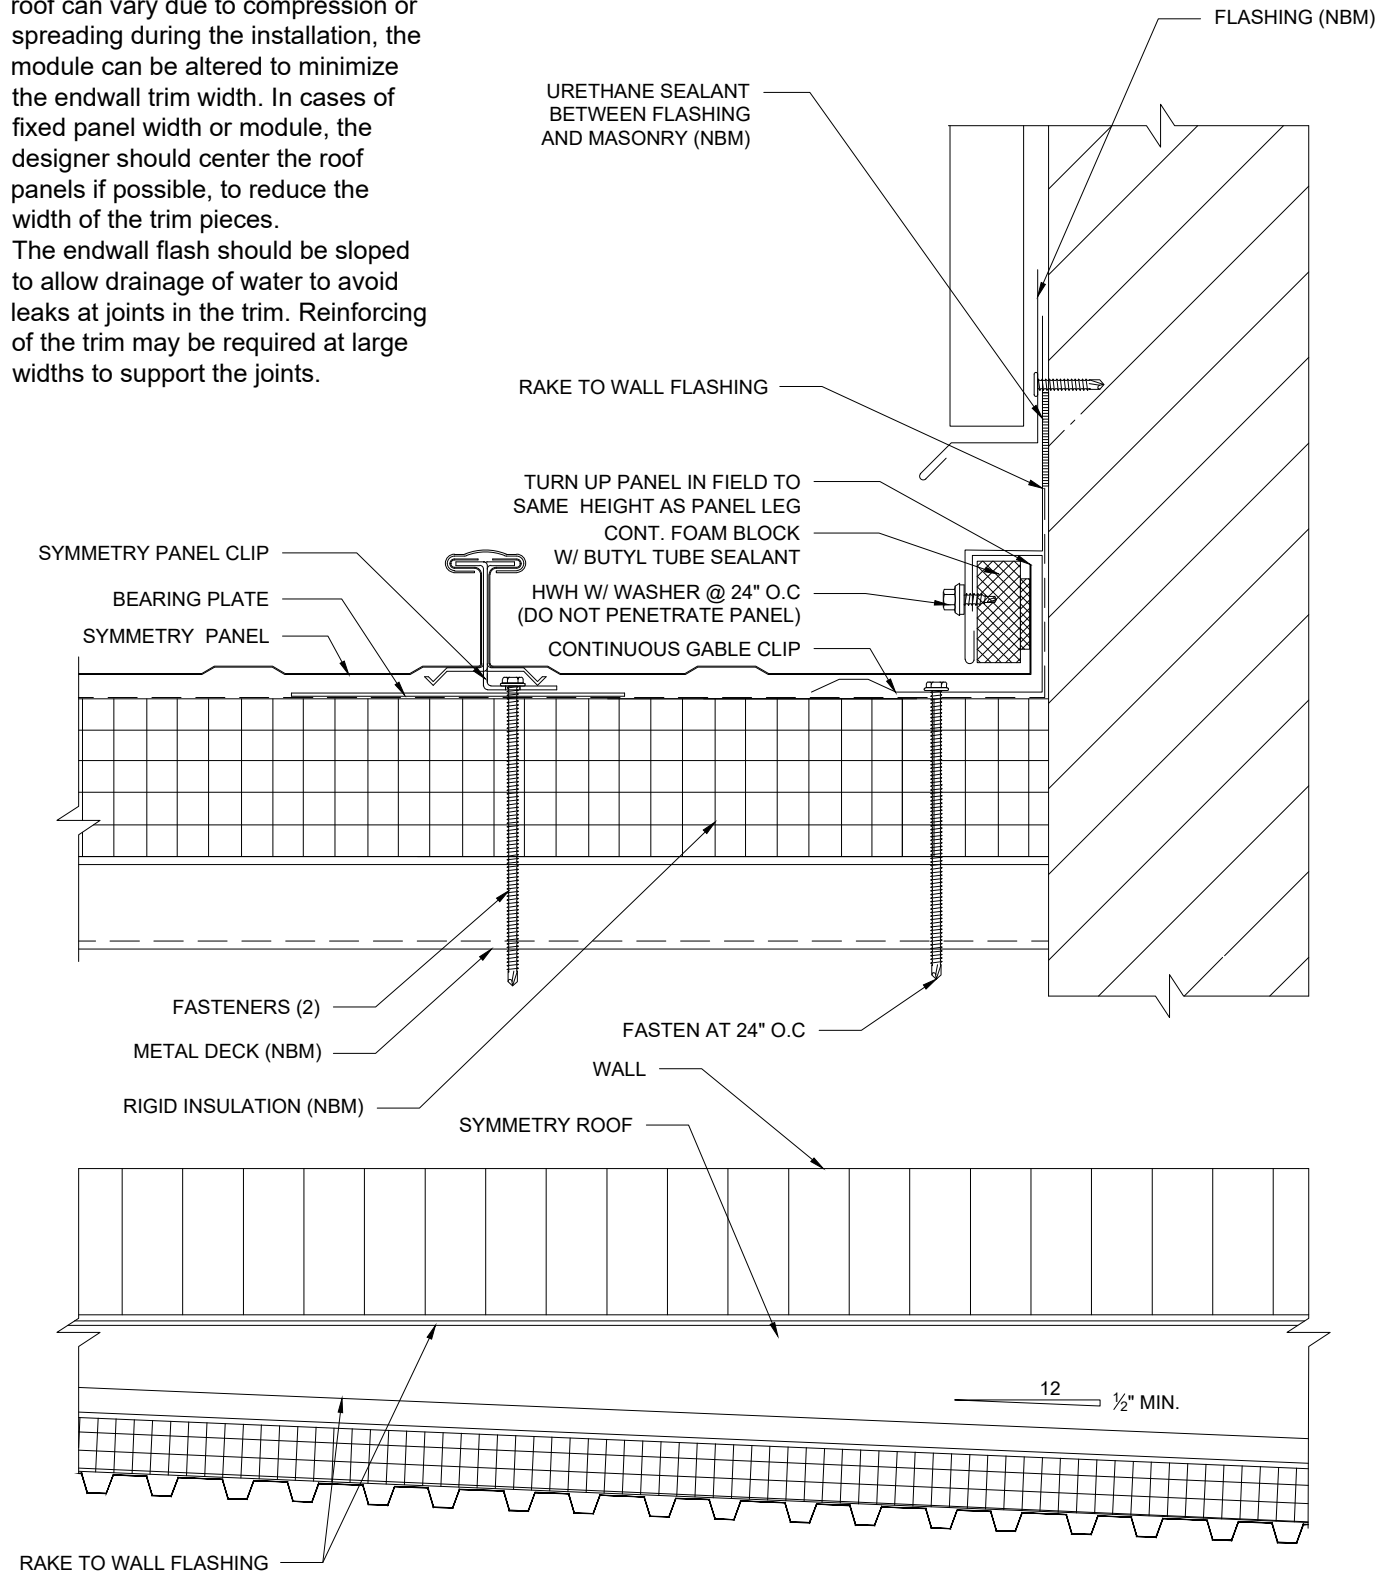

FLOATING RAKE TO WALL DETAIL


*NBM = Not By Morin

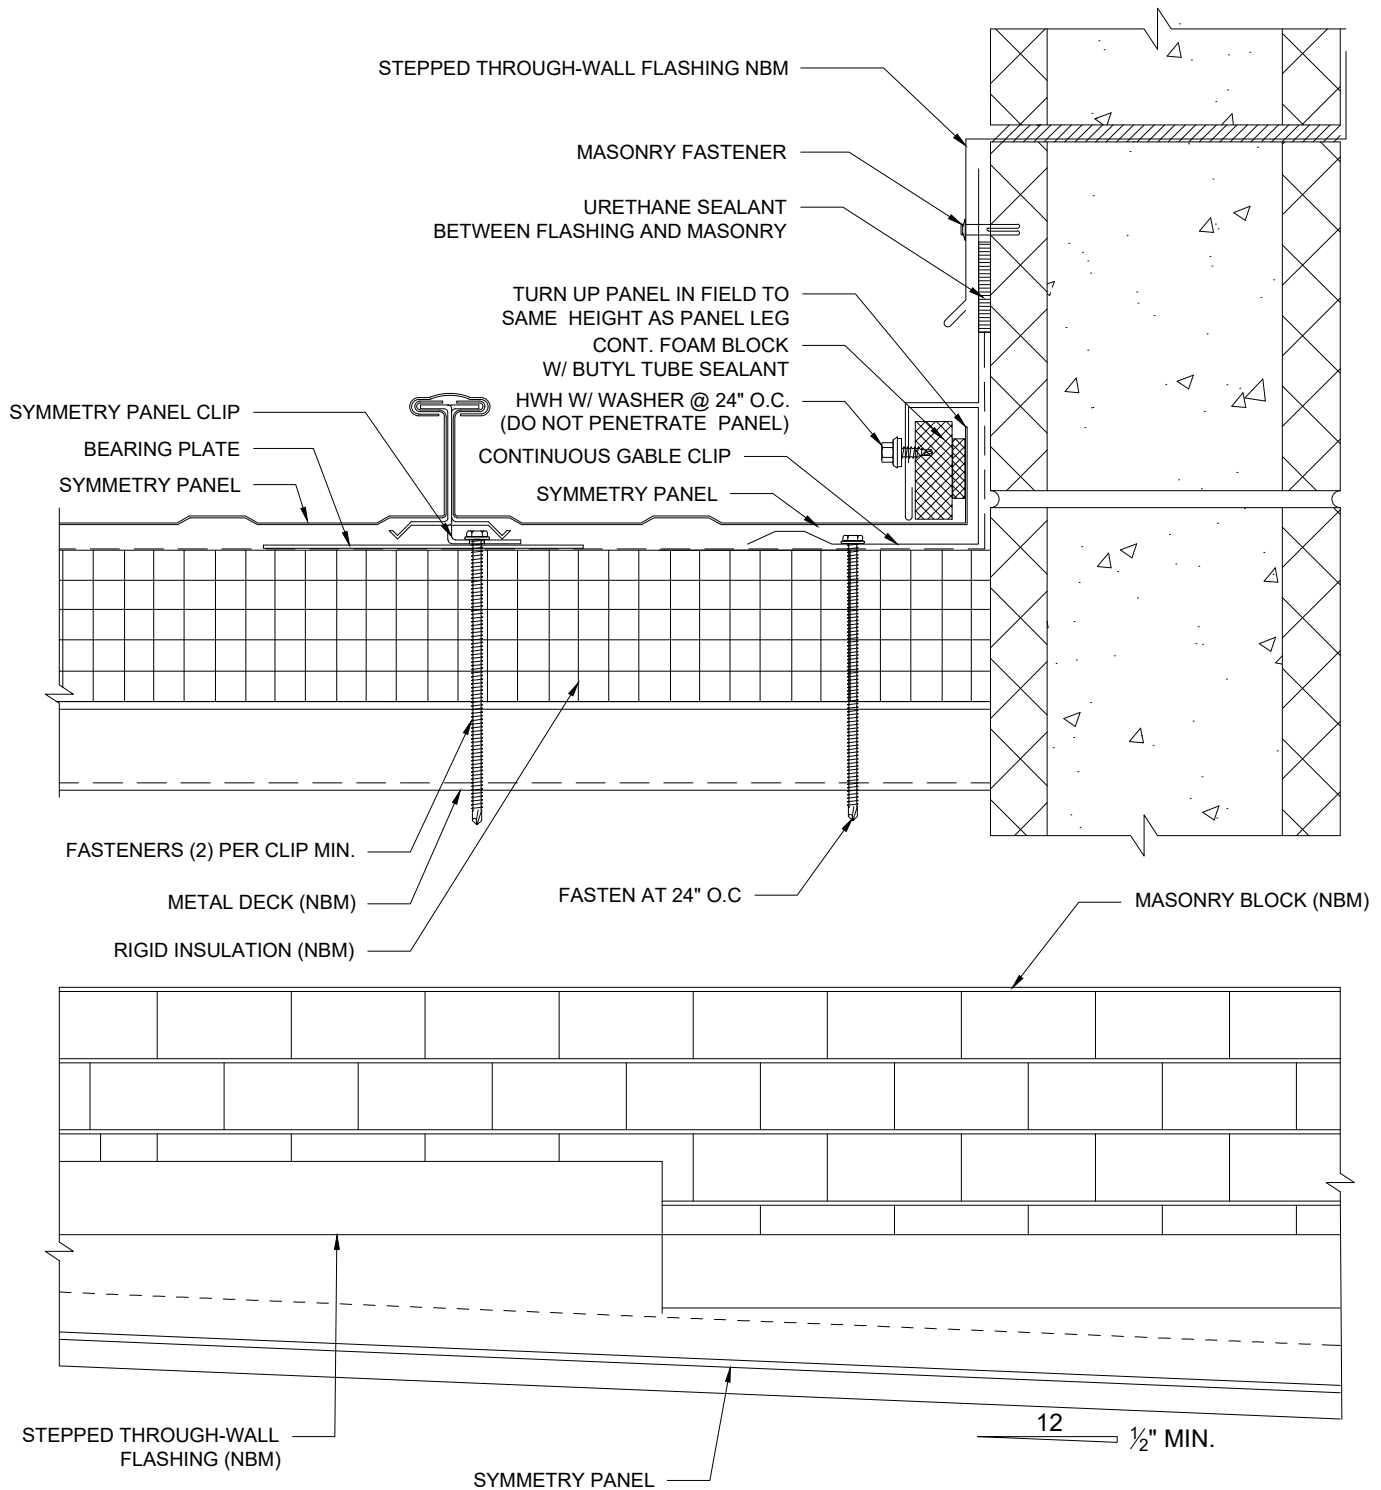

Note:
See Rake to Wall and Eave Details for general notes.

*NBM = Not By Morin


FLOATING ALTERNATE RAKE TO WALL DETAIL

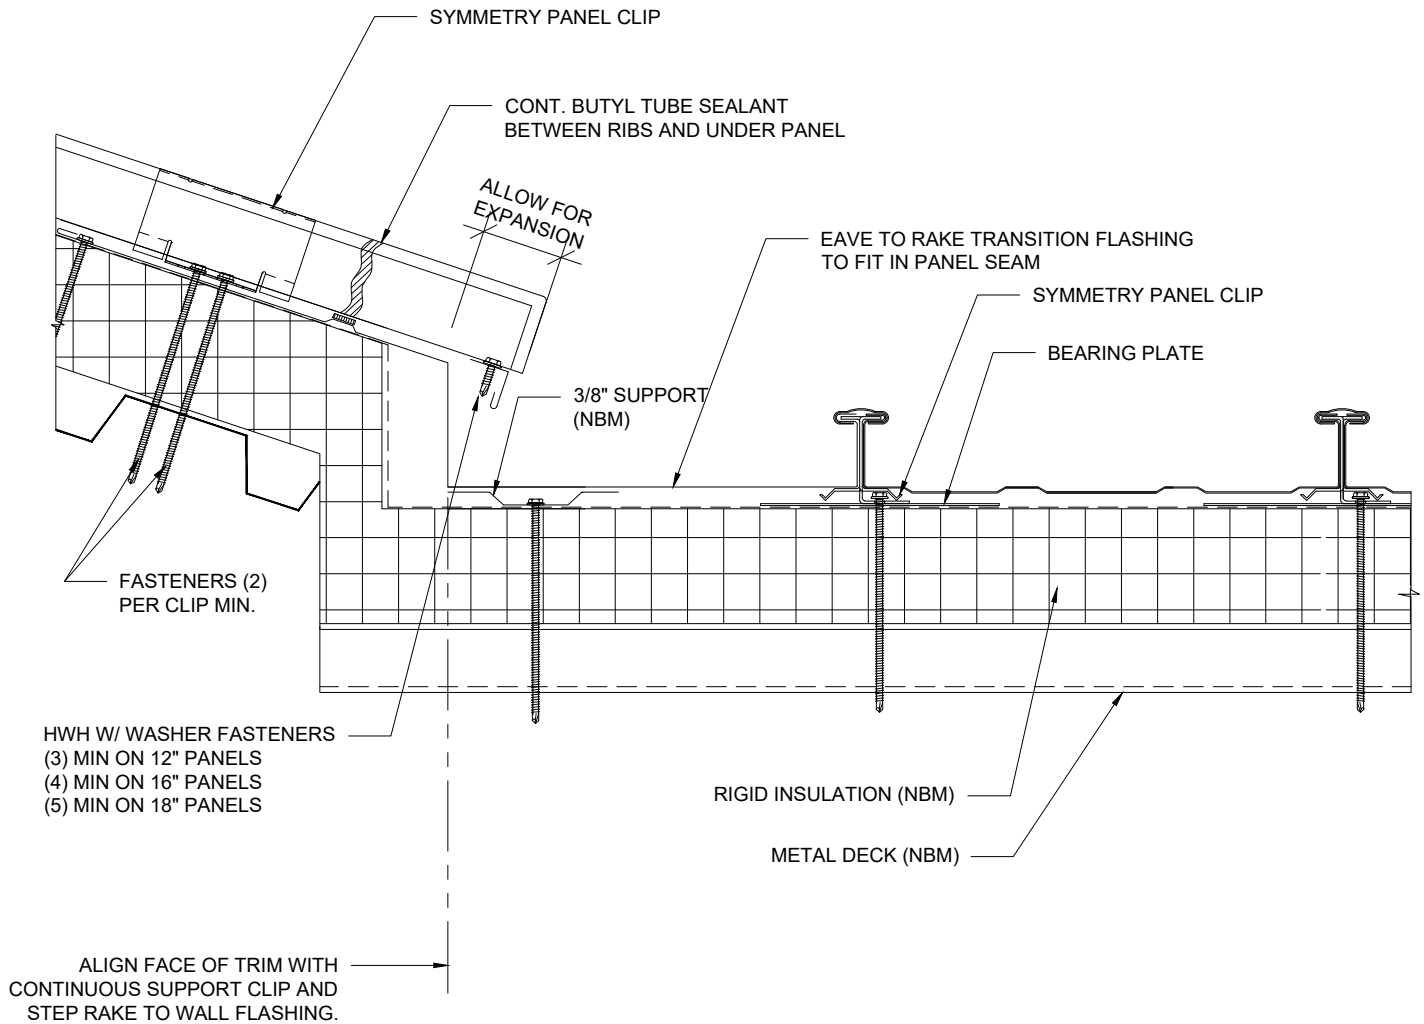

Note:
See Rake to Wall and Eave Details for general notes.

FLOATING RAKE TO EAVE DETAIL

*NBM = Not By Morin

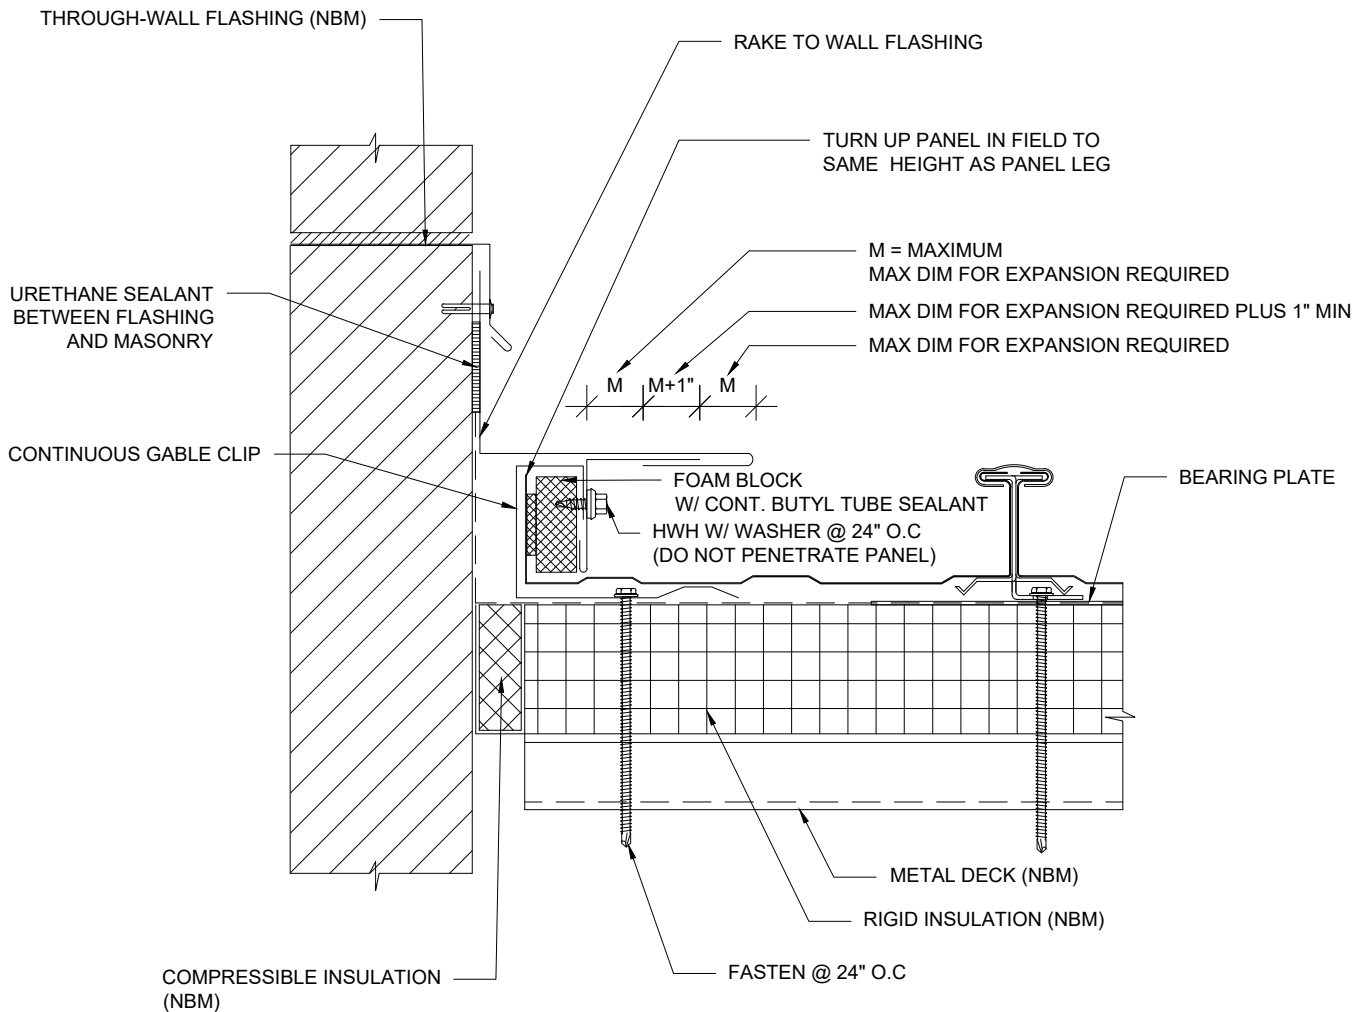


OPTIONS:

- 1) Field cut starter panel so that rake panels on both ends of roof are of same width requires field bending of cut panel to fit under formed 18 gauge gable support (as shown above).
- 2) Start roof with full panel, insert roll formed leg under formed 18 gauge gable support.

FLOATING RAKE TO WALL EXPANSION JOINT DETAIL

*NBM = Not By Morin

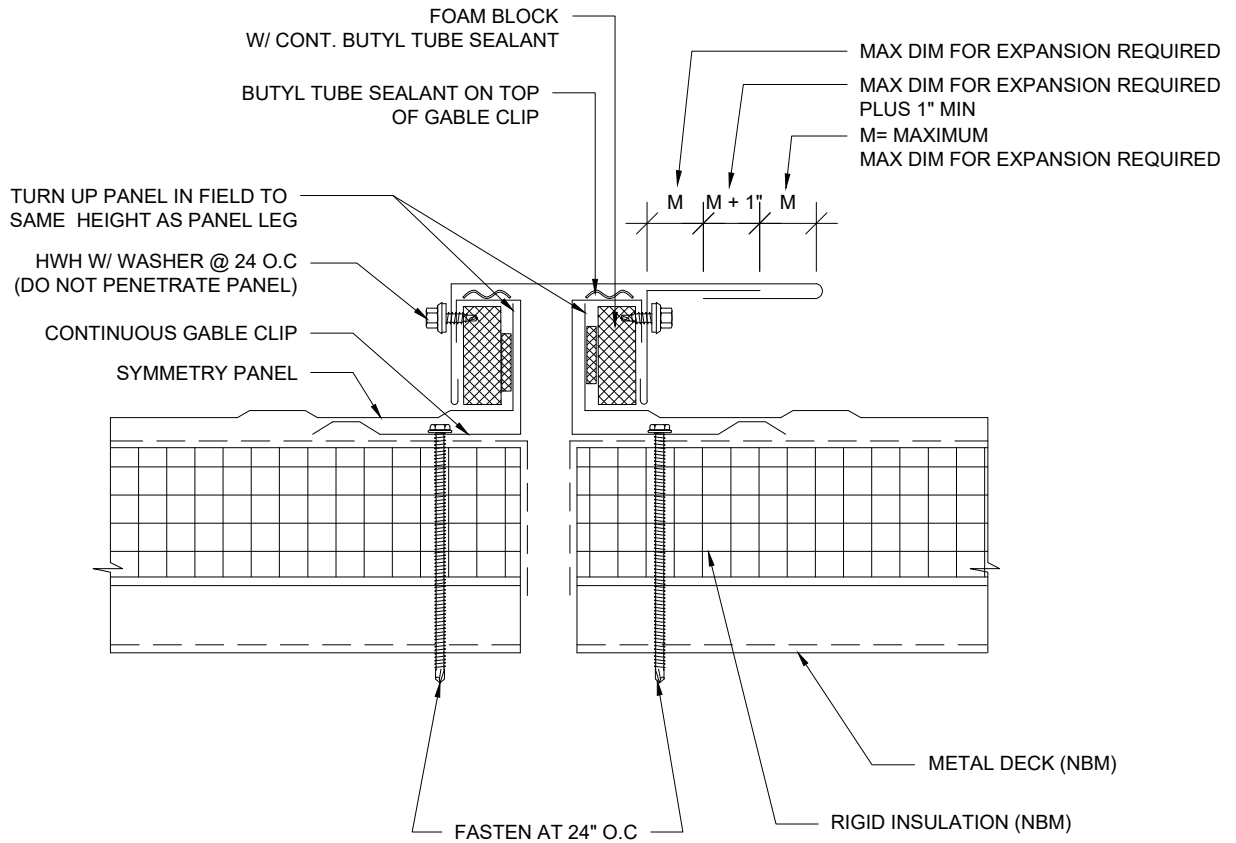


Some building designs require an expansion joint to accommodate movement of the structure. The detail must be designed to allow movement in the anticipated directions. Several proprietary products are available which can be integrated into this basic design.

OPTIONS:

- 1) Field cut starter panel so that rake panels on both ends of roof are of same width requires field bending of cut panel to fit under formed 18 gauge gable support (as shown above).
- 2) Start roof with full panel, insert roll formed leg under formed 18 gauge gable support.

PANEL EXPANSION JOINT DETAIL

*NBM = Not By Morin

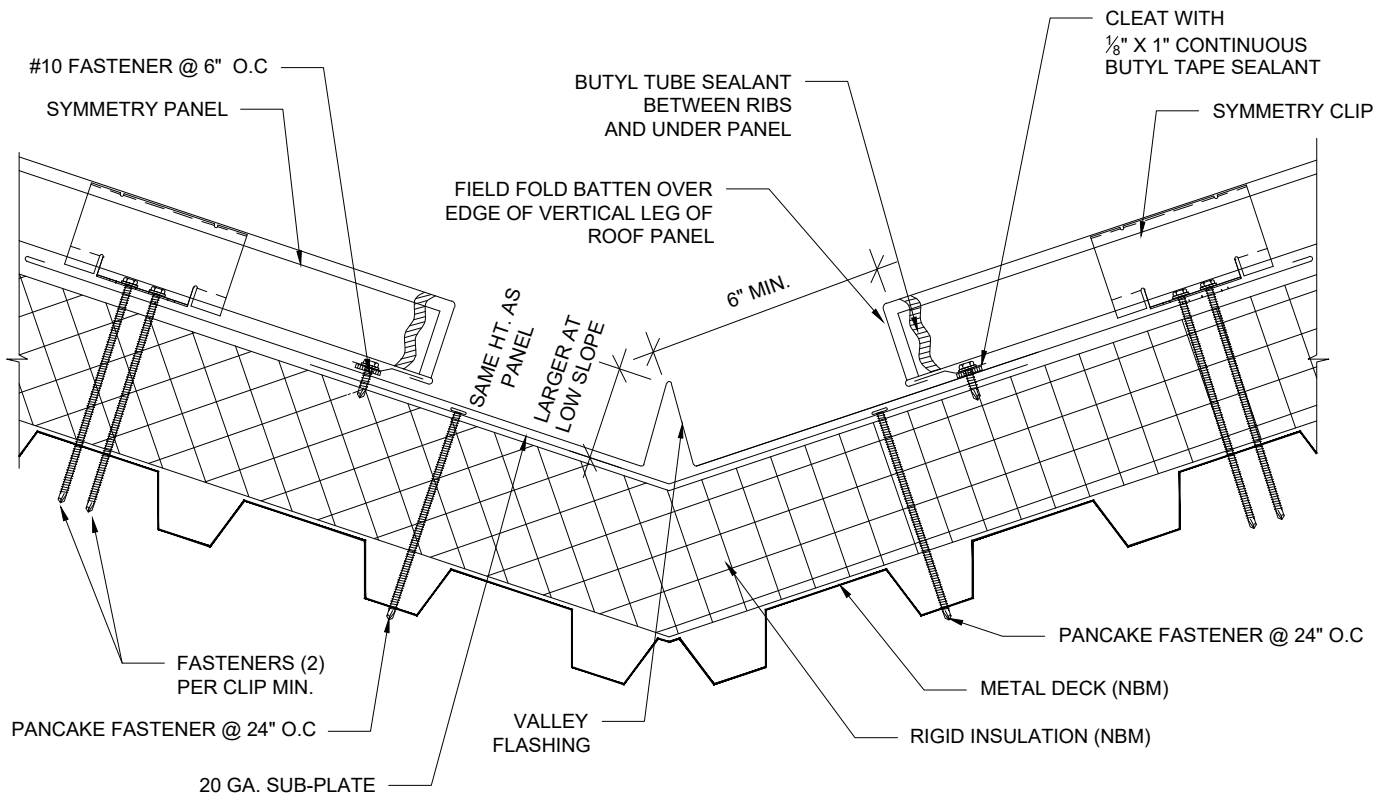

Some building designs require an expansion joint to accommodate movement of the structure. The detail must be designed to allow movement in the anticipated directions. Several proprietary products are available which can be integrated into this basic design.


Valley flashing must allow for sufficient area to carry anticipated runoff without overflow or backup under the roof edge. The raised center assists in diversion of water and allows for thermal movement. Floating valley requires fixed hip/ridge or mid-point of panel length.

OPTIONS:

- 1) Field cut starter panel so that rake panels on both ends of roof are of same width requires field bending of cut panel to fit under formed 18 gauge gable support (as shown above).
- 2) Start roof with full panel, insert roll formed leg under formed 18 gauge gable support.
- 3) Use larger J- support for panel with clip relief, ribs, and striated.




FLOATING VALLEY DETAIL

*NBM = Not By Morin

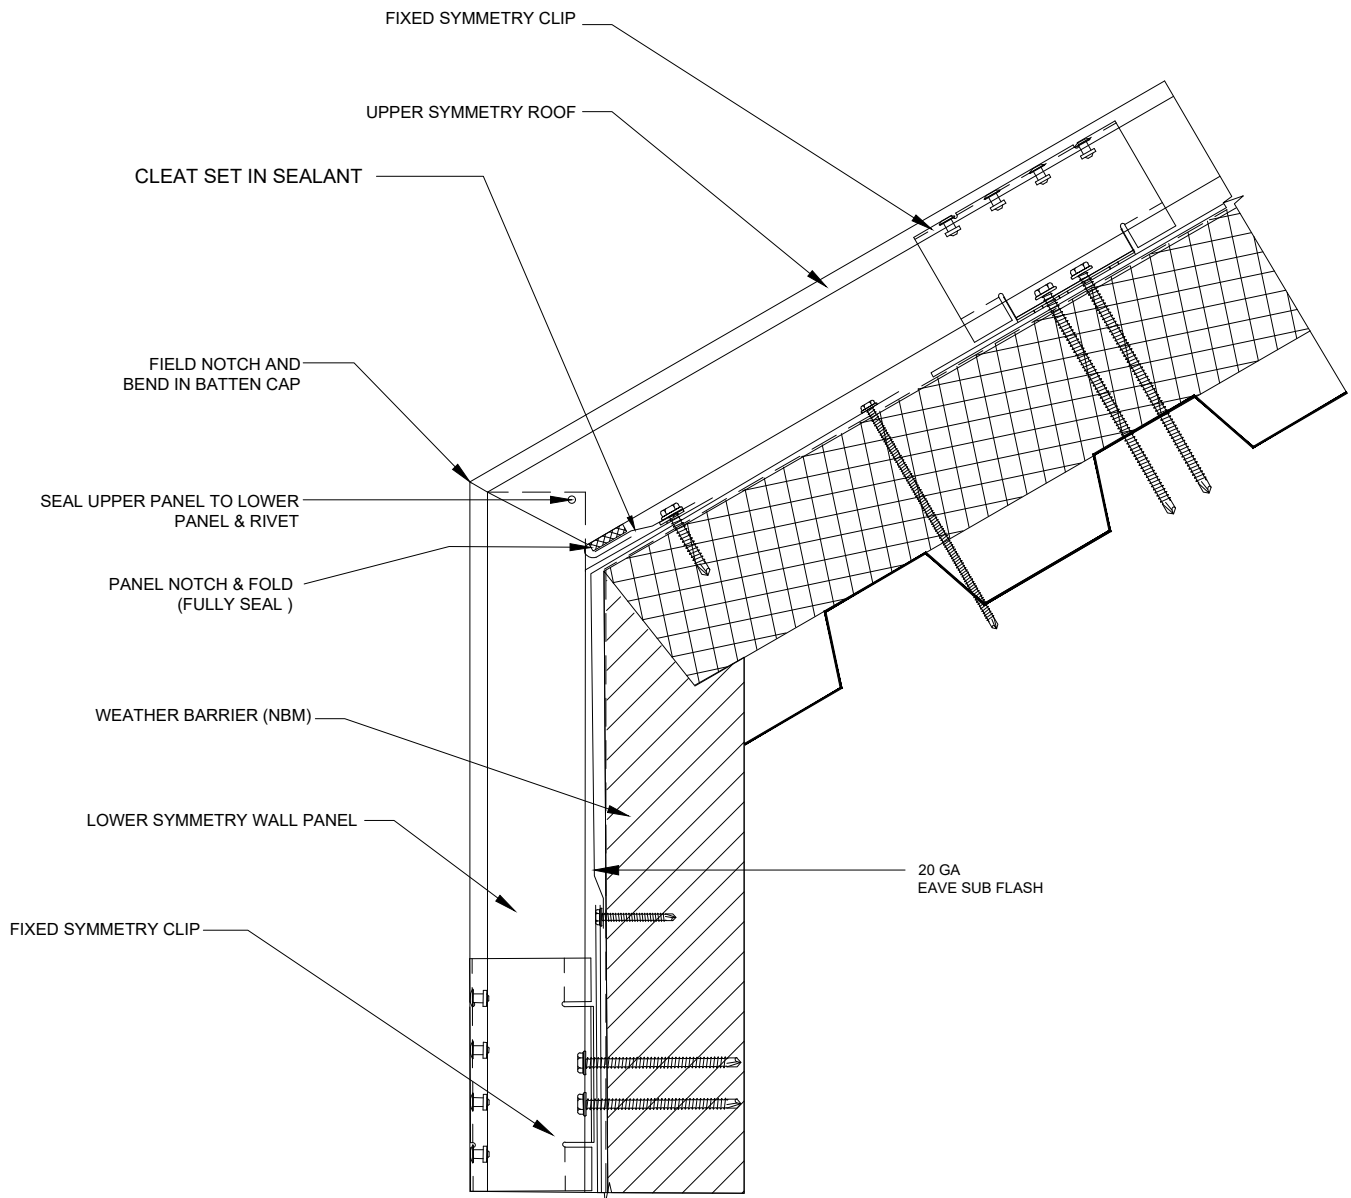


KNUCKLE DETAIL

**NOT A WARRANTABLE DETAIL UNDER
MORINS WEATHERTIGHTNESS WARRANTY PROGRAM
FOR ROOF OR WALL**

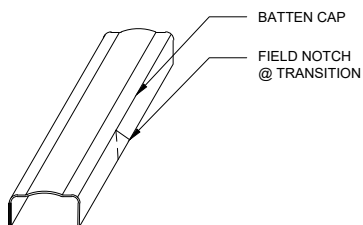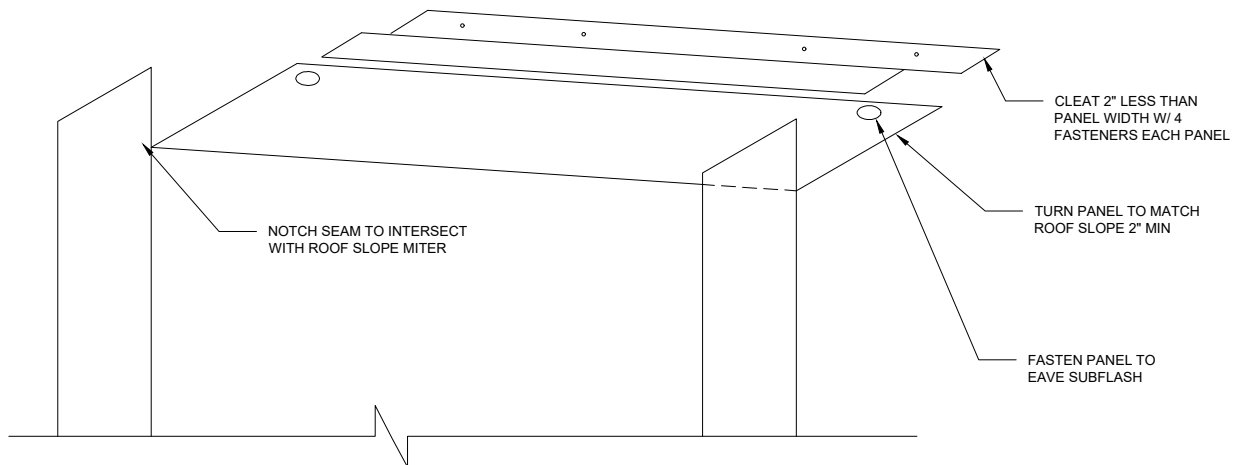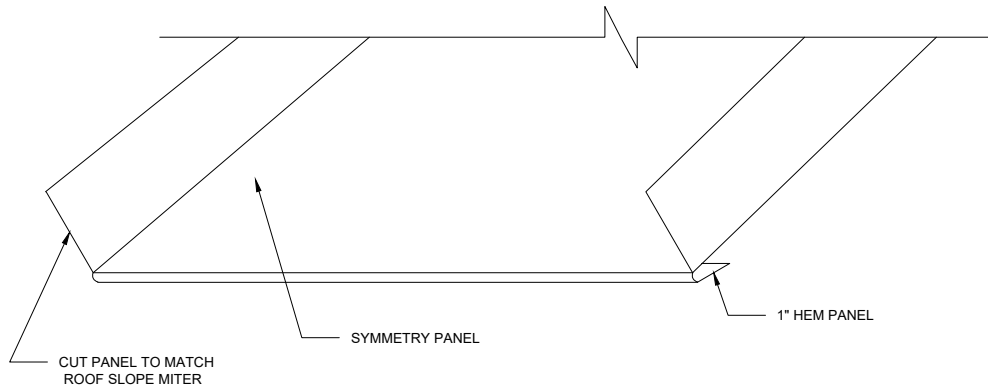


CUT PANELS FOR KNUCKLE

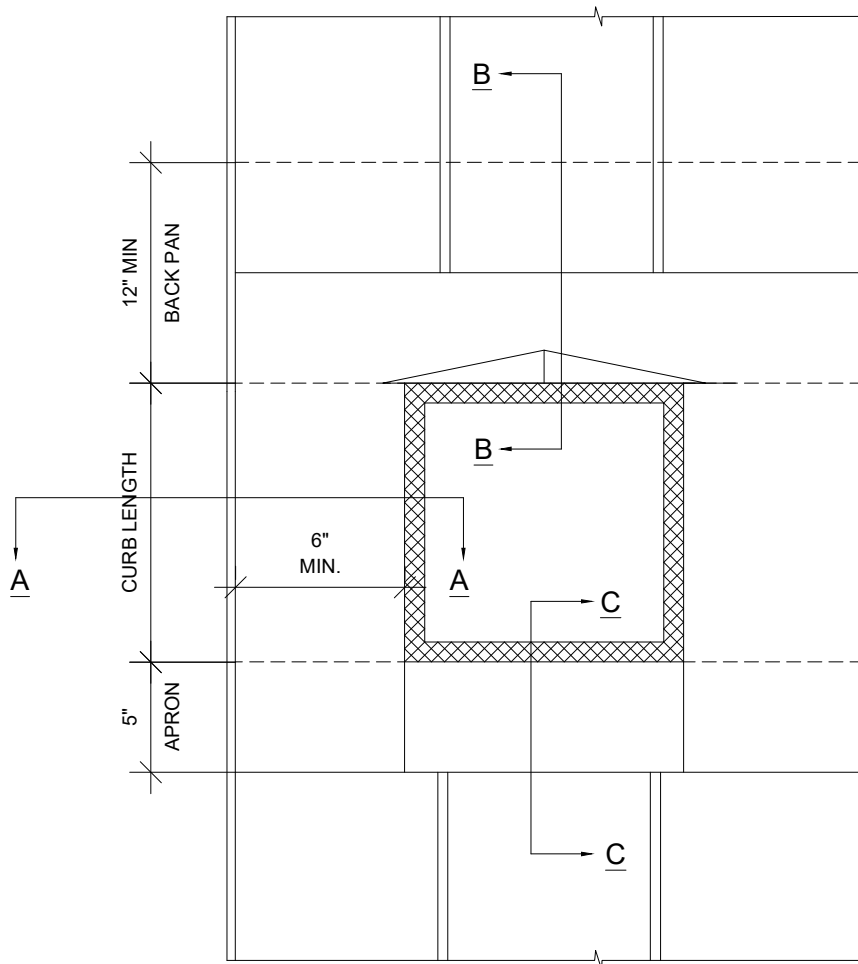


Large openings for equipment or hatchways require a curb with means of diverting the water around the opening. Set and secure roof curb on support framing. At least two parallel curb walls must be on support framing. In high load areas engineer needs to check for proper support. Loads shall not be supported by cantilever sections exceeding 1'0" in length. Cut roof panels to fit snugly around curb walls and to within 1" of the water diverter. Apply a wide band of tape caulk to the top side of curb flanges. Install and seal closures in ends of panels. Plug and caulk all rib ends. Press roof panels into place. Fasten roof panels through curb flanges to support steel using suitable fasteners for the roof system. A spacing of approximately 3" should be used. Inspect installation and fasteners. Apply an exterior sealant to seal seams around all sides of curb to insure a weathertight seal. In all cases the curb assembly is capped by a collar or skirt that extends down over the curb. Curb to be fixed to panel only. Allowance must be made at equipment curb and trim to allow for thermal movement.


CURB FLASHING PLAN VIEW

*NBM = Not By Morin

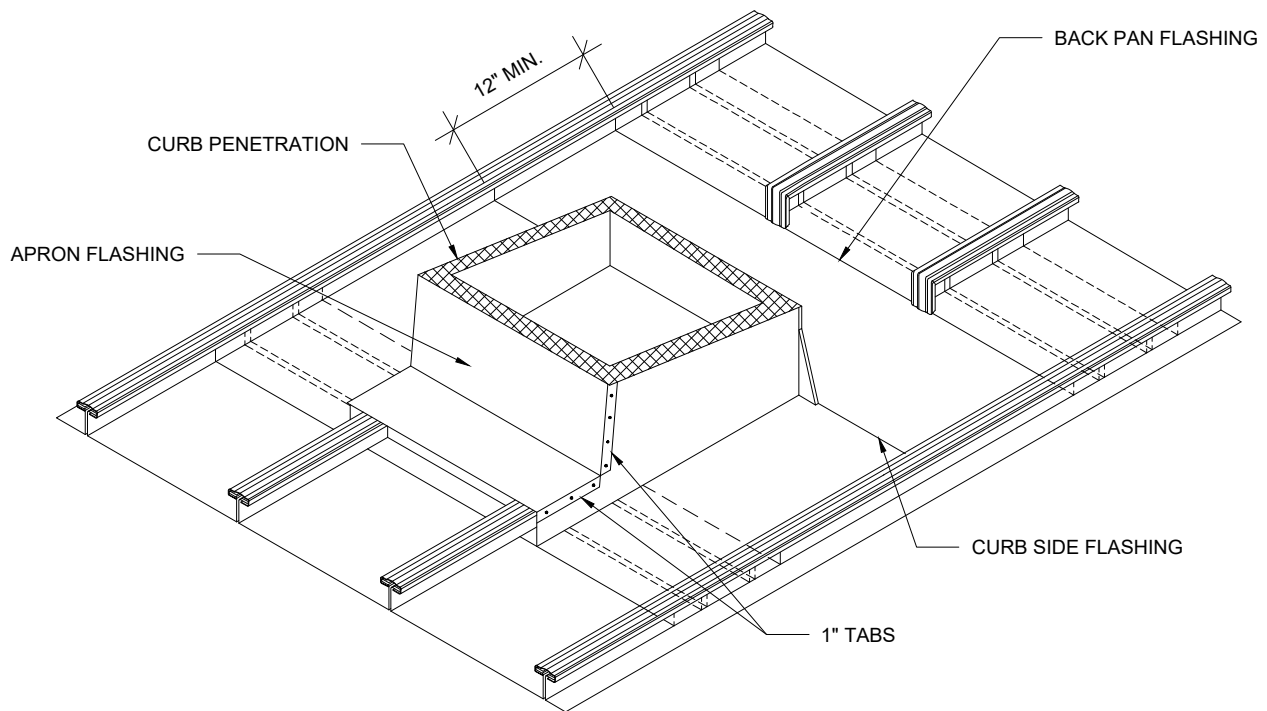


CURB ISOMETRIC

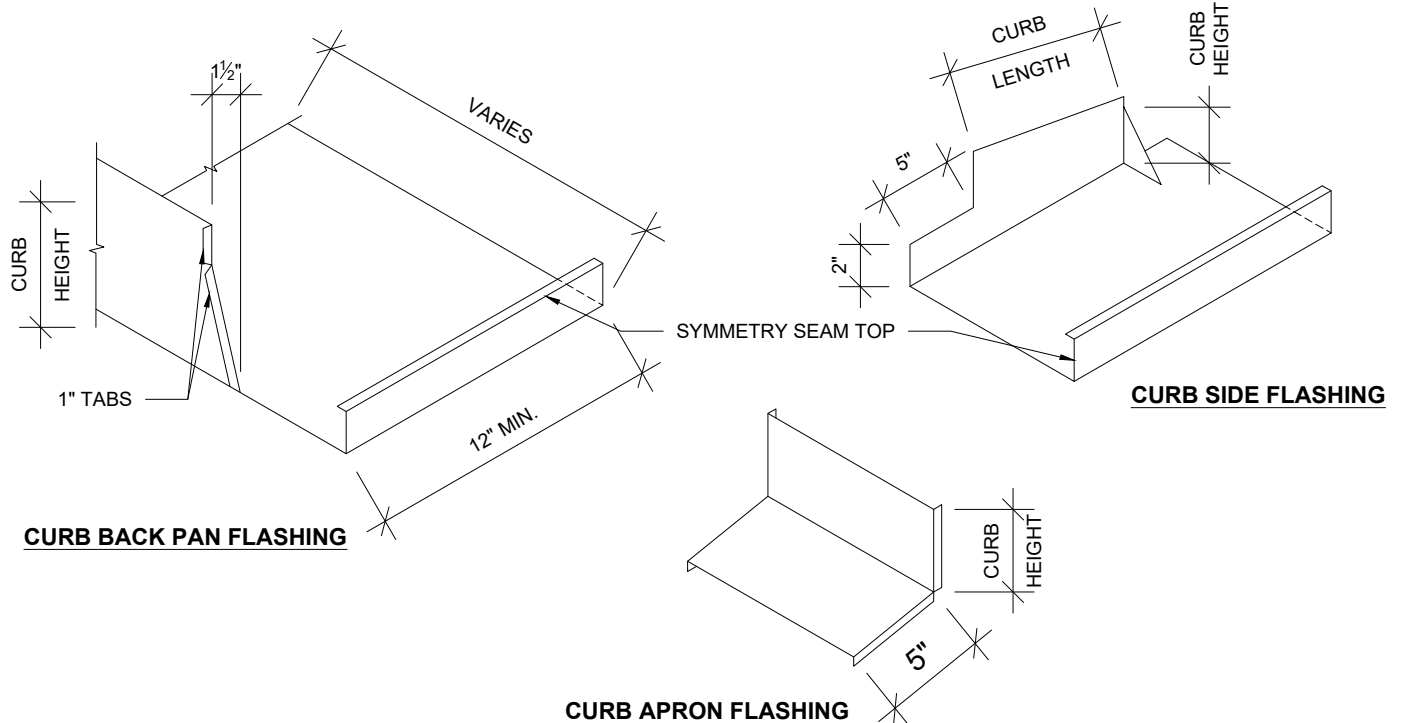

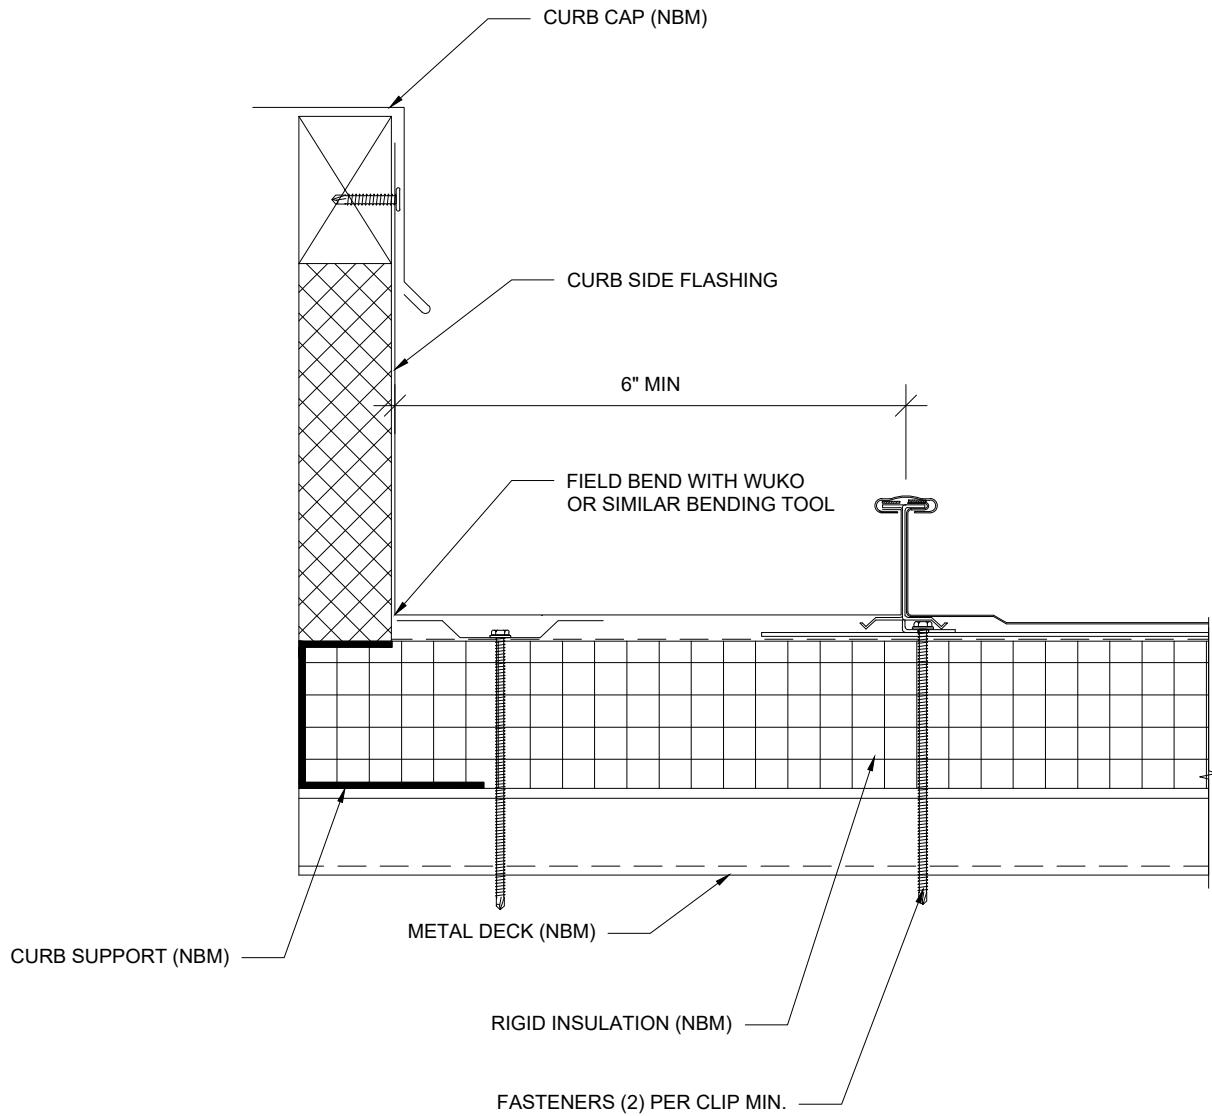


CURB - SECTION A

*NBM = Not By Morin

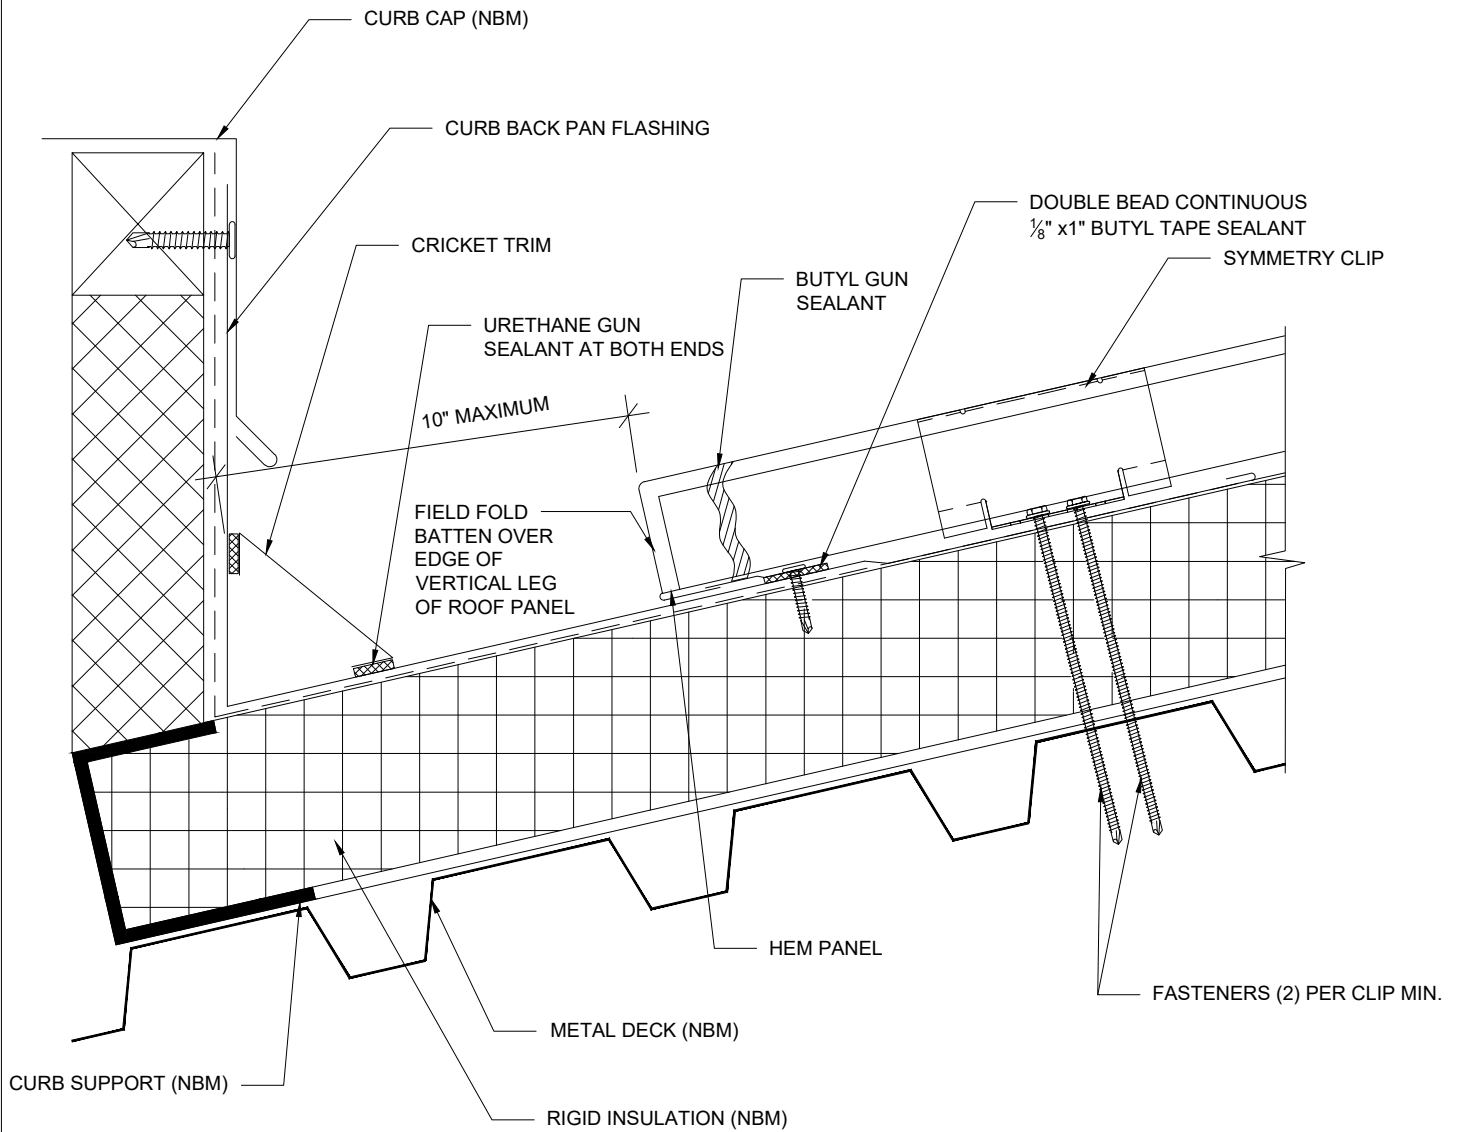

CURB - SECTION B


*NBM = Not By Morin

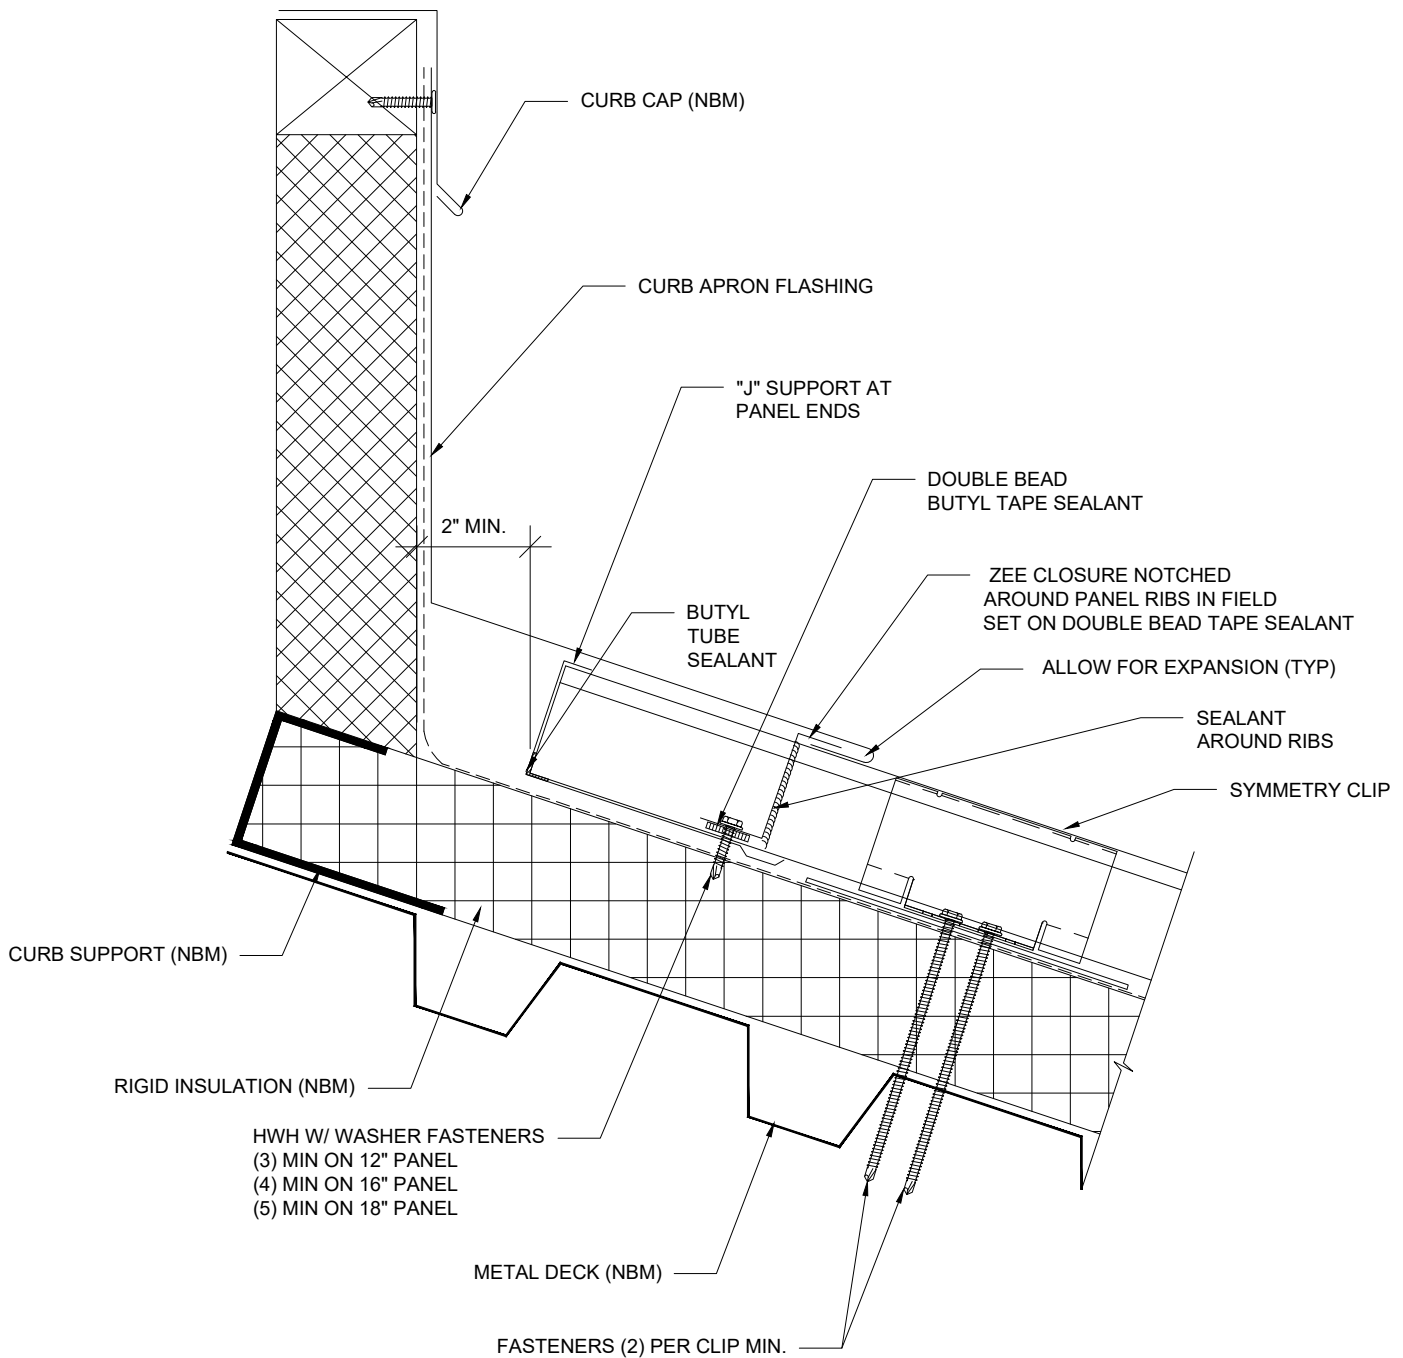


CURB - SECTION C



*NBM = Not By Morin

PIPE PENETRATION DETAIL

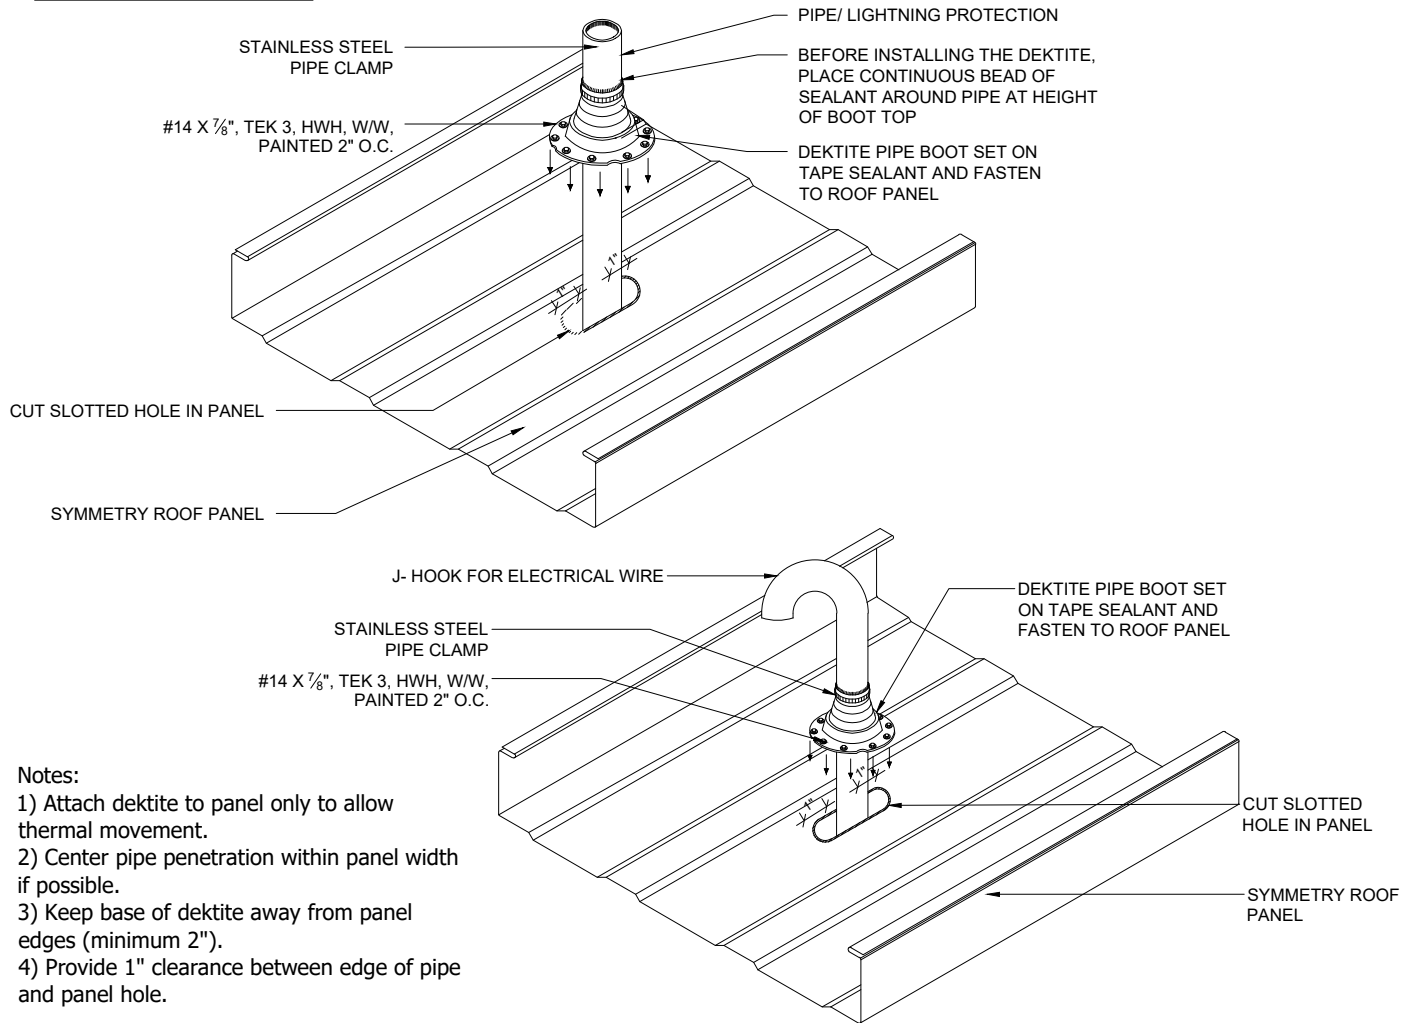


FINAL ASSEMBLY

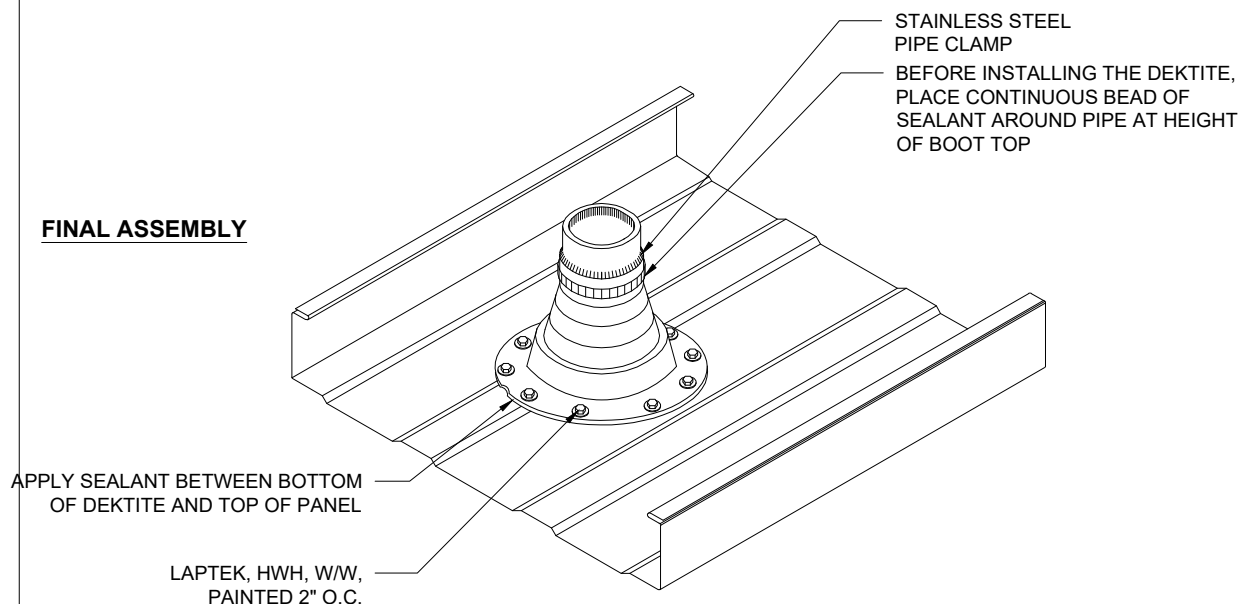


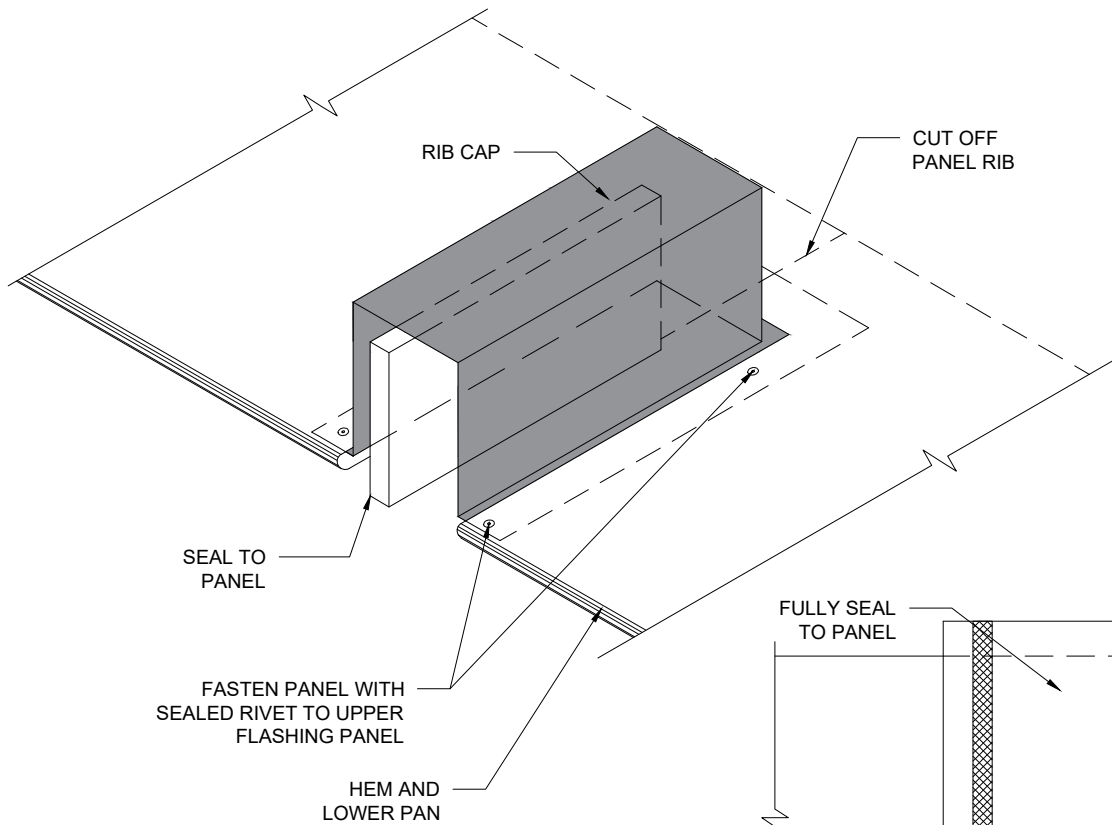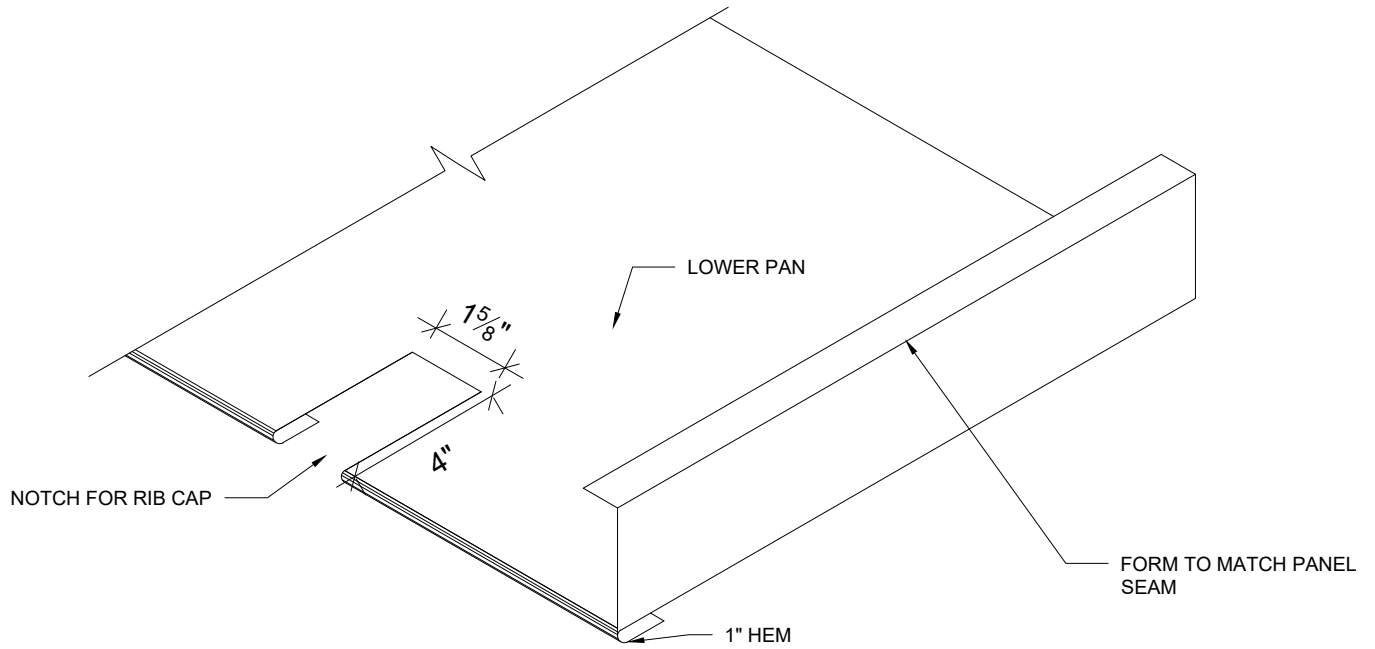



RIB CAP DETAIL

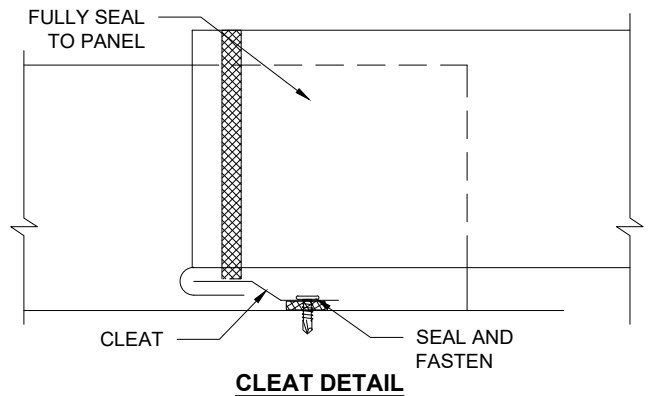

CLEAT DETAIL

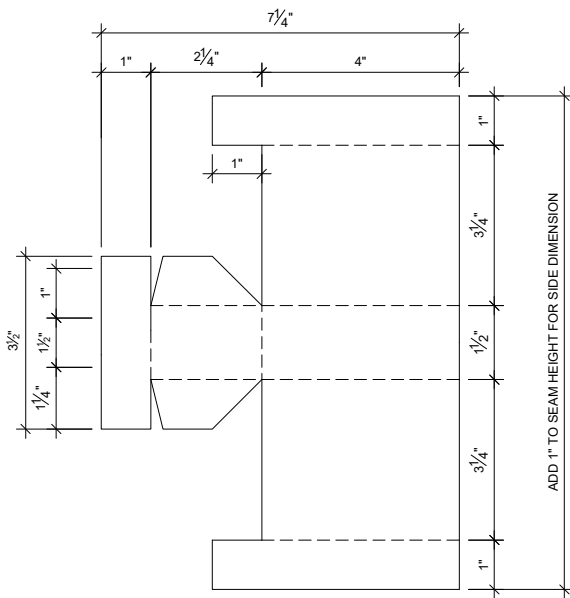


PATTERN FOR RIB CAP

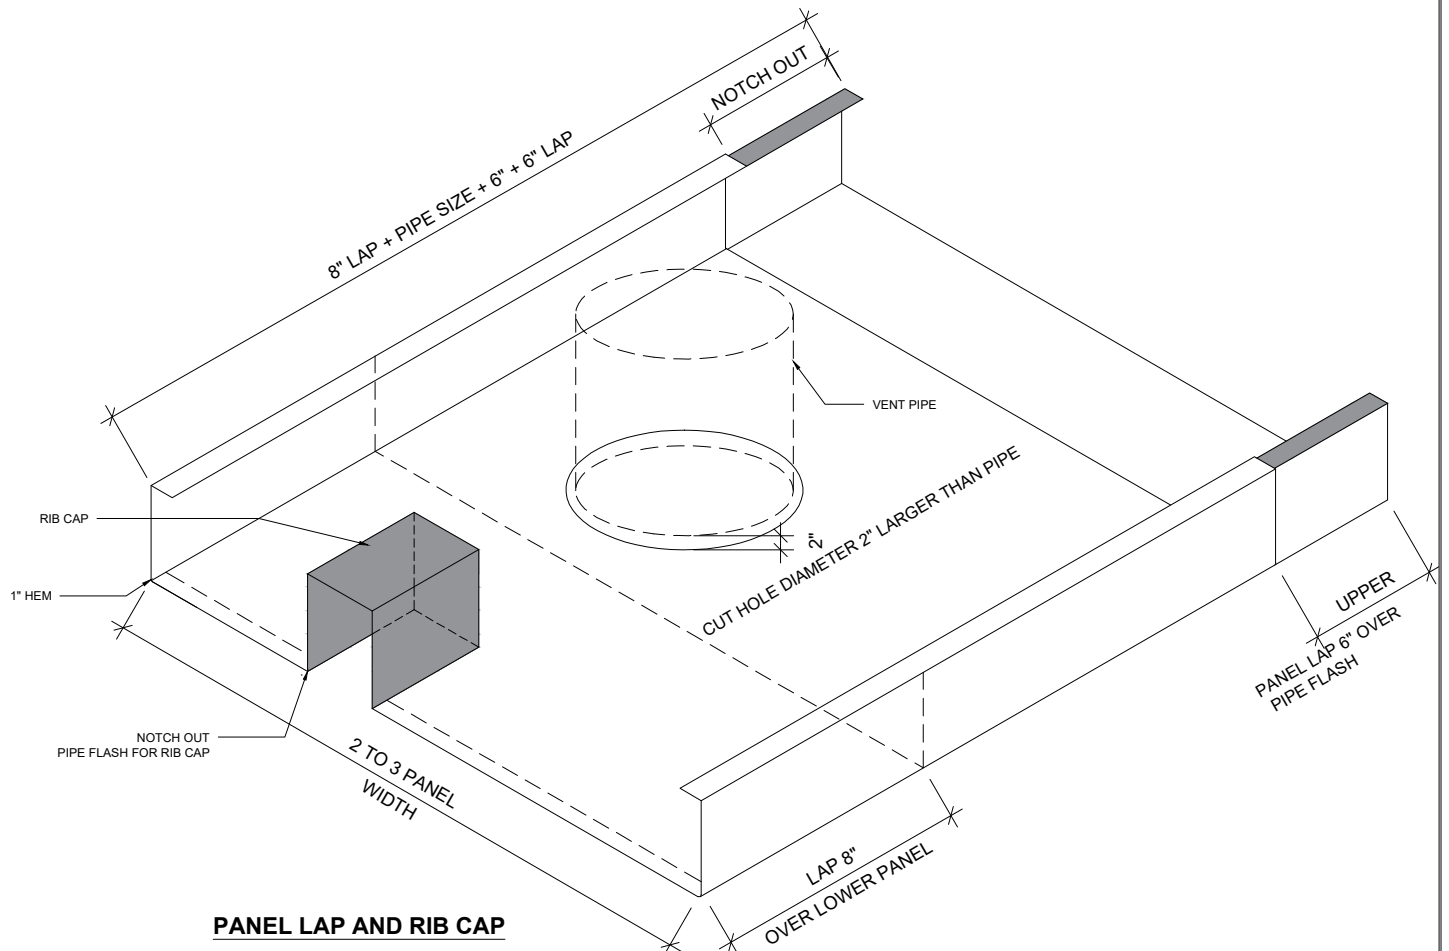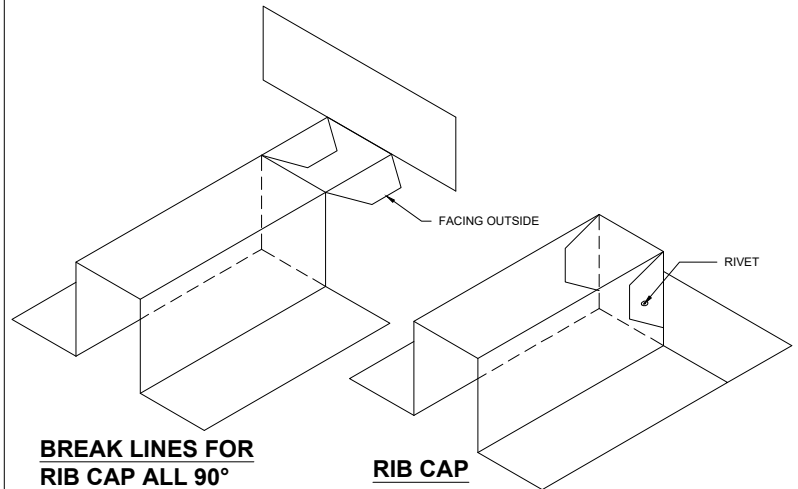


PANEL LAP AND RIB CAP

Z PANEL END & CLOSURE DETAIL (RIDGE & HIP)

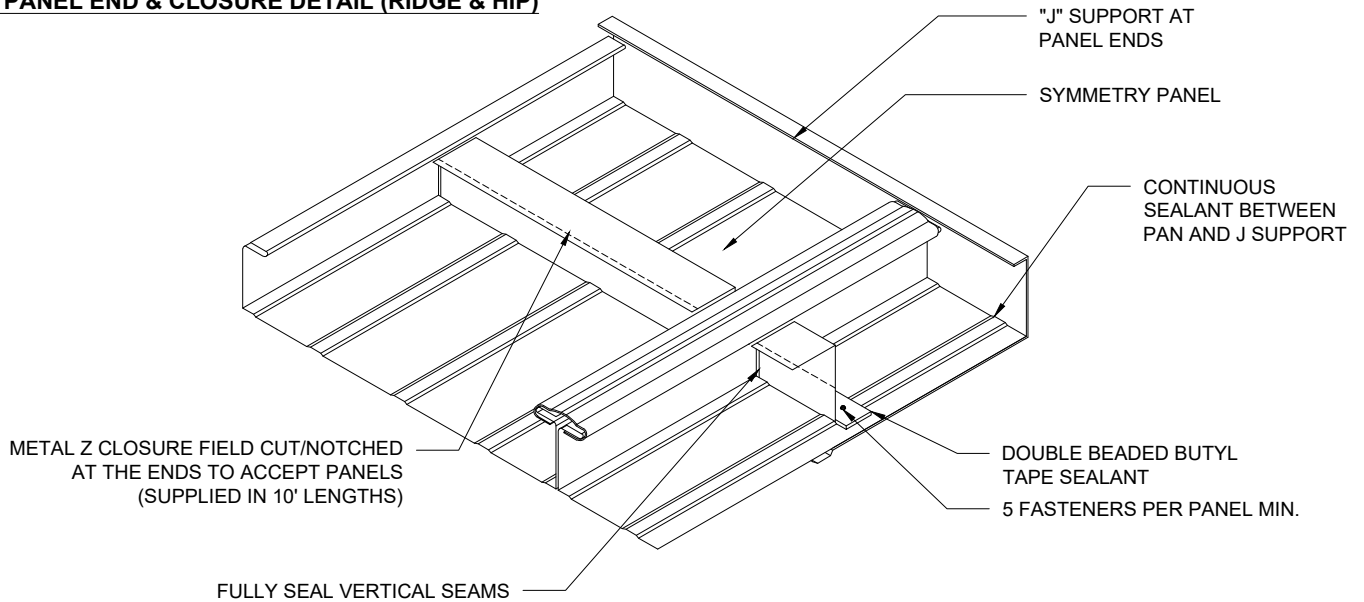

Note:

- Use larger J- support for panel with clip relief, ribs, and striated.

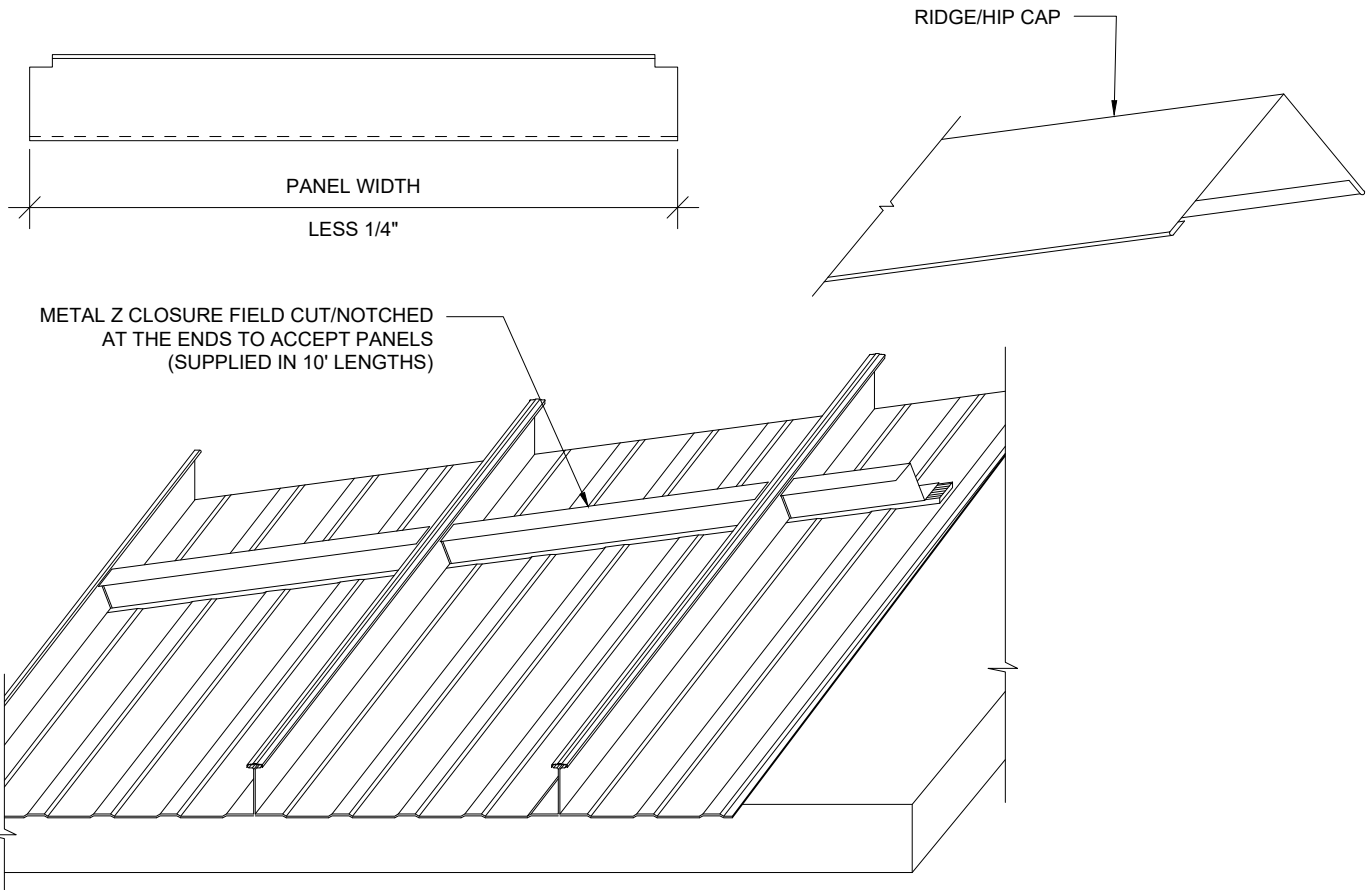


(4) #44 - 1/8" STAINLESS STEEL RIVETS
WITH STAINLESS STEEL MANDREL
PANEL TO CLIP - COVER WITH BATTEN

SYMMETRY CLIP

BEARING PLATE
22 GA MINIMUM

SYMMETRY PANEL

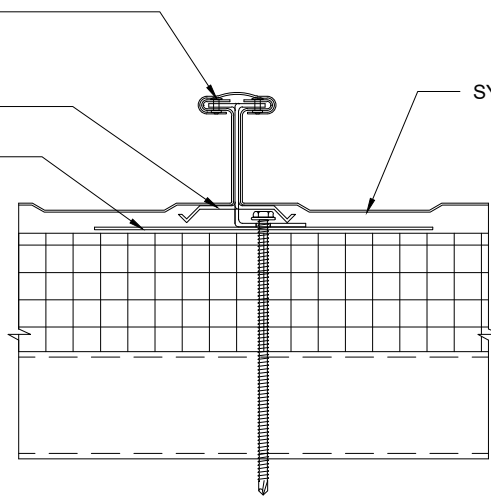


(4) #44 - 1/8" STAINLESS STEEL RIVETS
WITH STAINLESS STEEL MANDREL
PANEL TO CLIP - COVER WITH BATTEN

SYMMETRY CLIP

BEARING PLATE
22 GA. MINIMUM


SYMMETRY PANEL

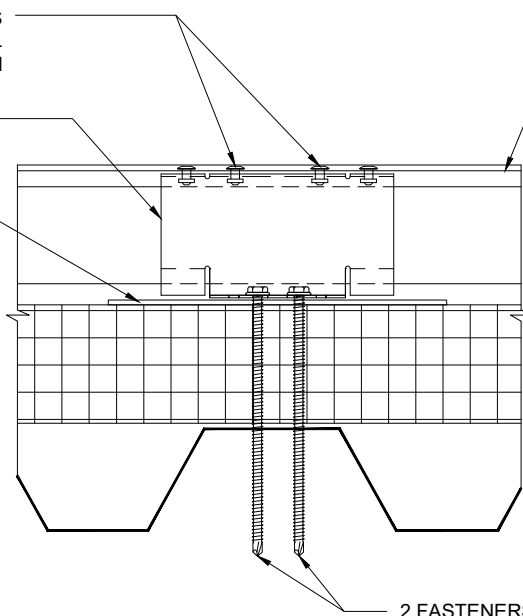



2 FASTENERS MINIMUM

The roofing system as a floating system must have some means by which to attach it to the structure & yet not restrict its floating ability to handle the thermal expansion/ contraction found in the system. Because of the above reasons, Morin's Symmetry panels must be positively attached at one or more purlins along a line perpendicular to the panel's vertical rib. The ideal location of what the panel industry calls a "fix point line" is at the center of the panel run. By having the fixed point at this location, the amount of travel of the panel over the clip is held to a minimum. Where you have very long panel runs, it may be required to have more than one row of fixed points. When this is necessary, then the rows should be on adjacent rows of purlins. Refer to fixed point details in this manual for methods of installation and recommended locations. Acceptable alternate locations for these fixed point are at either the ridge or eave of the roof. Exceptions to all of the recommended fixed point locations may be needed because of various design restrictions such as large roof penetrations, restraints at the ends of a panel run, an irregular shaped roof surface or at roof hip and valley locations. Panel lengths over 50' require fixed point at mid-run.



FIXED CENTER CLIP DETAIL

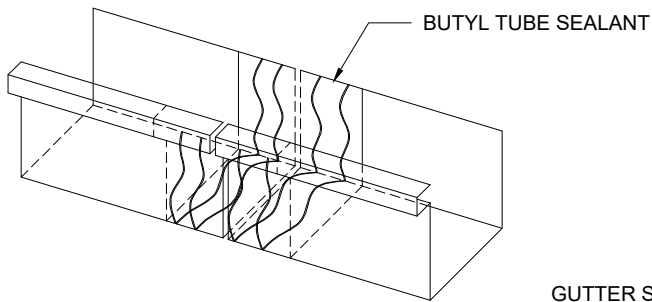



GUTTER SPLICE PLATE

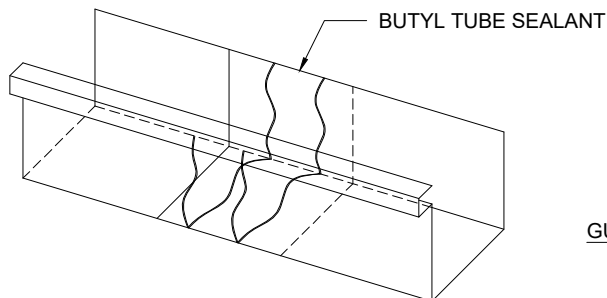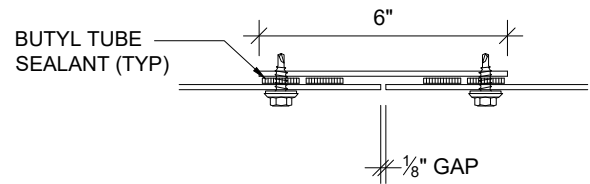

GUTTER LAP DETAIL

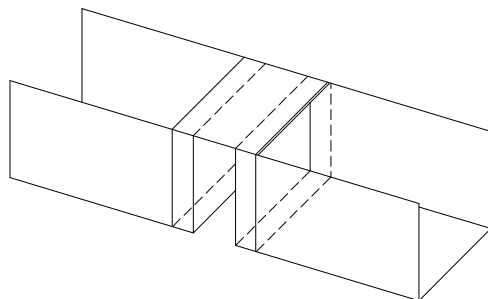


GUTTER EXPANSION DETAIL

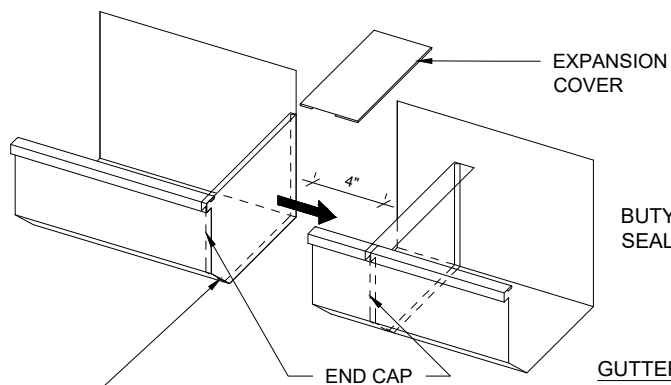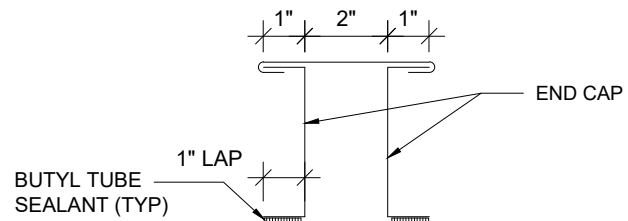


GUTTER EXPANSION DETAIL

SLIDE GUTTER IN 2 1/2" INTO PREVIOUS GUTTER AND ALLOW MOVEMENT. DO NOT ATTACH TOGETHER.



GUTTER FLASHING CONDITIONS

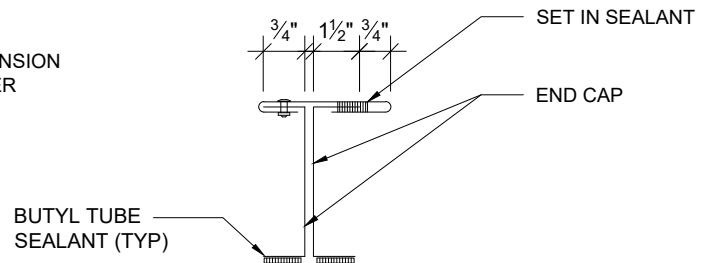



Note: Use expansion joint every 40'

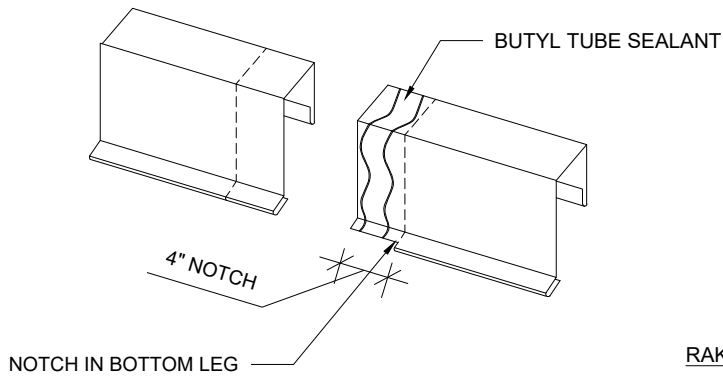


RAKE LAP DETAIL

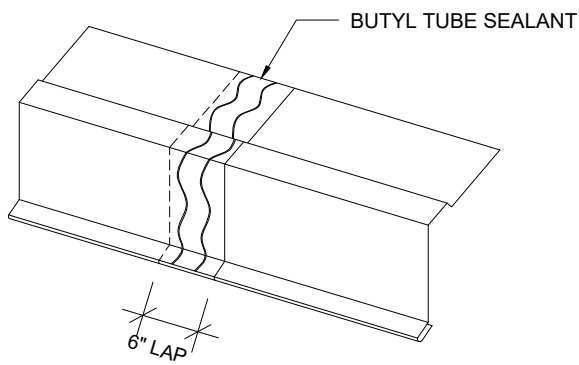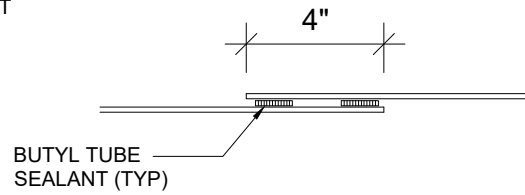

EAVE INSIDE SPLICE PLATE

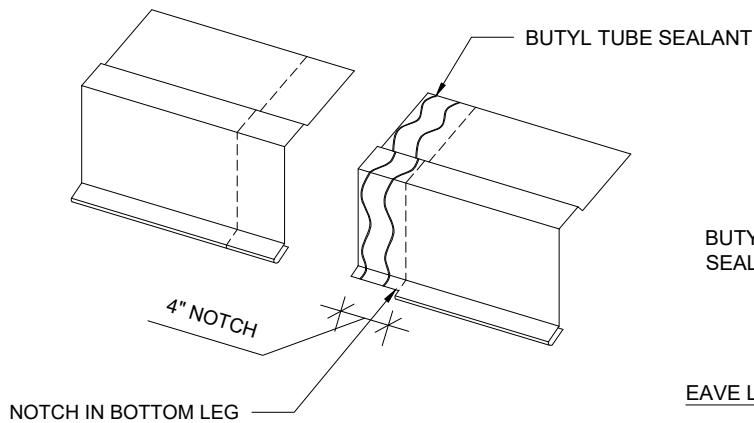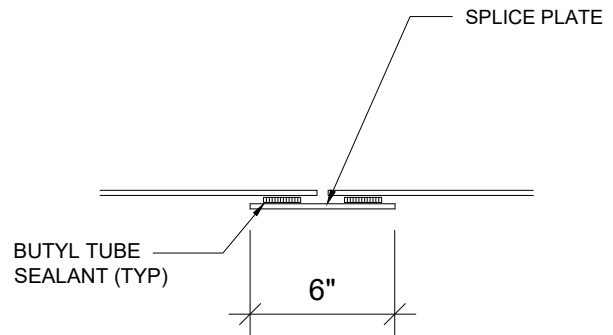


EAVE LAP DETAIL

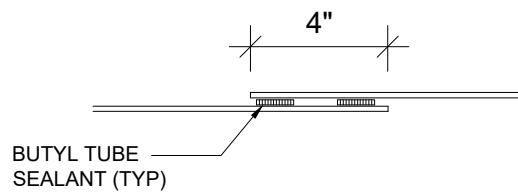


Note: Shingle laps in direction of water flow.


RAKE AND EAVE FLASHING CONDITION

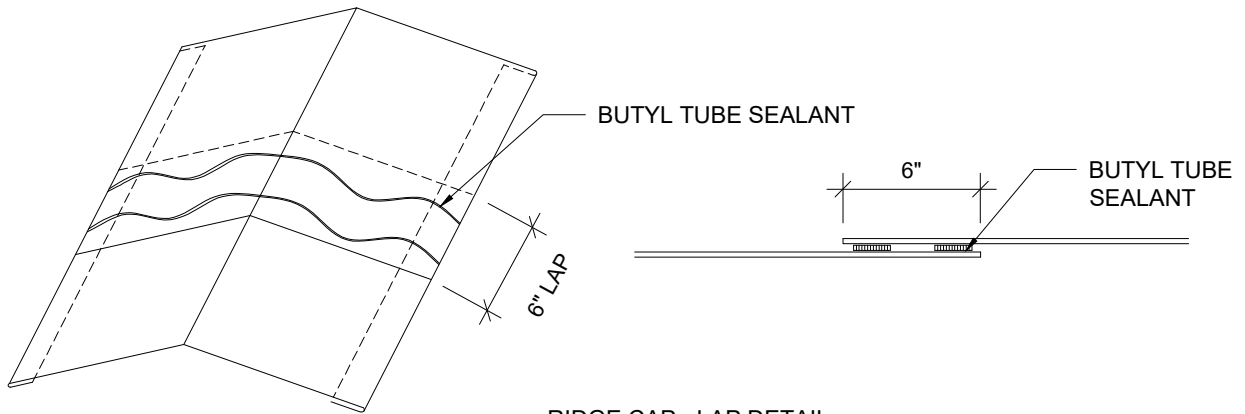

RIDGE CAP - LAP DETAIL

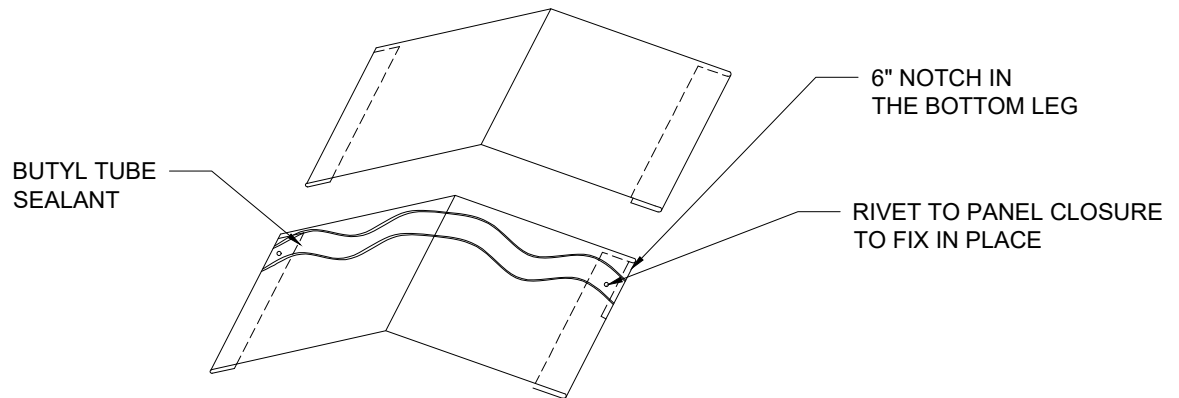




ASSEMBLY OF RIDGE CAP DETAIL ABOVE

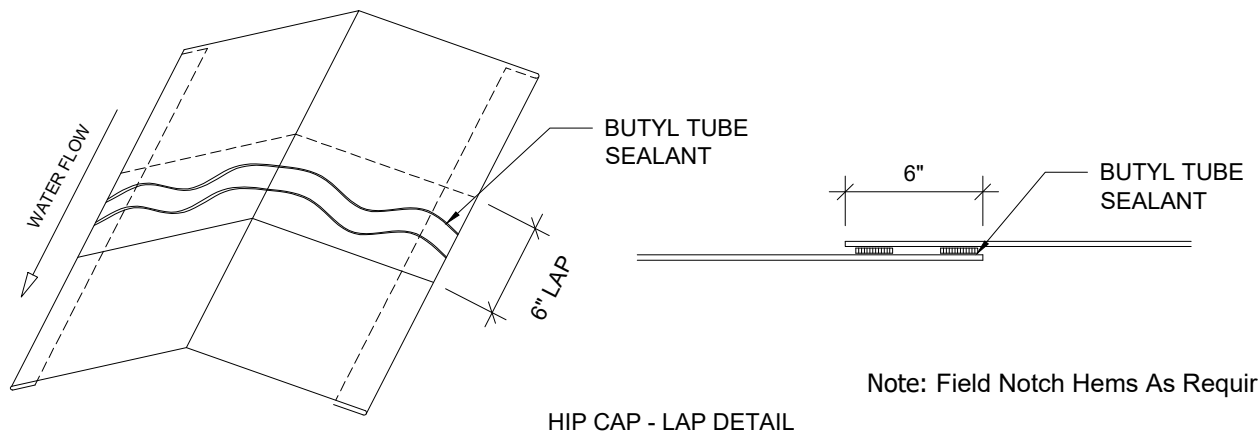

HIP CAP - LAP DETAIL

Note: Field Notch Hems As Required.


RIDGE AND HIP FLASHING CONDITION

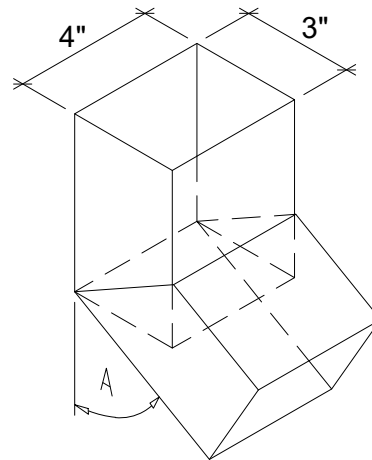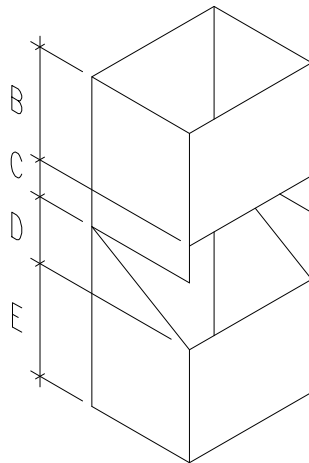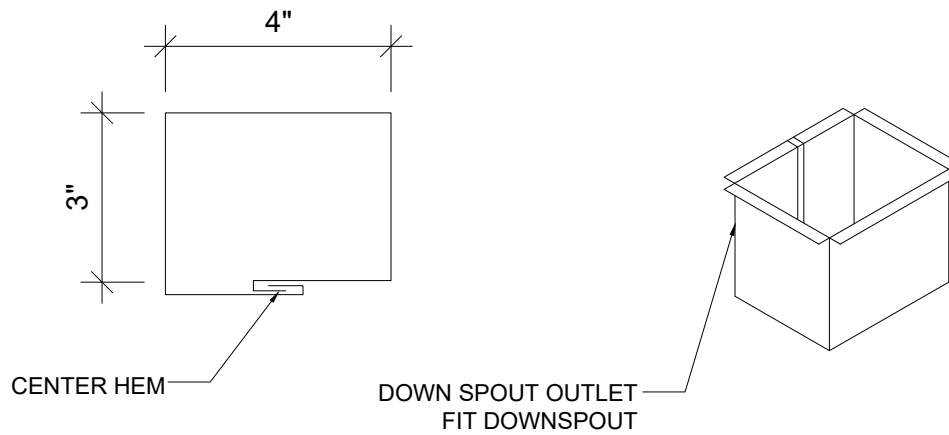

TYPICAL 4" X 3" ELBOW
DIMENSIONS WITH 6"
RETURN

A	B	C	D	E	
90.00°	3.2500	2.7500	3.0625	2.9375	= 12.0000
60.00°	4.5625	1.4375	1.8125	4.1875	= 12.0000
45.00°	5.1250	0.875	1.3125	4.6875	= 12.0000
30.00°	5.6875	0.3125	0.9375	5.0625	= 12.0000


DOWNSPOUT

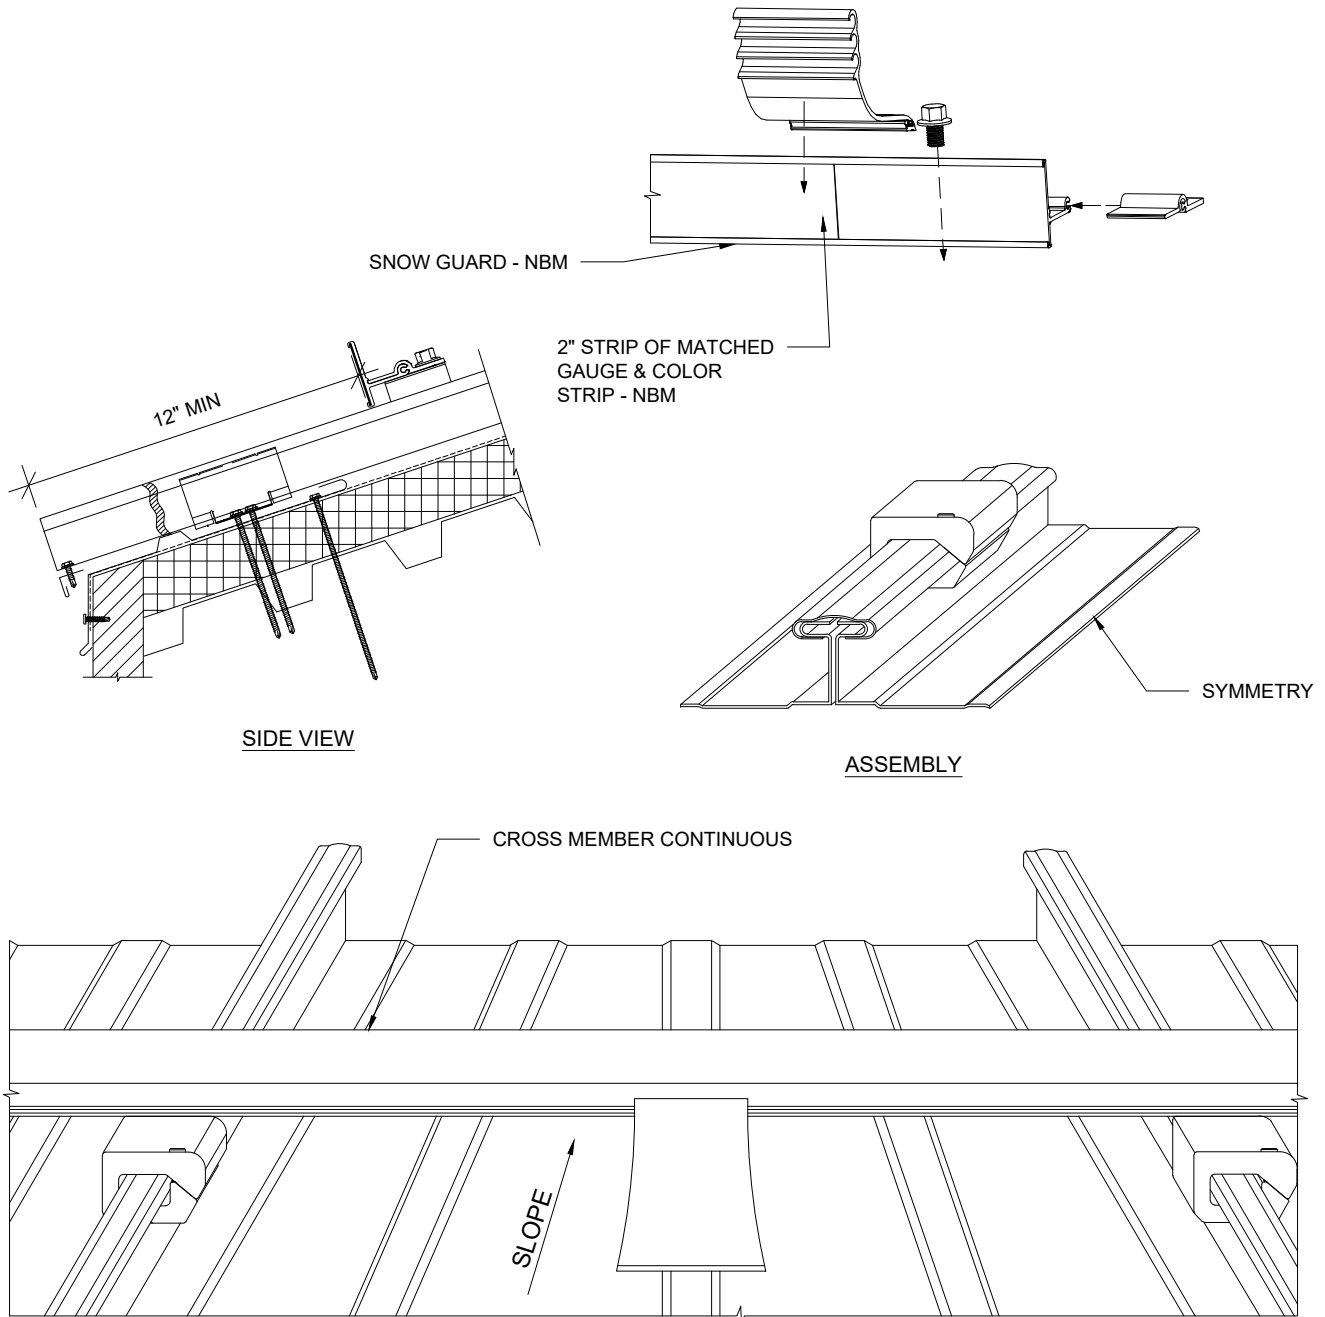


Note:

- 1) Mount rib clamp directly to top of panel rib with set screw.
- 2) Install 2" color strip from panel flatstock into snow guard.
- 3) Connect clip to snow guard, one per panel, centered.
- 4) Contact Snow Guard supplier for assembly.

SNOW GUARD

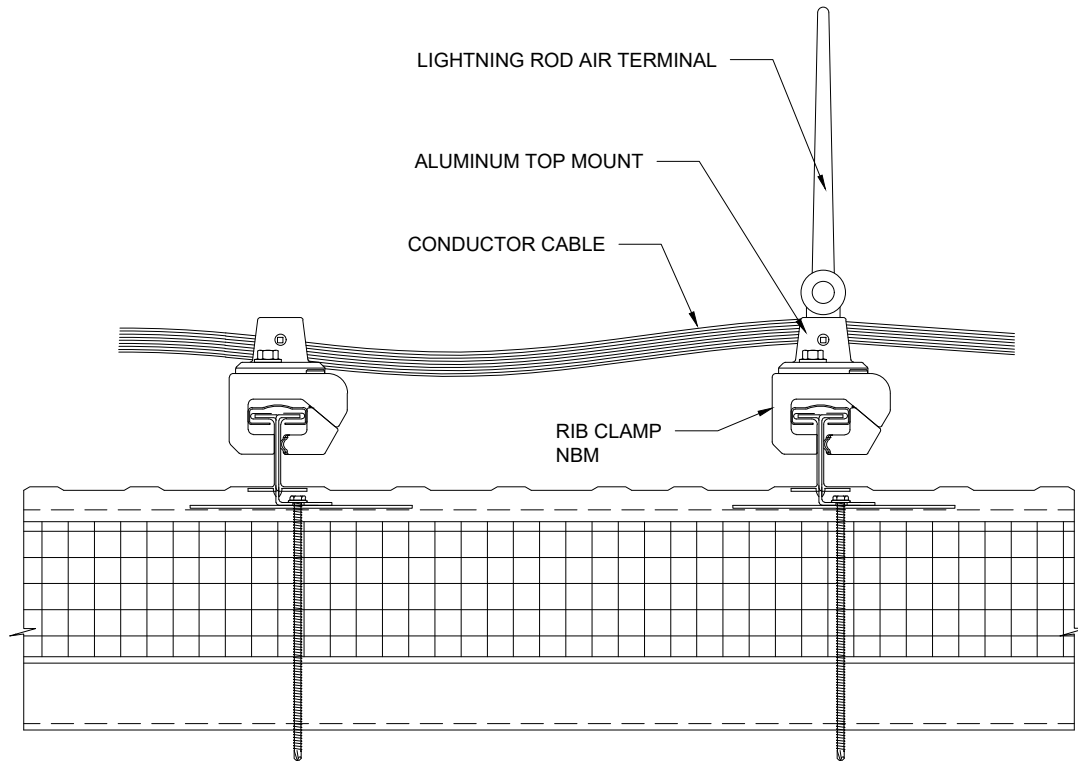

SECTION CUT VIEW

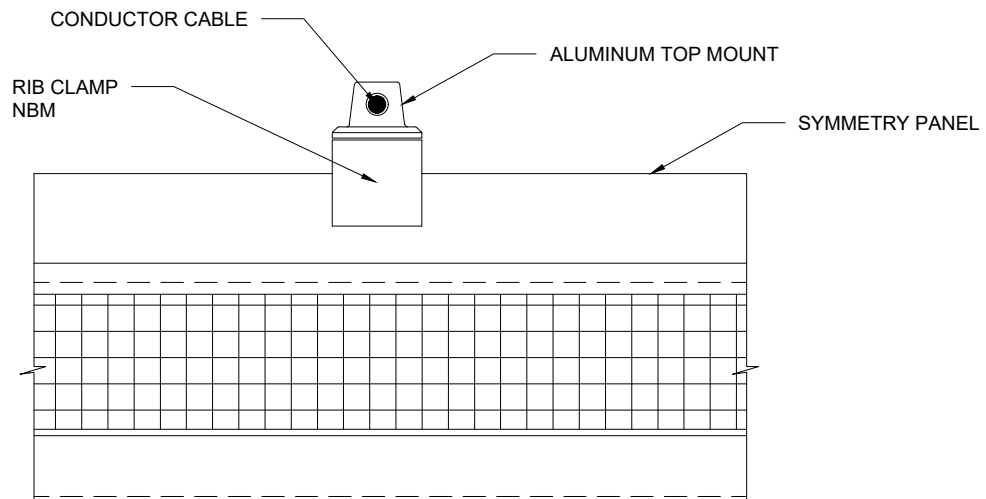

SIDE VIEW

Note:

- Coat cables and clamp with bituminous.
- Coating as necessary to prevent galvanic reaction.
- Contact Lightning protection supplier for assembly.
- Do not use copper cables.
- Do not use glue on cable clips.

LIGHTNING PROTECTION

Contact Details

USA

HQ / East

685 Middle Street | Bristol
CT 06010

T: 1-800-640-9501

West

10707 Commerce Way | Fontana
CA 92337

T: 1-800-700-6140

South

1975 Eidson Drive | DeLand
FL 32724

T: 1-800-640-9501

Central

15000 Panatela Parkway | Little Rock
AR 72206

T: 1-800-640-9501

www.morincorp.com



For the latest product information please visit www.morincorp.com

Care has been taken to ensure that the contents of this publication are accurate, but Morin Corporation does not accept responsibility for errors or for information that is found to be misleading. Suggestions for, or description of, the end use or application of products or methods of working are for information only and Morin Corporation accepts no liability in respect thereof.

Morin[®]
By Kingspan